



GASTROPARTS

Capic

[EN] Cooking

[DE] Kochtechnik

[ES] Cocción

[FR] Cuisson

[IT] Cottura

[PL] Obróbka termiczna

[RU] Термическая обработка

✉ gastroparts@gastroparts.com

☎ tel. +48 56 657 00 66

📘 fb.com/gastroparts.global

GASTROPARTS.COM



Open tops (electric)

 


Item	Order	Description	Model	OEM
1	490014	1500W/230V, Ø180mm	EK36-18/22	63889
1	490018	2000W/230V, Ø220mm		63890
2	490065	2000W/230V, 220x220mm	EK36-22/22	63887
2	490066	2600W/230V, 220x220xmm		63886
3	490054	2500W/230V, 300x300mm	EK38-30/30	63885
3	490074	4000W/400V, 300x300mm		63884




Item	Order	Description	Model	OEM
1	380015	energy regulator	SGP36/53,	63867
2	110189	knob	SGP70/102,	63919
3	110551	symbol	BP36/53	

Chargrills (electric)

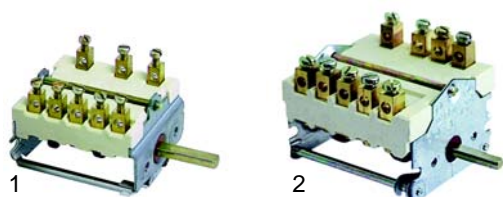

Item	Order	Description	Model	OEM
1	300025	7-position switch, 16A	universal	63873
2	300106	7-position switch, 32A	EK38-30/30	63872

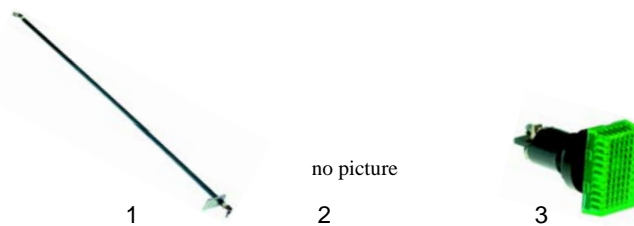 

Item	Order	Description	Model	OEM
1	418261	330W/230V		63854
2	418264	700W/230V	RB38,	63855
3	359861	signal lamp	RB53	63922




Item	Order	Description	Model	OEM
1	110189	knob		63907
2	110552	symbol		
3	359861	signal lamp/green		63922




Item	Order	Description	Model	OEM
1	380015	energy regulator		63867
2	110189	knob	RB38,	63919
3	110551	symbol	RB53	

 Fry tops/bratt pans (electric)

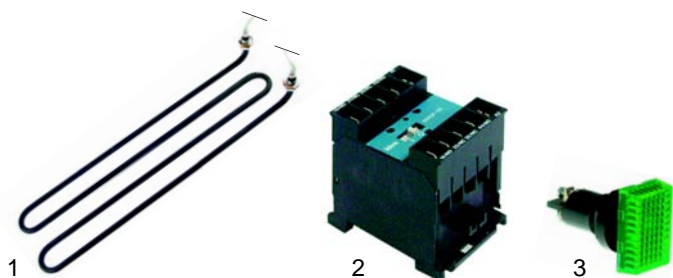

Item	Order	Description	Model	OEM
1	418268	2000W/230V	SGP36/53,	63853
2	380416	contactor	SGP70/102,	63906
3	359861	signal lamp/green	BP36/53	63922

 Bains-marie (electric)

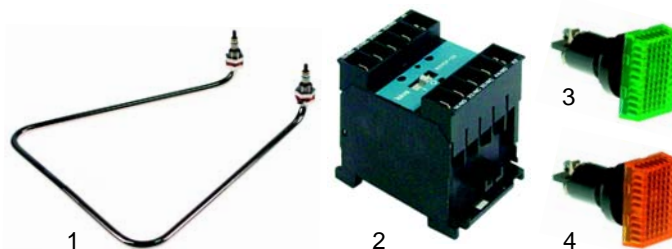

Item	Order	Description	Model	OEM
1	418250	1500W/230V	BM36,	63857
2	380416	contactor	BM53,	63906
3	359861	signal lamp/green	BM70,	63922
4	359860	signal lamp/yellow	BM102	63923


Thermal bridges (electrical)



Item	Order	Description	Model	OEM
1	375406	thermostat	BM36,	63862
2	110189	knob	BM53,	63917
3	111878	symbol	BM70, BM102	



Item	Order	Description	Model	OEM
1	415102	400W/230V	WB	63851
2	301003	rocker switch, 2-pole		63871

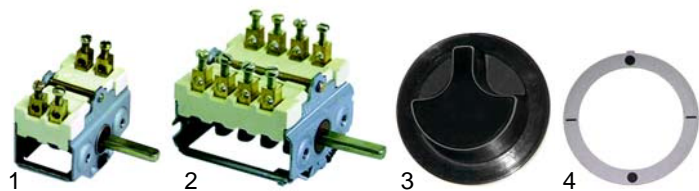 


Item	Order	Description	Model	OEM
1	300020	switch (0 - I), 2-pole	BM36, BM53, BM70, BM102	63870
2	300021	switch (0 - I), 4-pole		63869
3	110189	knob		63920
4	110542	symbol		



Item	Order	Description	Model	OEM
1	380015	energy regulator	WB	63867
2	110189	knob		63919
3	110551	symbol		

Chip scuttles (electric)

 Hot cupboards (electric)

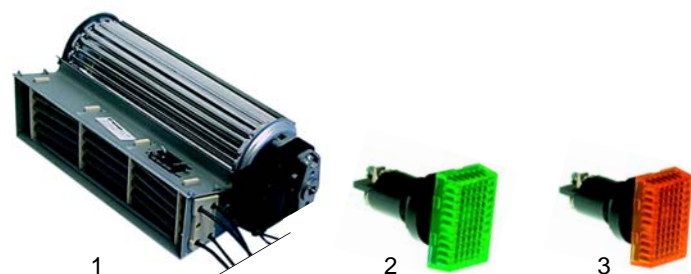

Item	Order	Description	Model	OEM
1	601027	fan with heating, 2x1000W/230V	309	63905
2	359861	signal lamp/green		63922
3	359860	signal lamp/yellow		63923



Item	Order	Description	Model	OEM
1	415104	1000W/230V	SB	63850
2	359861	signal lamp/green		63922




Item	Order	Description	Model	OEM
1	375406	thermostat, 110 C	309	63862
2	110189	knob		63917
3	111878	symbol		




Item	Order	Description	Model	OEM
1	380015	energy regulator	SB	63867
2	110189	knob		63919
3	110551	symbol		

 Fryers (electric)

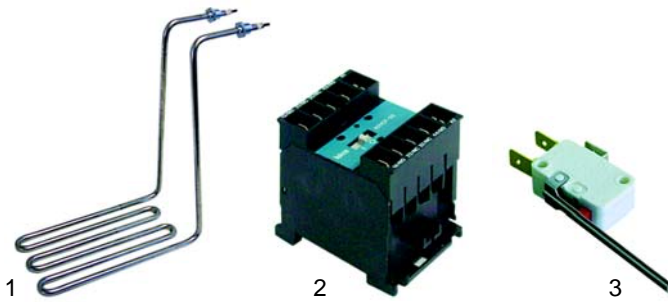

Item	Order	Description	Model	OEM
1	415740	3000W/230 V		63852
2	380416	contactor	universal	63906
3	345107	micro switch		63875

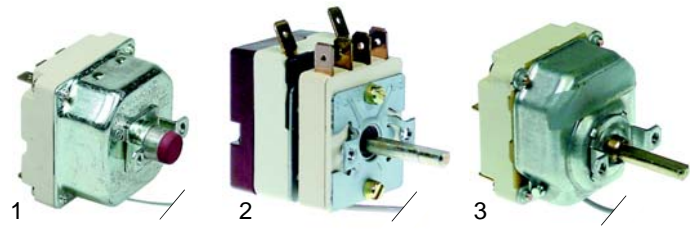 

Item	Order	Description	Model	OEM
1	375700	safety thermostat, 3-pole		63860, 63864
2	375701	thermostat, 1-pole	universal	63863
3	375713	thermostat, 3-pole		63859



Item	Order	Description	Model	OEM
1	300020	switch (0 - I), 16A, 2-pole		63870
2	300021	switch (0 - I), 16A, 4-pole	universal	63869
3	300102	switch (0 - I), 32A, 4-pole		63868




Item	Order	Description	Model	OEM
1	110189	knob		-
2	110542	symbol (0 - I)	universal	-
3	110536	symbol		-




Pos.	Order	Description	Model	OEM
1	970442	fryer basket, 165x280x130mm	universal	63877

Single devices

 Stockpot stoves (electrical)

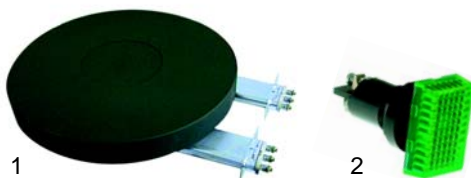

Item	Order	Description	Model	OEM
1	490103	5000W/400 V		63883
2	359861	signal lamp/green	3111E	63922

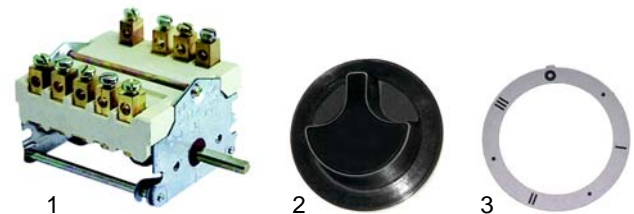 

Item	Order	Description	Model	OEM
1	300106	7-position switch, 32A		63872
2	110189	knob	3111E	63907
3	110552	symbol		



GASTROPARTS.COM



© 2020 Gastroparts Sp. J. All rights reserved.