



GASTROPARTS

Dihr

[EN] Cooking

[DE] Kochtechnik

[ES] Cocción

[FR] Cuisson

[IT] Cottura

[PL] Obróbka termiczna

[RU] Термическая обработка

✉ gastroparts@gastroparts.com

 
☎ tel. +48 56 657 00 66

📘 fb.com/gastroparts.global


GASTROPARTS.COM



Toasters

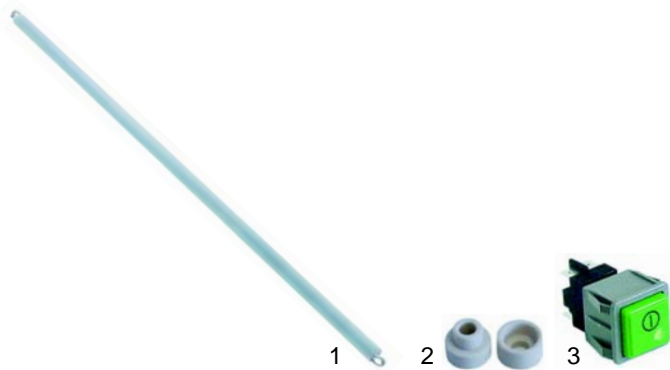


Item	Order	Description	Model	OEM
1	416174	450W/75V		8075
2	693055	insulating set	F6, F12	8026
3	345975	switch		15849

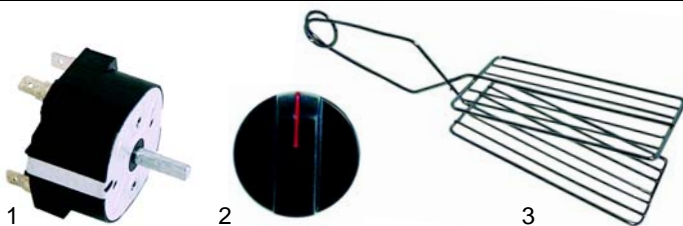 


Item	Order	Description	Model	OEM
1	350032	timer		8030
2	110526	knob		8029
3	690010	pliers		8008

 Pancake devices

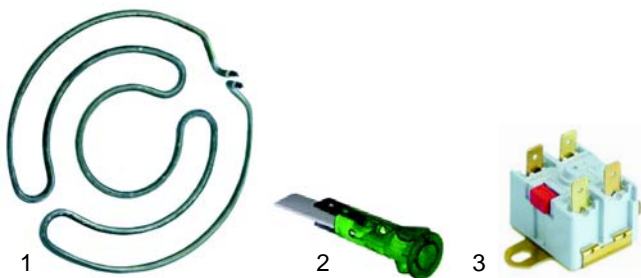

Item	Order	Description	Model	OEM
1	416636	2000W/230V		6006
2	359139	signal lamp	X1, X2	10711/B
3	390187	safety thermostat		6011

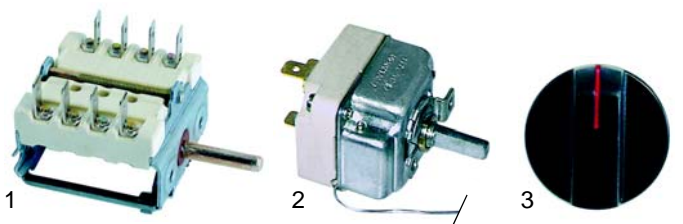 


Item	Order	Description	Model	OEM
1	300124	switch		9564
2	375002	thermostat		9010
3	110526	knob		8029

Contact grills




Item	Order	Description	Model	OEM
1	416038	800W/230V (upper)		906/A
1	416039	900W/230V (lower)	XAR, XAL, XBM, XBR, XBL	909/A
2	416197	1000W/230V (upper)		9716
2	416198	1200W/230V (lower)		9717
3	416176	1000W/230V (upper)	XAR2, XAL2	9561
3	416177	1200W/230V (lower)		9562

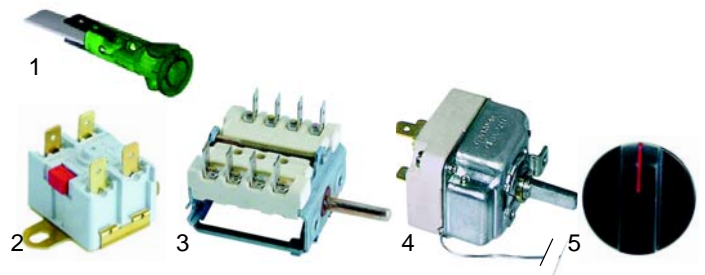 

Item	Order	Description	Model	OEM
1	359139	signal lamp		10711/B
2	390187	safety thermostat	XAR, XAL, XBM, XBR, XBL, XAR2, XAL2	6011
3	300124	switch		9564
4	375002	thermostat		9010
5	110526	knob		8029

 Salamander

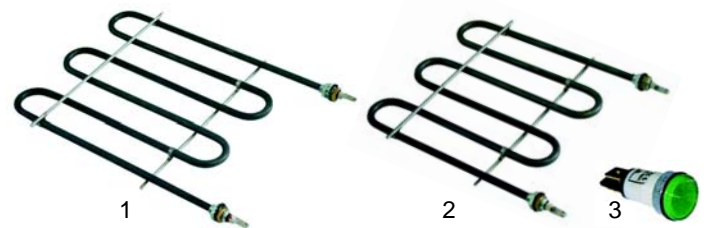

Item	Order	Description	Model	OEM
1	416646	2000W/230V	S1	9113
2	416647	2000W/230V	S2	9153
3	359027	signal lamp	S1, S2	9108



Item	Order	Description	Model	OEM
1	380015	energy regulator		9107
2	110078	knob	S1, S2	9104
3	110565	symbol		9106

GASTROPARTS.COM



© 2020 Gastroparts Sp. J. All rights reserved.