



**GASTROPARTS**

Universal Catalogue › Electric Components ›

# [EN] **Electronics**

[DE] Elektronik

[ES] Electrónicas

[FR] Modules électroniques

[IT] Elettronica

[PL] Elektronika

[RU] Электроника

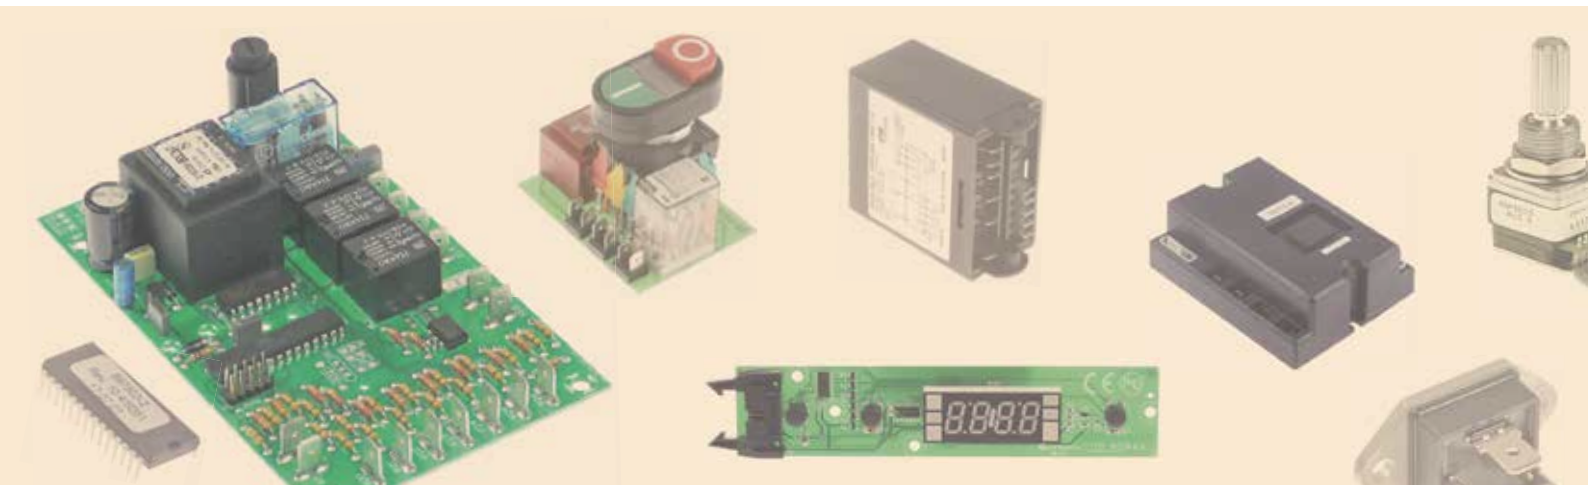 
✉ [gastroparts@gastroparts.com](mailto:gastroparts@gastroparts.com)

☎ tel. +48 56 657 00 66

📘 [fb.com/gastroparts.global](https://fb.com/gastroparts.global)

**GASTROPARTS.COM**





# electronics

# 18

EPROMS.	580
electronics accessories.	581
frequency converters.	581
PCBs.	581
Triacs.	617
central units.	617
dosing electronics.	622



## electronics

## EPROMS

## Colged

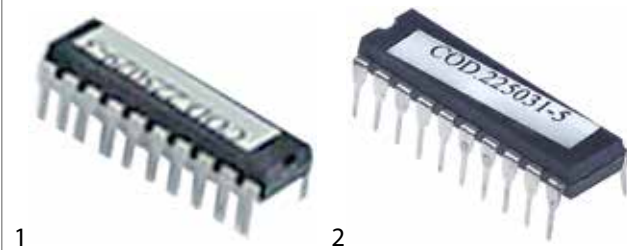 


fig.	Part No.	description	Ref. No.
1	400900	EPROM CODE	225029
2	401557	EPROM for dishwasher CODE 225028-4	225028-4
2	403247	EPROM for dishwasher CODE 225031-5	225031
2	403245	EPROM for dishwasher CODE 225032-2	225032
2	403248	EPROM for dishwasher CODE 225033-1	225033
2	403249	EPROM for dishwasher CODE 225044-2	225044
2	403246	EPROM for dishwasher CODE 81006-5	81006
2	403244	EPROM for dishwasher CODE 81008	81008
2	403241	EPROM type U61E for dishwasher CODE 81001-3	81001

## Cookmax



fig.	Part No.	description	Ref. No.
1	401559	EPROM CODE	81021

## Elettrobar

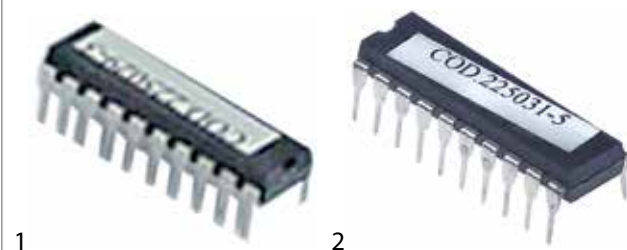 


fig.	Part No.	description	Ref. No.
1	400900	EPROM CODE	225029
2	401558	EPROM CODE	81000
2	401559	EPROM CODE	81021
2	401917	EPROM CODE 225034	225034
2	401557	EPROM for dishwasher CODE 225028-4	225028-4
2	403247	EPROM for dishwasher CODE 225031-5	225031
2	403245	EPROM for dishwasher CODE 225032-2	225032
2	403248	EPROM for dishwasher CODE 225033-1	225033
2	403249	EPROM for dishwasher CODE 225044-2	225044
2	403246	EPROM for dishwasher CODE 81006-5	81006
2	403244	EPROM for dishwasher CODE 81008	81008
2	403241	EPROM type U61E for dishwasher CODE 81001-3	81001

## Hobart

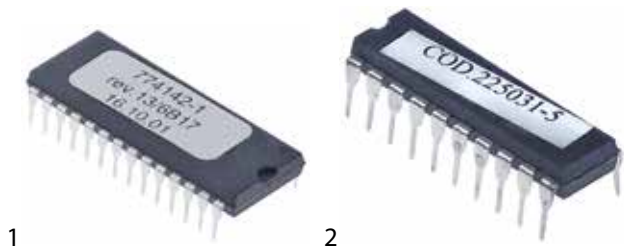 


fig.	Part No.	description	Ref. No.
1	403217	EPROM type Rev 10.4/5D51 for dishwasher	897503-2
1	403218	EPROM type Rev 13/6B17 for dishwasher	774142-1V
1	403216	EPROM type Rev 7.06/403A for dishwasher	897503-1
2	403241	EPROM type U61E for dishwasher CODE 81001-3	139321-688

## MBM-Italia



fig.	Part No.	description	Ref. No.
1	401917	EPROM CODE 225034	225034

## Meiko

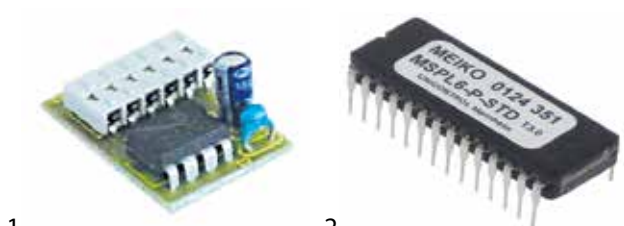 


fig.	Part No.	description	Ref. No.
1	400825	EPROM type CODE 9534803	9534803
2	400823	EPROM type MSPL6-P-STD CODE 124351	0124351

## Rancilio



fig.	Part No.	description	Ref. No.
1	400900	EPROM CODE	65225029



Rational



1

fig.	Part No.	description	Ref. No.
1	403018	EPROM type CPC CODE XS5.06S	3040.0311

electronics accessories

Fagor



1

fig.	Part No.	description	Ref. No.
1	401792	plug case 2-pole	12018408

frequency converters

Retigo

accessories




1

fig.	Part No.	Ref. No.
1	403356	EA16-0041

PCBs

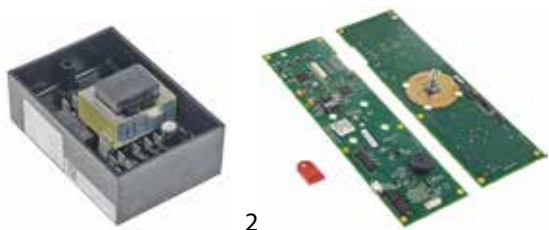 
ACP



1

2


fig.	Part No.	description	Ref. No.
1	403339	control PCB microwave 50/60Hz connection male faston 6,3mm primary 230V	59002133
2	403342	control PCB microwave AXP5201/5203	59004082

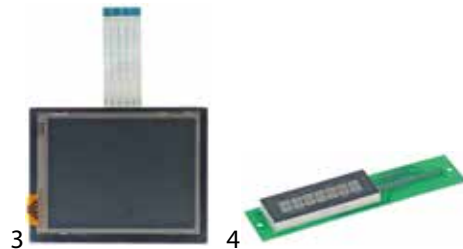 

3

4


fig.	Part No.	description	Ref. No.
3	403343	display microwave	12002877
4	403344	display microwave	59004085

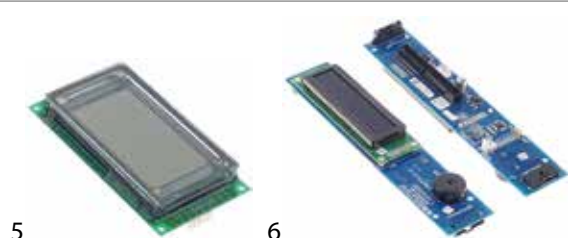 

5

6


fig.	Part No.	description	Ref. No.
5	403347	display microwave	59114156
6	403409	display PCB microwave ACE14-P1333201M	59104126

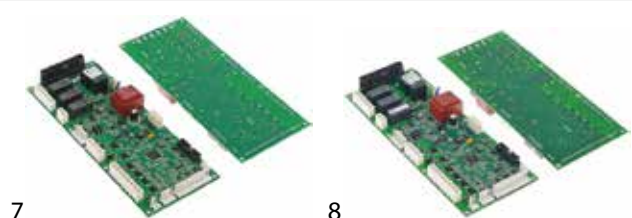 

7

8

fig.	Part No.	description	Ref. No.
7	403335	main PCB microwave	59004108
8	403337	main PCB microwave	59004107

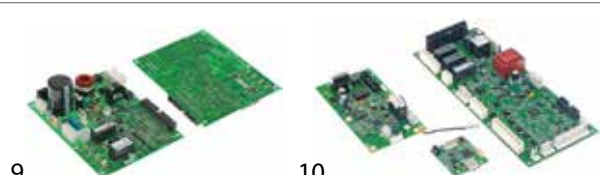 

9

10


fig.	Part No.	description	Ref. No.
9	403341	main PCB microwave	59004110
10	403331	main PCB microwave AXP5203/P-1333608M incl. display PCB and USB PCB monophase, Hz	14139085



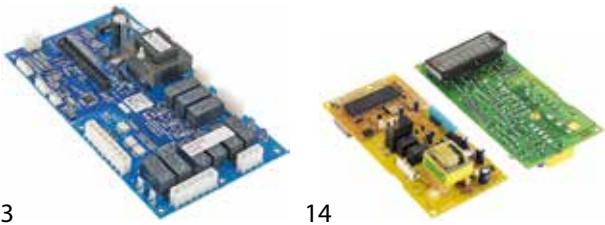 11

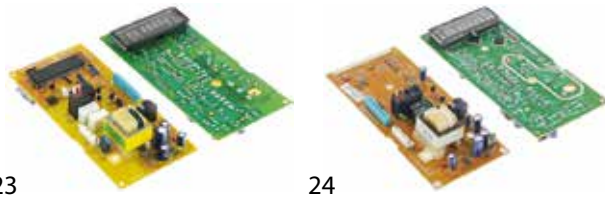 
12

fig.	Part No.	description	Ref. No.
11	403368	main PCB microwave MXP5221-P2001606M incl. display PCB and USB PCB three-phase, 50Hz	14139086
12	403424	PCB microwave ACE14 USB interface	59134218


13 14

fig.	Part No.	description	Ref. No.
13	403399	PCB microwave ACE5140-P1333203M HV	59124182
14	403405	PCB microwave ALD510-P1331005M HV/LV	56001472




23 24

fig.	Part No.	description	Ref. No.
23	403406	PCB microwave RCS511TS-P2001105M HV/LV	56132076
24	403387	PCB microwave RCS511TS-P2002405M HV/LV	54127035

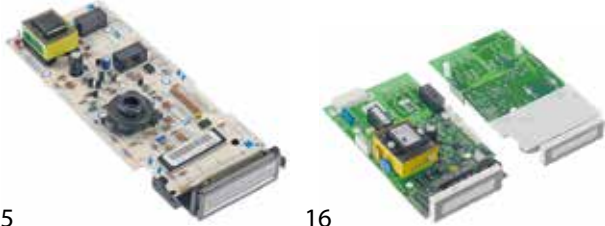 


15 16

fig.	Part No.	description	Ref. No.
15	403401	PCB microwave DEC11E2-P1331213M HV/LV	59002070
16	403402	PCB microwave DEC11E2-P133311M HV/LV	59004111

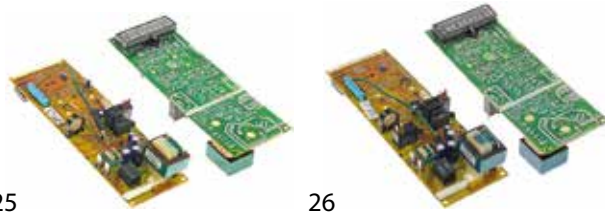 


25 26

fig.	Part No.	description	Ref. No.
25	403389	PCB microwave RF5511TSW-P2001005M HV/LV	54116068
26	403365	PCB microwave RF5518TS-P2001004M HV/LV	54116043

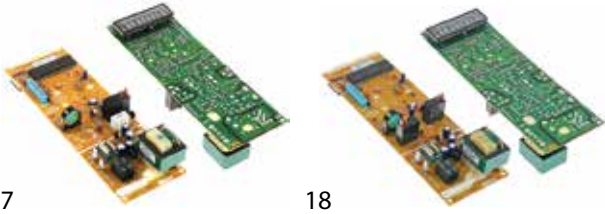 


17 18

fig.	Part No.	description	Ref. No.
17	403404	PCB microwave DFS11EA-P1330220M HV/LV	53001659
18	403408	PCB microwave DFS18E-P133022M HV/LV	59002143

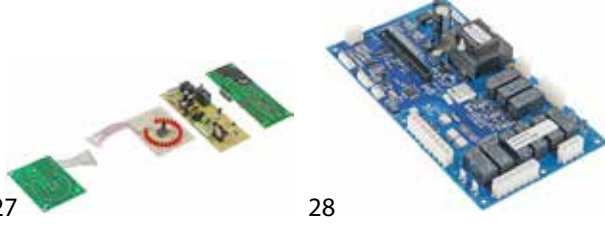 


27 28

fig.	Part No.	description	Ref. No.
27	403407	PCB microwave RME510D-P2001204M HV/LV	58101010
28	403400	PCB microwave UCA1400P1333205 HV	59124183

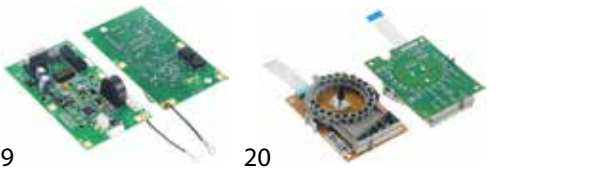 


19 20

fig.	Part No.	description	Ref. No.
19	403391	PCB microwave for display	59134213
20	403392	PCB microwave MCS10DSE-P2002404M with green LEDs	54127054

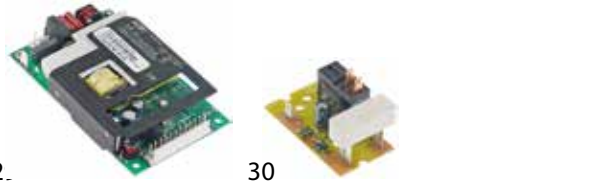 


29 30

fig.	Part No.	description	Ref. No.
29	403345	power PCB for microwave AXP5201/P-1333603M	59002118
30	403431	relay PCB microwave ALD510-P1331005M L 66mm W 35mm H 35mm Qty 1 pcs	56001480

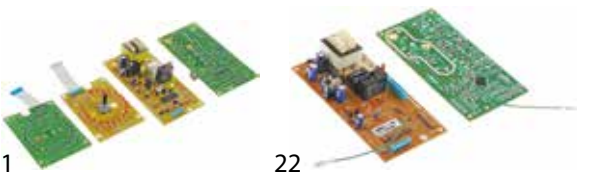 

21 22

fig.	Part No.	description	Ref. No.
21	403383	PCB microwave MLD510SE-P1331012 HV/LV	56002002
22	403386	PCB microwave RCS511DSE-P2002406 HV/LV	54127034



31

fig.	Part No.	description	Ref. No.
31	403346	relay PCB microwave AXP5201/P-1333603M	59002117





Afinox

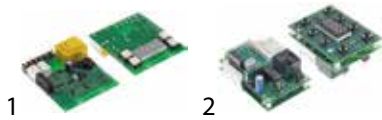 


fig.	Part No.	description	Ref. No.
1	403474	display PCB blast freezer CT1TM0010003 L 90mm W 80mm suitable for AFINOX	74701062
2	403475	PCB blast freezer L 118mm W 80mm suitable for AFINOX model EVC80S10P7AFX00	74701063

Alimacchine



fig.	Part No.	description	Ref. No.
1	401368	PCB dough mixers NT40-50-70 2 speeds	Scheda Trifase 2V

Amana

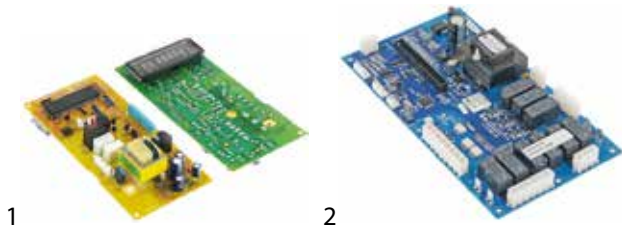 


fig.	Part No.	description	Ref. No.
1	403406	PCB microwave RCS511TS-P2001105M HV/LV	56002036
2	403400	PCB microwave UCA1400P1333205 HV	59004068

Ambach

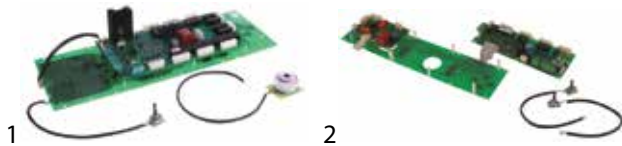 


fig.	Part No.	description	Ref. No.
1	401591	keypad PCB combi-steamer ME061T complete	R65301460
2	400000	PCB combi-steamer EMT06D/GMT06D	R65301310

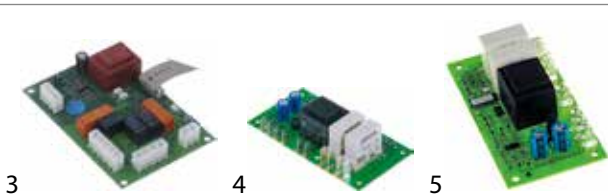 


fig.	Part No.	description	Ref. No.
3	402825	PCB combi-steamer GEMT L 130mm W 86mm level control new edition steam generator EVCO	R65301480
4	400074	PCB pyroceram range 2023206-00 400V	5070110568
5	400411	PCB pyroceram range CH 40/45/80 230V	5070110568

Angelo-Po

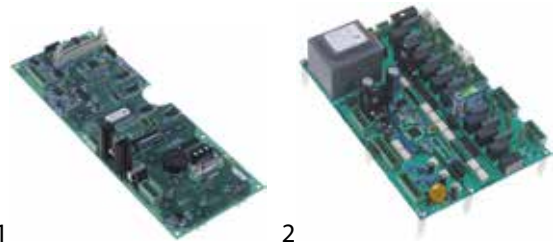 


fig.	Part No.	description	Ref. No.
1	402867	keypad PCB combi-steamer FM1011 L 275mm W 100mm suitable for ANGELO PO buttons 12	3018771
2	402866	PCB combi-steamer FM1011 suitable for ANGELO PO	32V5361

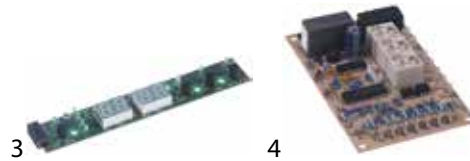 


fig.	Part No.	description	Ref. No.
3	402675	PCB dishwasher KD60 L 185mm W 30mm buttons 4	3104130
4	401029	PCB dishwasher LF 50 L 122mm W 80mm Qty 1 pcs	3026600



fig.	Part No.	description	Ref. No.
5	403255	PCB dishwasher N700/NE1300/S026/S030 L 150mm W 110mm	3207870
6	400678	PCB fryer 091FR1 ED 230V	32Z9090
7	400955	PCB slicer BAYONNE 230/400V	3019810



fig.	Part No.	description	Ref. No.
8	400954	PCB slicer BAYONNE 50/60Hz 230V	3069870

Animo

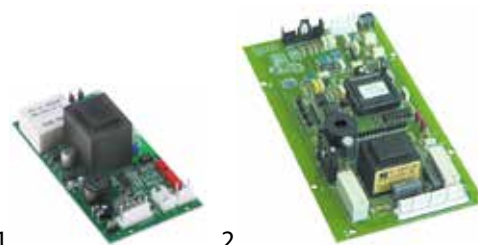 


fig.	Part No.	description	Ref. No.
1	402494	PCB coffee machine ANIMO L 115mm W 60mm	03290
2	400629	PCB coffee machine GL 30/60/90	02432




## Anitec



1

fig.	Part No.	description	Ref. No.
1	401359	PCB meat mincer/cheese grater T12 230V	AM.F2140
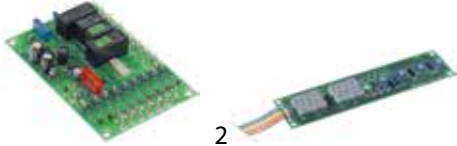 
## Aristarco



1

fig.	Part No.	description	Ref. No.
1	403329	electronic timer dishwasher L 80mm W 122mm Qty 1 pcs	00015482
2	402948	keypad PCB dishwasher AL40.28/AL1200 L 165mm W 38mm with digital display buttons 4	00006916



3



4

fig.	Part No.	description	Ref. No.
3	403233	PCB dishwasher AL 45/55 L 110mm W 104mm	00009498
4	400913	PCB dishwasher AL 50.34	00004435




5



6

fig.	Part No.	description	Ref. No.
5	403232	PCB dishwasher ALISEO 40/45 L 107mm W 104mm	00003303
6	403235	PCB dishwasher L 70mm W 61mm for drain pump H 42mm Qty 1 pcs	00004105


## Baron

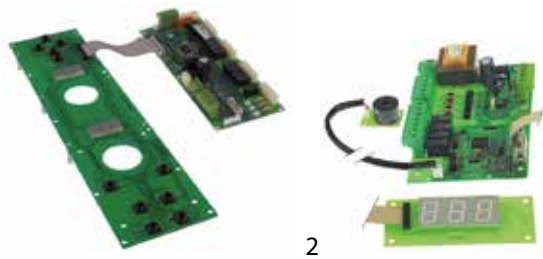 

1

fig.	Part No.	description	Ref. No.
1	401958	keypad PCB combi-steamer GEMT	—
2	401195	PCB combi-steamer CV10E complete without potentiometer	BN3103245

## Bartscher

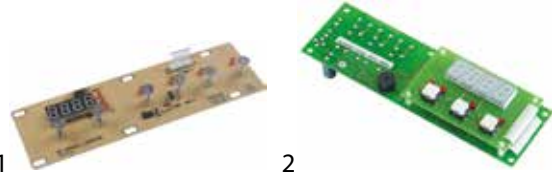 

1

2

fig.	Part No.	description	Ref. No.
1	402962	control PCB induction device GIC2035 L 257mm W 75mm edition since 06/2010 buttons 6	01059353M2
2	400736	control PCB salamander grill SH50SR	06010083



3



4

fig.	Part No.	description	Ref. No.
3	402959	main PCB GIC2035 L 236mm W 230mm since 06/2010	010583510M2
4	402045	PCB hand blenders FM3 230V with potentiometer	SA3600



5

fig.	Part No.	description	Ref. No.
5	400899	power PCB dishwasher LP10/20/30 without EPROM	0215018

## Berner



1

fig.	Part No.	description	Ref. No.
1	400074	PCB pyroceram range 2023206-00 400V	800501

## Bertos



1

fig.	Part No.	description	Ref. No.
1	401219	keypad PCB convection oven FC06/12/20	24047900



Blanco



fig.	Part No.	description	Ref. No.
1	401387	keypad PCB plate dispenser SHE 21-26	105746
2	401388	keypad PCB plate dispenser SHE 21-26	105747

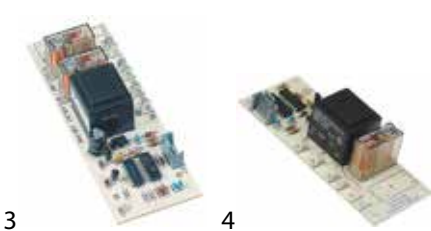 


fig.	Part No.	description	Ref. No.
3	401399	PCB heated trolley BLANCO	105771
4	401389	PCB plate dispenser SHE 21-26 single	105748

Bonamat

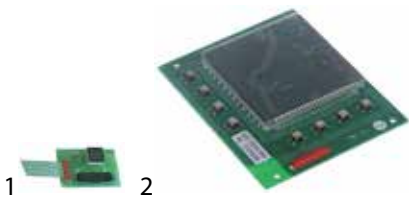 


fig.	Part No.	description	Ref. No.
1	400615	control PCB coffee machine Matic 2/3	6.202.966.000
2	402642	keypad PCB coffee machine B10 HW L 135mm W 110mm with display buttons 8	6.205.861.000



fig.	Part No.	description	Ref. No.
3	400610	net board coffee machine Mondo 1/2/3 model MONDO TH10 since year of construction 1996	6.301.713.000

Bonnet

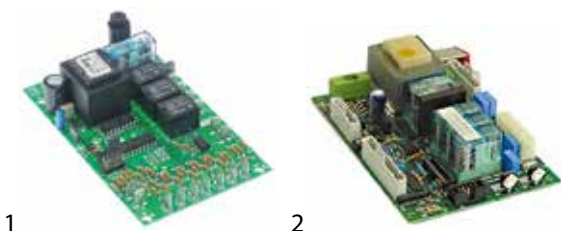 


fig.	Part No.	description	Ref. No.
1	403093	PCB dishwasher L 135mm W 82mm	2002140H
2	400899	power PCB dishwasher LP10/20/30 without EPROM	2001914H

Bourgeois

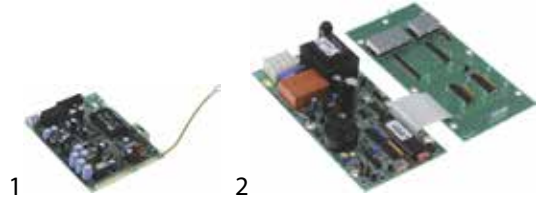 


fig.	Part No.	description	Ref. No.
1	402984	control PCB combi-steamer UC0611/1011/2011 L 140mm W 100mm	ELEC2017
2	402985	control PCB combi-steamer UC0611/1011/2011 L 180mm W 85mm	ELEC044

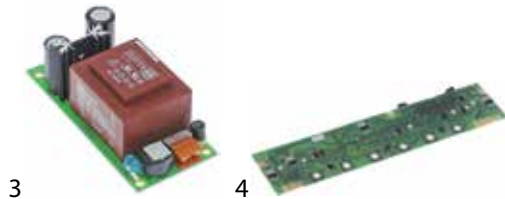 


fig.	Part No.	description	Ref. No.
3	403088	net board combi-steamer L 122mm W 56mm for combi-steamer	ELEC2023
4	402983	PCB combi-steamer UC0611/1011/2011 L 210mm W 50mm	ELEC2002



fig.	Part No.	description	Ref. No.
5	402982	relay PCB combi-steamer UC0611/1011/2011 cable length 220mm push-in	ELEC2004

Braher



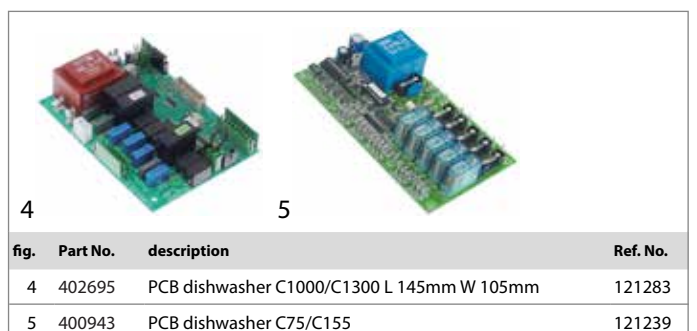 
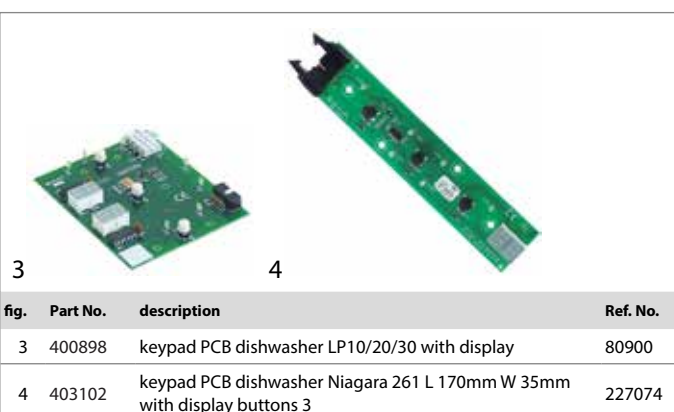 
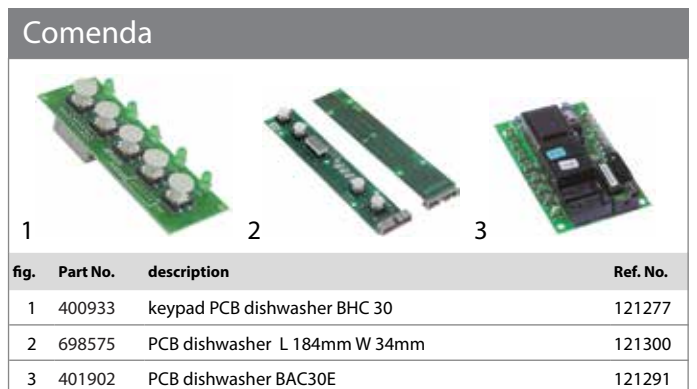 
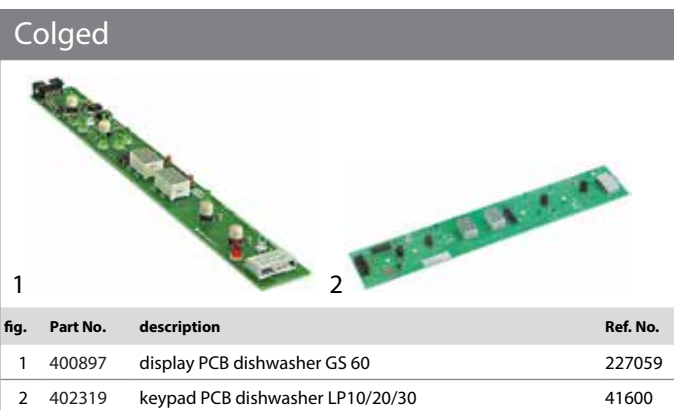 
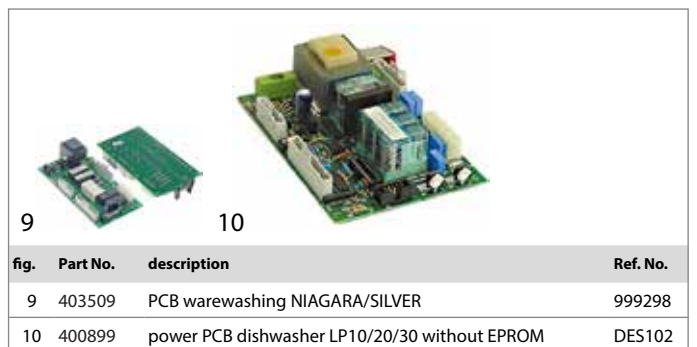 
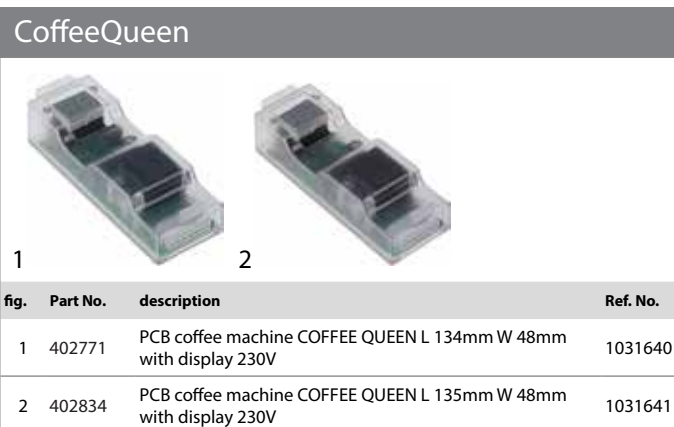 
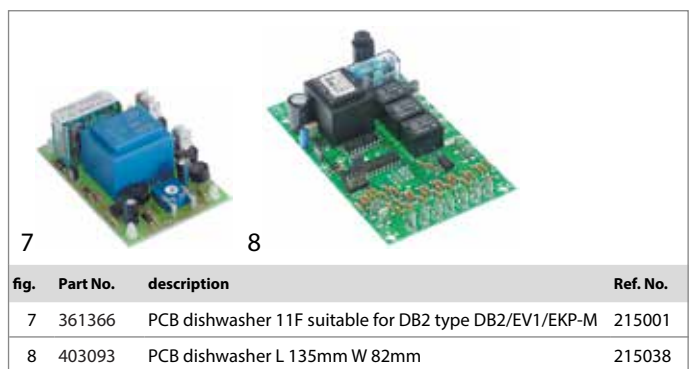 
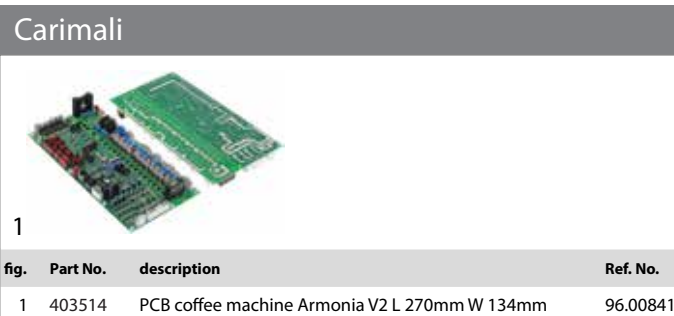 
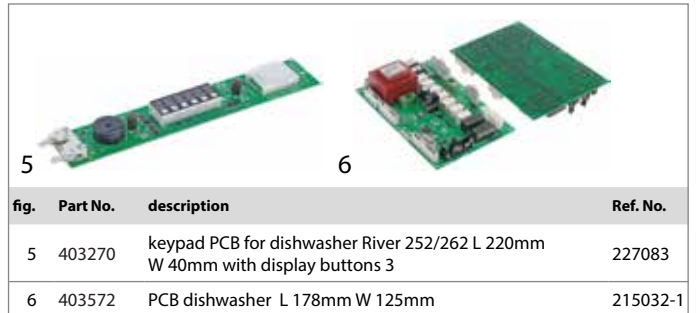 
fig.	Part No.	description	Ref. No.
1	403174	relay PCB slicer 292-320-350 L 113mm W 72mm	10.855

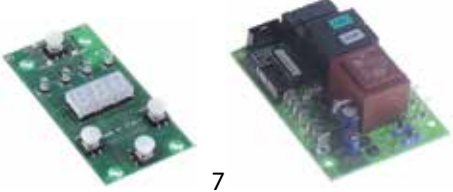 
Capic



fig.	Part No.	description	Ref. No.
1	403140	keypad PCB combi-steamer AC 150- AC 220 L 104mm W 32mm buttons 3	E050561
2	403016	keypad PCB fryer JBM L 132mm W 81mm suitable for CAPIC with display buttons 4	E050555






6 7


fig.	Part No.	description	Ref. No.
6	402881	PCB dishwasher CE-GE L 126mm W 63mm suitable for COMENDA	121304
7	401846	PCB dishwasher COMENDA, HOONVED	121287



8


fig.	Part No.	description	Ref. No.
8	401874	PCB dishwasher FC3M/FC4M L 100mm W 70mm suitable for COMENDA 230V	121302

### Convotherm

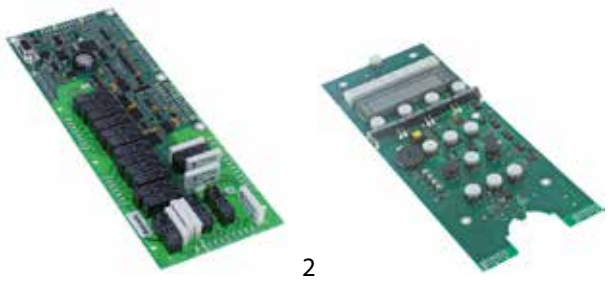 


1 2

fig.	Part No.	description	Ref. No.
1	402882	control PCB combi-steamer OEB10.10 L 280mm W 100mm	5019420
2	402589	keypad PCB combi-steamer OEB10.10 L 337mm W 132mm buttons 14	5019300

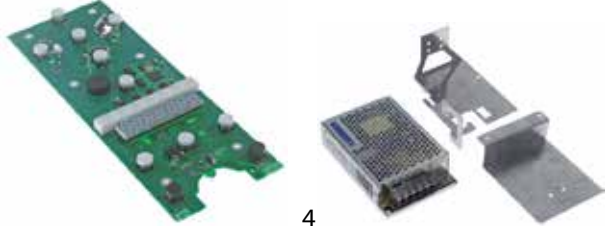 


3 4

fig.	Part No.	description	Ref. No.
3	402588	keypad PCB combi-steamer OS10.10 L 322mm W 117mm buttons 11	5009303
4	402637	PCB combi-steamer OEB10.10 conversion kit	2619973

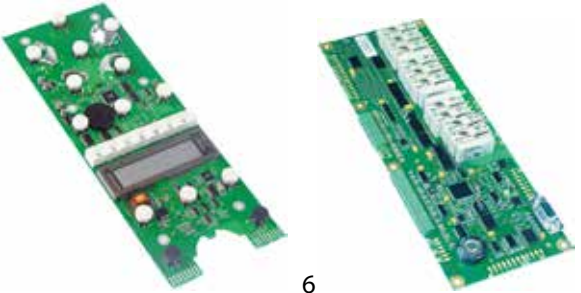 

5 6


fig.	Part No.	description	Ref. No.
5	402207	PCB combi-steamer OS10.10	5009305
6	402208	PCB combi-steamer OS10.10	5009300



7


fig.	Part No.	description	Ref. No.
7	401877	power PCB combi-steamer OD10.10 suitable for CONVOTHERM with mounting accessories	5009029K

### Cookmax

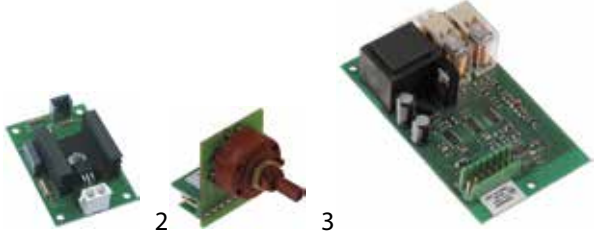 


1 2 3

fig.	Part No.	description	Ref. No.
1	402088	control PCB coffee machine	0V2143
2	402107	control PCB coffee machine 16889	11231
3	402108	control PCB coffee machine 16889	15710

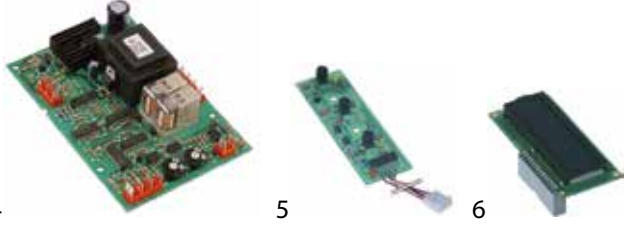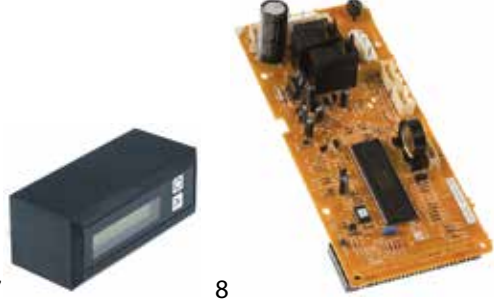  



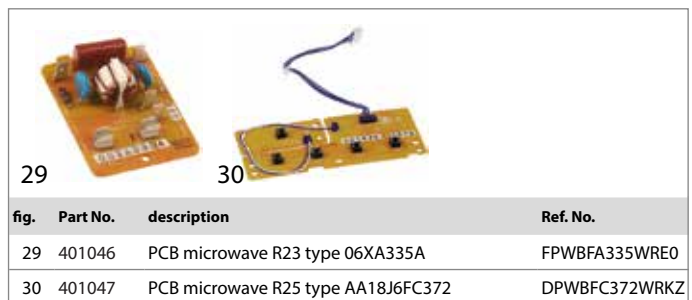 
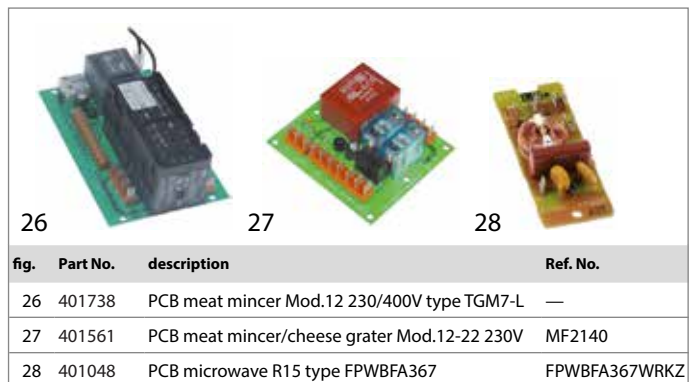 
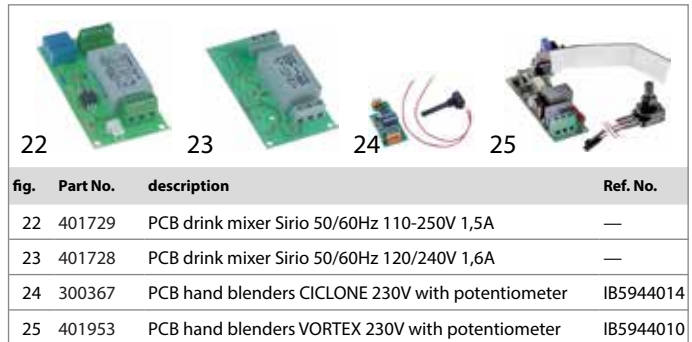 
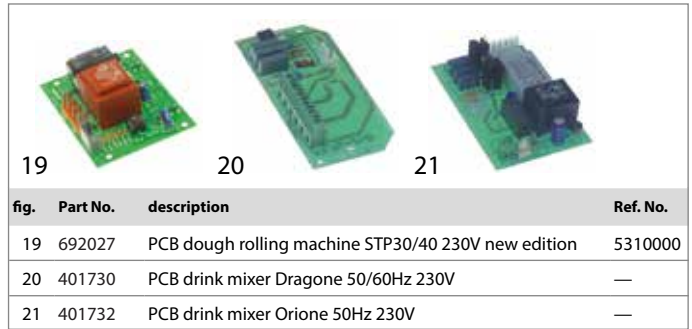 
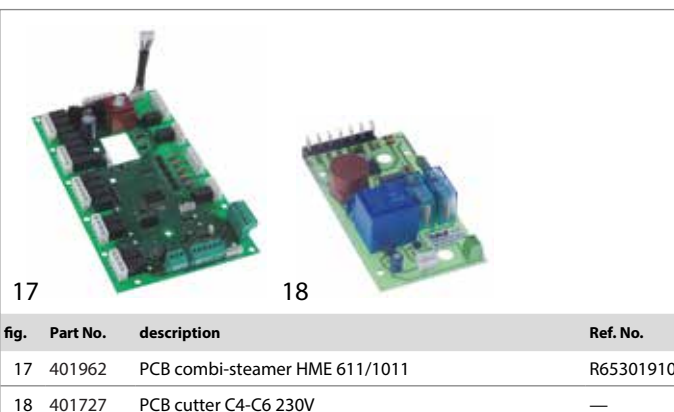 
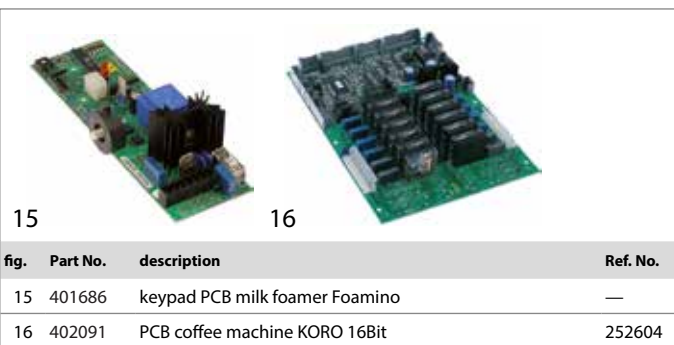 
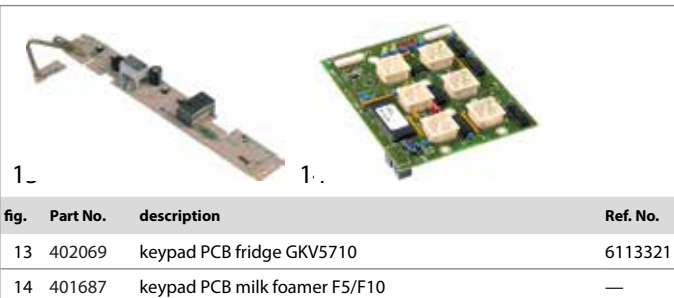 
4 5 6

fig.	Part No.	description	Ref. No.
4	402109	control PCB coffee machine 16889	1011319
5	401731	control PCB drink mixer Orione 230V	—
6	402090	display coffee machine	251653

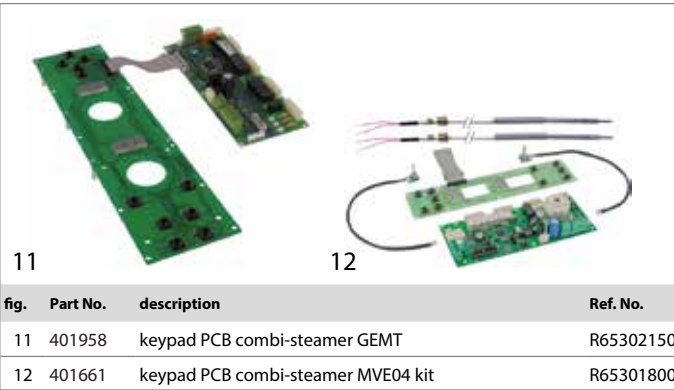 

7 8

fig.	Part No.	description	Ref. No.
7	400787	display espresso machine Pegaso	—
8	401014	display PCB microwave R23	DPWBFC482WRKZ

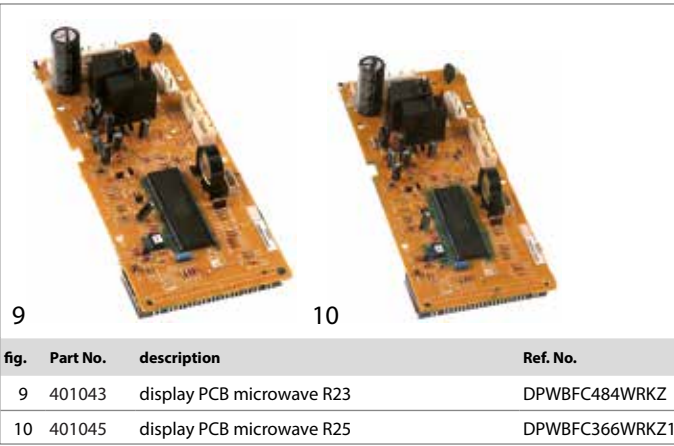 







fig.	Part No.	description	Ref. No.
33	401689	PCB milk foamer F5/F10	—
34	400955	PCB slicer BAYONNE 230/400V	19411008
35	400954	PCB slicer BAYONNE 50/60Hz 230V	19411007

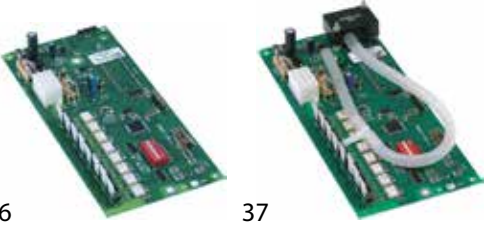 


fig.	Part No.	description	Ref. No.
36	402093	PCB vacuum packing machine B35 / B-M 42/42XL H_HD4	0230040
37	402095	PCB vacuum packing machine B35 / B-M 42/42XL with sensor H_HD4	0230042

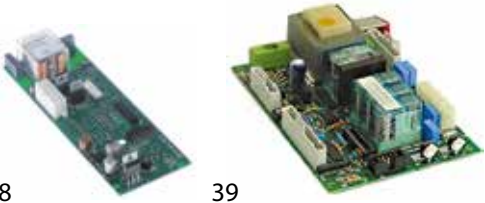 


fig.	Part No.	description	Ref. No.
38	402092	PCB vacuum packing machine JUMBO	0230036
39	400899	power PCB dishwasher LP10/20/30 without EPROM	215023

### Coven




fig.	Part No.	description	Ref. No.
1	403200	keypad PCB combi-steamer 6/10/20EMD L 180mm W 90mm buttons 5	ELSCRO5P

### Cuppone

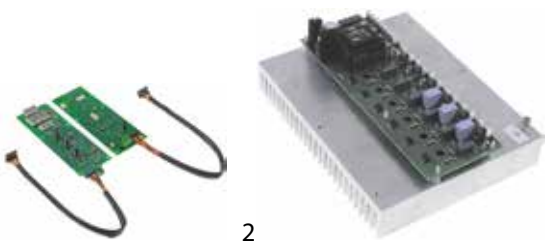 


fig.	Part No.	description	Ref. No.
1	400859	control PCB pizza oven TH4351DC	91310250
2	401150	PCB pizza oven MAX 4/35	91310305




fig.	Part No.	description	Ref. No.
3	400814	PCB pizza oven TH4351DC 2kW	91310301

### Dihr

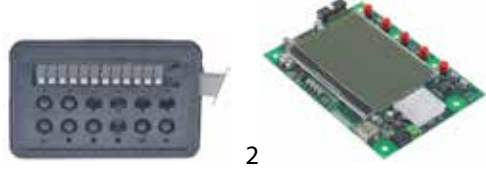 


fig.	Part No.	description	Ref. No.
1	403222	control PCB dishwasher AX 161/ AX 290 L 160mm W 115mm cable length 970mm with housing Qty 1 pcs	DW50570/H
2	403288	control PCB dishwasher TWIN STAR L 157mm W 112mm with display buttons 6	DW590107




fig.	Part No.	description	Ref. No.
3	403231	keypad PCB dishwasher 80E/81E L 155mm W 100mm H 25mm with display buttons 6	DW50570/D
4	403221	main PCB dishwasher AX 250/300/310/320/330 L 168 mm W 148 mm for display PCB Qty 1 pcs	DW3006164

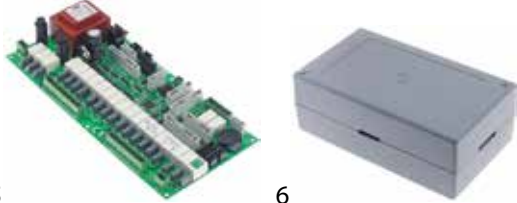 


fig.	Part No.	description	Ref. No.
5	403286	PCB dishwasher 116EK L 250mm W 118mm Qty 1 pcs	DW590105
6	403230	PCB dishwasher 125EU L 190mm W 110mm H 70mm with housing	DW50603
6	403284	PCB dishwasher Elektron500 L 190mm W 110mm H 70mm with housing Qty 1 pcs	DW50604
6	403283	PCB dishwasher Optima 400 L 190mm W 110mm H 70mm with housing Qty 1 pcs	DW540201
6	403282	PCB dishwasher Optima L 190mm W 110mm H 70mm with housing Qty 1 pcs	DW561060







fig.	Part No.	description	Ref. No.
7	402687	PCB dishwasher DS40/DS50 for flow meter	DW50584
8	402677	PCB dishwasher DS40/DS50 L 161mm W 90mm	DW50580



fig.	Part No.	description	Ref. No.
9	403285	PCB dishwasher DS50 L 117mm W 96mm H 43mm with housing Qty 1 pcs	DW50553/E
10	402676	PCB dishwasher HT11/12 L 102mm W 62mm timer	DW50559




fig.	Part No.	description	Ref. No.
11	402682	PCB dishwasher HT600/HT11/HT12 L 160mm W 102mm timer run-time 60/100/180s	DW50557
12	402675	PCB dishwasher KD60 L 185mm W 30mm buttons 4	DW50581




fig.	Part No.	description	Ref. No.
13	403287	PCB dishwasher TWIN STAR L 215mm W 140mm Qty 1 pcs	DW590106
14	403558	PCB for dishwasher GR800/900/1000, LP2S, LP3S, LP4S8	DW50650

## Dynamic



fig.	Part No.	description	Ref. No.
1	403561	PCB hand blenders SMX600/800	45620

## Ecomax




fig.	Part No.	description	Ref. No.
1	403032	keypad PCB dishwasher C402(S)-/C502(S)-/C602(S)-xx L 185mm W 35mm suitable for COOKMAX with display	—
2	403033	PCB control L 147mm W 125mm 230V without EPROM	897545-1

## EGO




fig.	Part No.	description	Ref. No.
1	401387	keypad PCB plate dispenser SHE 21-26	00.75436.005
2	401388	keypad PCB plate dispenser SHE 21-26	00.75436.010

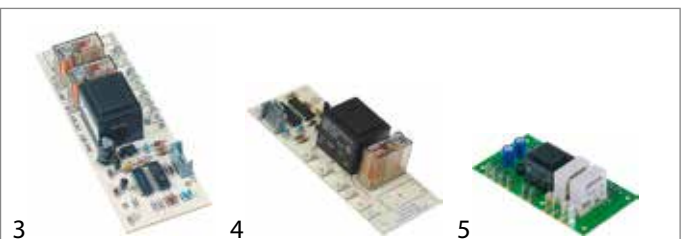 


fig.	Part No.	description	Ref. No.
3	401399	PCB heated trolley BLANCO	75.05013.000
4	401389	PCB plate dispenser SHE 21-26 single	75.05012.000
5	400074	PCB pyroceram range 2023206-00 400V	75.05011.000




fig.	Part No.	description	Ref. No.
6	400411	PCB pyroceram range CH 40/45/80 230V	75.05011.001

## Electrolux

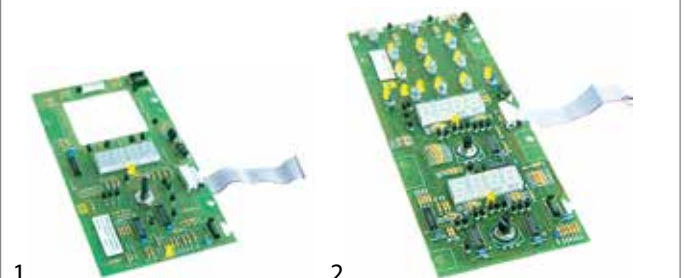 


fig.	Part No.	description	Ref. No.
1	400179	control PCB combi-steamer FCV/G 101/1 102/1	0C3758
2	400188	control PCB combi-steamer FCV/G 101/1 102/1	002725

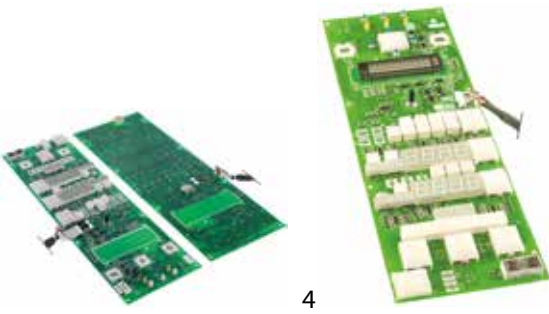 



fig.	Part No.	description	Ref. No.
3	403583	control PCB combi-steamer FCZ06/10/20 L 450mm W 155mm display	0C7350
4	400747	keypad PCB combi-steamer FCZ06/10/20	0C0043



fig.	Part No.	description	Ref. No.
11	401637	main PCB dishwasher	0L2583
12	403442	PCB blast freezer BC100 L 165mm W 120mm suitable for ZANUSSI 50/60Hz 230V H 40mm 2,8A	093158

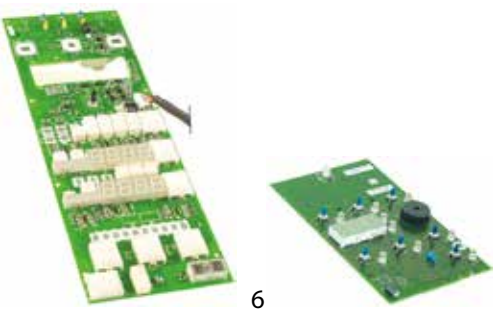 


fig.	Part No.	description	Ref. No.
5	400749	keypad PCB combi-steamer FCZ06/10/20	0C0041
6	400923	keypad PCB dishwasher LS14/ET12	0L2482

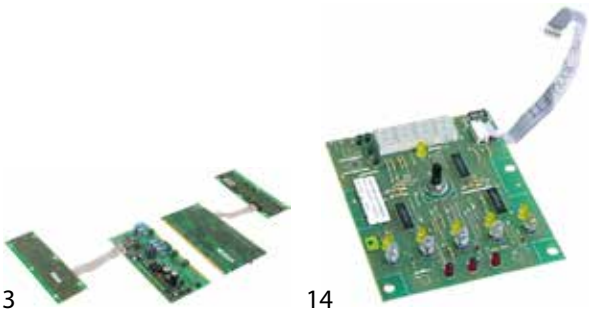 


fig.	Part No.	description	Ref. No.
13	403443	PCB blast freezer BCF 72/144 suitable for ZANUSSI	085926
14	400187	PCB combi-steamer FCV/G 101/1 102/1	002666

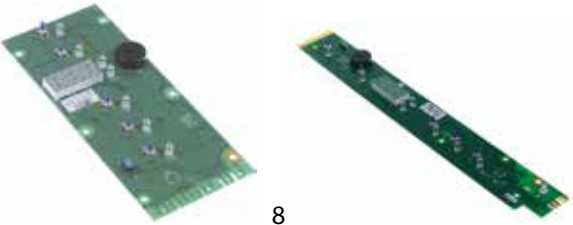 


fig.	Part No.	description	Ref. No.
7	402966	keypad PCB dishwasher LS9 L 195mm W 80mm with display buttons 5	0L1235
8	401625	keypad PCB dishwasher WT30	0L1579

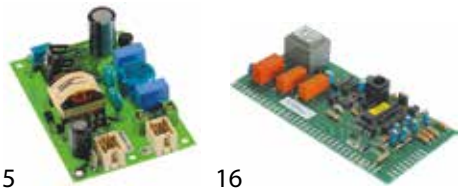 


fig.	Part No.	description	Ref. No.
15	400751	PCB combi-steamer FCZ06/10/20 level A	007047
16	400928	PCB dishwasher LS61-LS62	048833

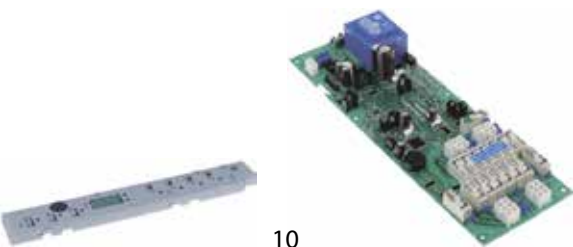 


fig.	Part No.	description	Ref. No.
9	401867	keypad PCB dishwasher WT4 with display	0L1626
10	403025	main PCB combi-steamer COP35 LIV. ACTIVE L 334mm W 110mm 230V	0C4347

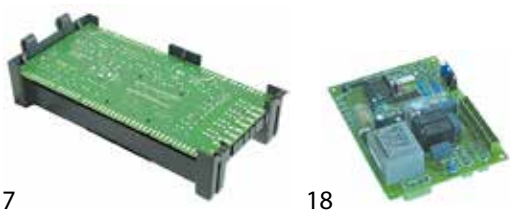 


fig.	Part No.	description	Ref. No.
17	400917	PCB dishwasher WT 4	0L2582
18	402003	PCB ice maker AC045/055	086368



19



20

fig.	Part No.	description	Ref. No.
19	401799	PCB ice maker N201/N301//N501 230V	086586
20	400814	PCB pizza oven TH4351DC 2kW	004213



21



22

fig.	Part No.	description	Ref. No.
21	400177	PCB range JUN90133	0H6144
22	403058	PCB vegetable slicers TRS	0KQ429



23



24

fig.	Part No.	description	Ref. No.
23	401617	power PCB combi-steamer FCV 6GL	0C3757
24	400748	power PCB combi-steamer FCV/G 101/1 102/1	0C3761



25



26

fig.	Part No.	description	Ref. No.
25	401572	power PCB combi-steamer FCV/G 101/1 102/1	0C3762
26	400750	power PCB combi-steamer FCZ06/10/20	0C0042

## Elettrobar



1



2

fig.	Part No.	description	Ref. No.
1	400897	display PCB dishwasher GS 60	227059
2	402319	keypad PCB dishwasher LP10/20/30	41600



3



4

fig.	Part No.	description	Ref. No.
3	400898	keypad PCB dishwasher LP10/20/30 with display	80900
4	403102	keypad PCB dishwasher Niagara 261 L 170mm W 35mm with display buttons 3	227074



5



6

fig.	Part No.	description	Ref. No.
5	403270	keypad PCB for dishwasher River 252/262 L 220mm W 40mm with display buttons 3	227083
6	361366	PCB dishwasher 11F suitable for DB2 type DB2/EV1/EKP-M	215001



7



8

fig.	Part No.	description	Ref. No.
7	400157	PCB dishwasher 35/40/50/350	215009
8	400948	PCB dishwasher 44 without EPROM	215005




9



10

fig.	Part No.	description	Ref. No.
9	403093	PCB dishwasher L 135mm W 82mm	215038
10	401049	PCB dishwasher LP10/20/30	215022

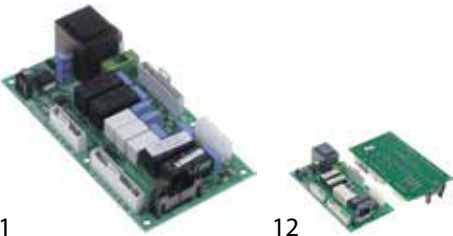 

11 12


fig.	Part No.	description	Ref. No.
11	402880	PCB dishwasher SV72 L 152mm W 80mm	215027
12	403509	PCB warewashing NIAGARA/SILVER	999298



13

fig.	Part No.	description	Ref. No.
13	400899	power PCB dishwasher LP10/20/30 without EPROM	215023


### Elframo

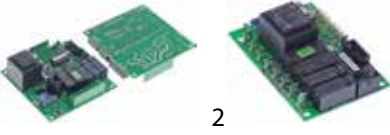 

1 2


fig.	Part No.	description	Ref. No.
1	403163	PCB dishwasher C34/C44/C66 230V 50/60A	25192040
2	402990	PCB dishwasher D35/40	25192020

### Eloma

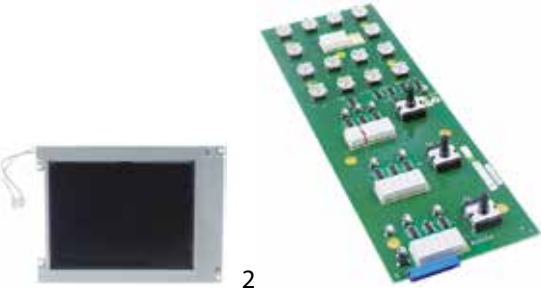 

1 2

fig.	Part No.	description	Ref. No.
1	403181	display combi-steamer L 155mm W 115mm cable length 60mm	EL0502031
2	402619	keypad PCB combi-steamer 1121/2021 L 350mm W 121mm with display	EL0742465



3

fig.	Part No.	description	Ref. No.
3	403179	PCB combi-steamer Genius T 6-11 10-11 L 400mm W 155mm	EL0791458


### Emmepi



1 2

fig.	Part No.	description	Ref. No.
1	400955	PCB slicer BAYONNE 230/400V	808629
2	400954	PCB slicer BAYONNE 50/60Hz 230V	808742


### Eureka



1


fig.	Part No.	description	Ref. No.
1	402690	keypad unit coffee grinder MYTHOS with display buttons 5	4111.0001
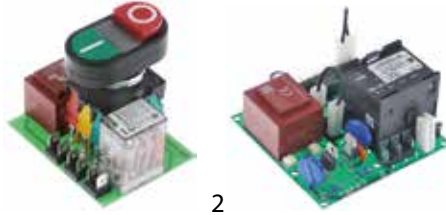 
### Everest



1 2


fig.	Part No.	description	Ref. No.
1	403149	control PCB meat mincer TC8/TCE8/TCE8-2000 230V 10A L 79mm W 59mm connection male faston 6,3mm	ELE1007
2	403150	PCB cheese grater GS-TF-ST00 L 104mm W 104mm	ELE1034



3

fig.	Part No.	description	Ref. No.
3	403554	PCB for mincer TG12/TG22 suitable for EVEREST	ELE1005

### Faema

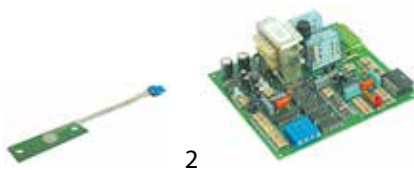 

1 2

fig.	Part No.	description	Ref. No.
1	400580	control PCB coffee machine	3301-091 861
2	400684	PCB coffee machine	3761-119 516





## Fagor

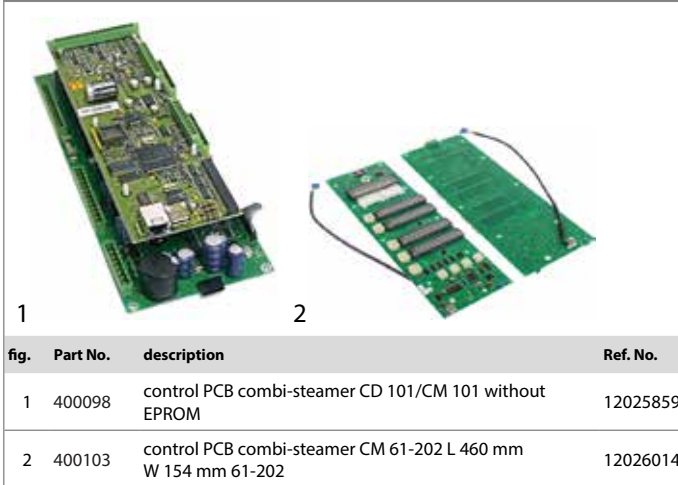 


fig.	Part No.	description	Ref. No.
1	400098	control PCB combi-steamer CD 101/CM 101 without EPROM	12025859
2	400103	control PCB combi-steamer CM 61-202 L 460 mm W 154 mm 61-202	12026014

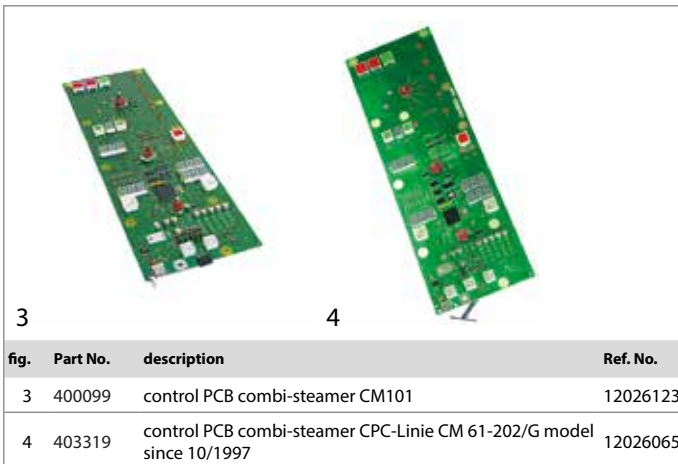 


fig.	Part No.	description	Ref. No.
3	400099	control PCB combi-steamer CM101	12026123
4	403319	control PCB combi-steamer CPC-Linie CM 61-202/G model since 10/1997	12026065

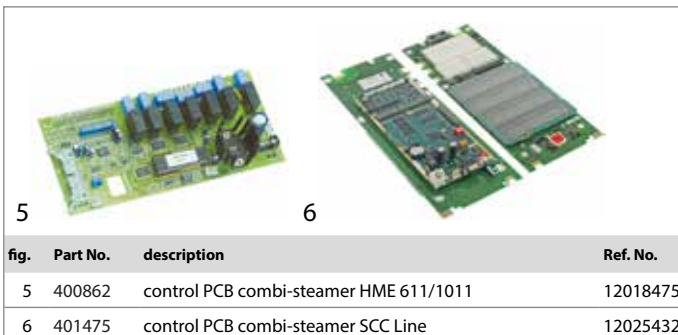 


fig.	Part No.	description	Ref. No.
5	400862	control PCB combi-steamer HME 611/1011	12018475
6	401475	control PCB combi-steamer SCC Line	12025432

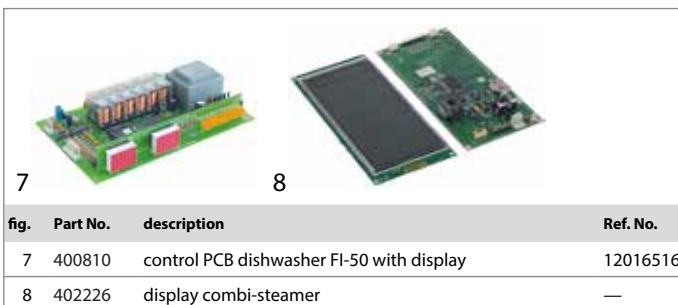 


fig.	Part No.	description	Ref. No.
7	400810	control PCB dishwasher FI-50 with display	12016516
8	402226	display combi-steamer	—

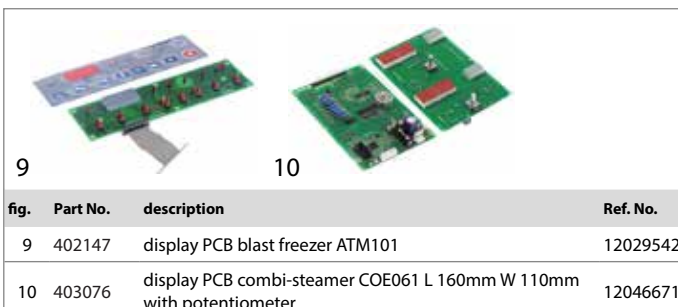 


fig.	Part No.	description	Ref. No.
9	402147	display PCB blast freezer ATM101	12029542
10	403076	display PCB combi-steamer COE061 L 160mm W 110mm with potentiometer	12046671

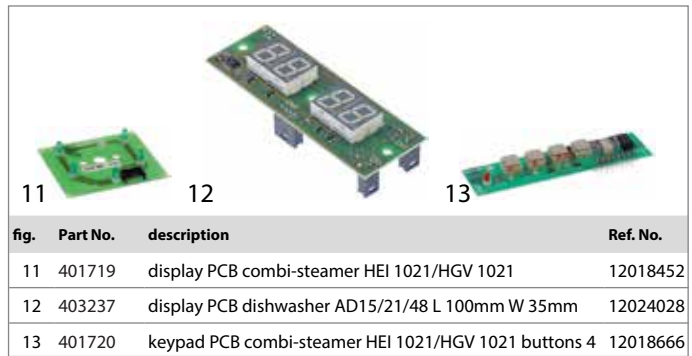 


fig.	Part No.	description	Ref. No.
11	401719	display PCB combi-steamer HEI 1021/HGV 1021	12018452
12	403237	display PCB dishwasher AD15/21/48 L 100mm W 35mm	12024028
13	401720	keypad PCB combi-steamer HEI 1021/HGV 1021 buttons 4	12018666

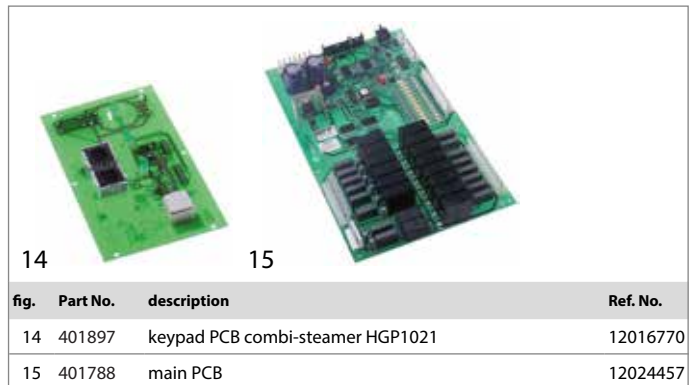 


fig.	Part No.	description	Ref. No.
14	401897	keypad PCB combi-steamer HGP1021	12016770
15	401788	main PCB	12024457

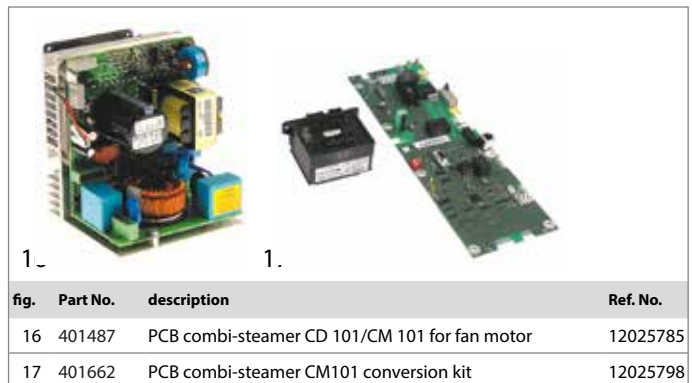 


fig.	Part No.	description	Ref. No.
16	401487	PCB combi-steamer CD 101/CM 101 for fan motor	12025785
17	401662	PCB combi-steamer CM101 conversion kit	12025798

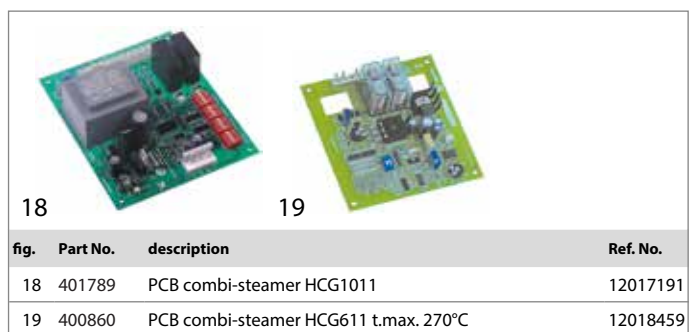 


fig.	Part No.	description	Ref. No.
18	401789	PCB combi-steamer HCG1011	12017191
19	400860	PCB combi-steamer HCG611 t.max. 270°C	12018459


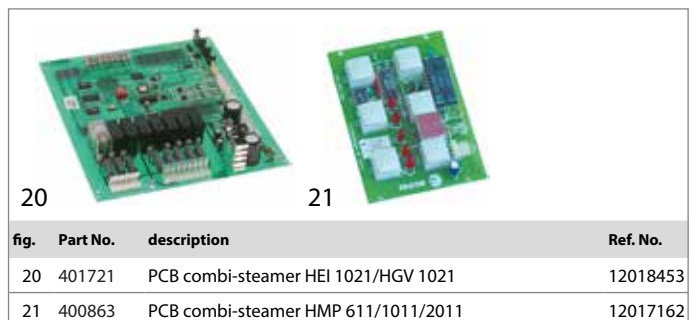 


fig.	Part No.	description	Ref. No.
20	401721	PCB combi-steamer HEI 1021/HGV 1021	12018453
21	400863	PCB combi-steamer HMP 611/1011/2011	12017162


22                      23

fig.	Part No.	description	Ref. No.
22	400110	PCB combi-steamer level control	12026627
23	401629	PCB combi-steamer SCC Line	12026129

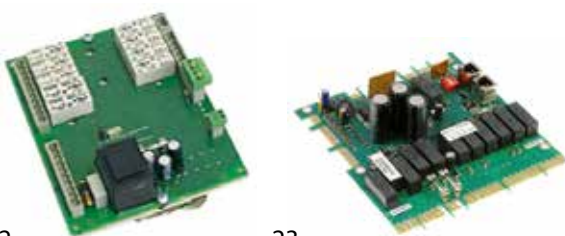 

24                      25

fig.	Part No.	description	Ref. No.
24	402225	PCB combi-steamer VE101/202	12046670
25	403308	PCB dishwasher AD-72/48/64 L 128mm W 118mm suitable for FAGOR H 55mm with housing	12008750

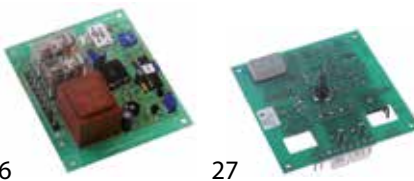 

26                      27


fig.	Part No.	description	Ref. No.
26	401787	temperatur p.c.b combi-steamer HEI 6/11 HMI 6/11 °C	12016841
27	401786	temperatur p.c.b combi-steamer HMI1011	12016954

### Falcon




1                      2

fig.	Part No.	description	Ref. No.
1	403142	control PCB fryer 401/402 L 89mm W 66mm Qty 1 pcs	731350002
2	403181	display combi-steamer L 155mm W 115mm cable length 60mm	530742457

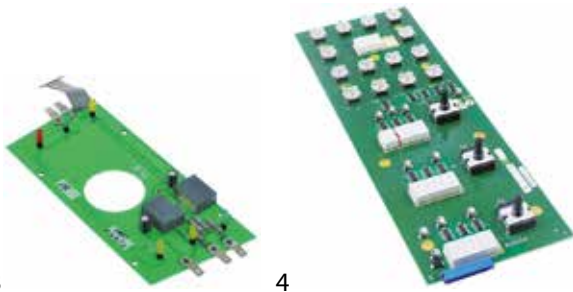 


3                      4

fig.	Part No.	description	Ref. No.
3	403145	display PCB fryer G2840 L 200mm W 90mm cable length 150mm	535770055
4	402619	keypad PCB combi-steamer 1121/2021 L 350mm W 121mm with display	530742465

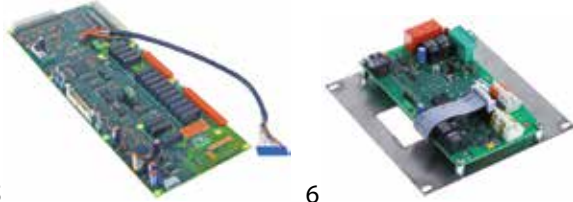 

5                      6

fig.	Part No.	description	Ref. No.
5	403179	PCB combi-steamer Genius T 6-11 10-11 L 400mm W 155mm	530791458
6	403048	PCB for fryer L 135mm W 135mm suitable for FRIFRI	737214132

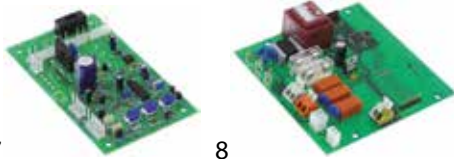 

7                      8


fig.	Part No.	description	Ref. No.
7	403148	PCB fryer 2840/2841/2842 L 80mm W 140mm	536060006
8	403146	PCB fryer 2840/FFSE98 L 126mm W 126mm	535770057



9

fig.	Part No.	description	Ref. No.
9	403147	PCB fryer E1808 L 113mm W 100mm	734510160

### Fama



1

fig.	Part No.	description	Ref. No.
1	401359	PCB meat mincer/cheese grater T12 230V	F2140



## Fimar




fig.	Part No.	description	Ref. No.
1	402221	PCB dough rolling machine FI32-FI42 L 95 mm W 80 mm 230 V 50/60Hz voltage AC	SL2990
2	692027	PCB dough rolling machine STP30/40 230V new edition	CO1931
3	402045	PCB hand blenders FM3 230V with potentiometer	SA3600




fig.	Part No.	description	Ref. No.
4	403504	PCB meat mincer/cheese grater GR 12S suitable for FIMAR 230V	SL0556
5	403556	PCB meat mincer/cheese grater GR 12S suitable for FIMAR 400V	SL3436

## Fimar




fig.	Part No.	description	Ref. No.
1	403195	keypad PCB combi-steamer G646	200001117

## Fiorenzato-Quamar



fig.	Part No.	description	Ref. No.
1	403203	display coffee grinder QUAMAR 4 buttons	130142
2	403202	electronics coffee grinder M80 suitable for QUAMAR 230V	130140

## Forcar



fig.	Part No.	description	Ref. No.
1	402812	display PCB fridge EF400/600 L 150mm W 38mm with potentiometer with thermostat type LTC-24HT	RC0429

## Fornitalia

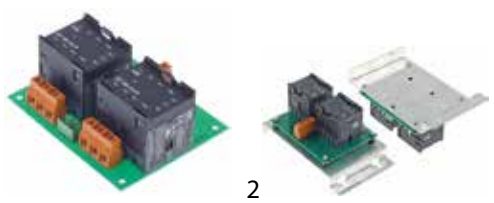 


fig.	Part No.	description	Ref. No.
1	401179	power PCB pizza oven K65 suitable for FORNITALIA	K65/65 23 (old)
2	403072	power PCB pizza oven K65 suitable for FORNITALIA	K65/65 23

## Foster

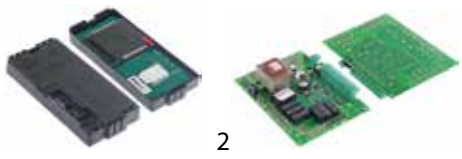 


fig.	Part No.	description	Ref. No.
1	403569	display L 140mm W 65mm type	01-275719-01
2	360624	PCB blast freezer RBC20-60 L 185mm W 135mm suitable for FOSTER 115/230V	00-555395




fig.	Part No.	description	Ref. No.
3	361932	PCB refrigerators and refrigerator-freezers EPRO/EPREM L 100mm W 90mm suitable for FOSTER	00-556242

## Franke

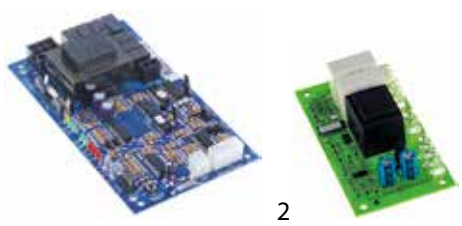 


fig.	Part No.	description	Ref. No.
1	403123	PCB ice cube maker L 175mm W 99mm	719.391.063
2	400411	PCB pyroceram range CH 40/45/80 230V	179303

## Frenox



fig.	Part No.	description	Ref. No.
1	403412	keypad PCB refrigerated counter BGL2-VT incl. control panel mounting pos. horizontal	A00DJ120





FriFri

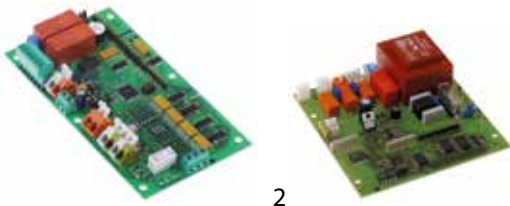 


fig.	Part No.	description	Ref. No.
1	402993	control PCB fryer ELLEGANCE L 140mm W 80mm with display	214113
2	400650	control PCB fryer FFE 21/31/41	101406

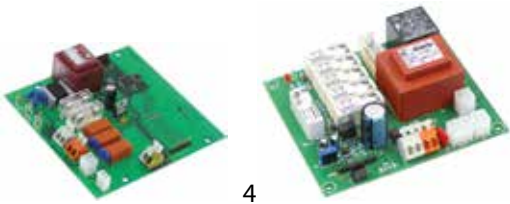 


fig.	Part No.	description	Ref. No.
3	403146	PCB fryer 2840/FFSE98 L 126mm W 126mm	101613
4	400854	power PCB fryer FFE 21/31/41 edition since 1995	300918

Friulinox

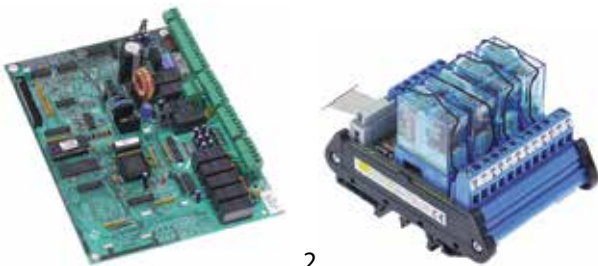 


fig.	Part No.	description	Ref. No.
1	401757	power PCB blast freezer ESP2000 suitable for FRIULINOX	FR995857
2	403199	relay PCB fridge AL-EN1+AL-EN2 L 93mm W 67mm	FR990229

Galanz

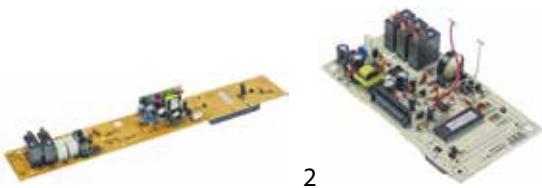 


fig.	Part No.	description	Ref. No.
1	403168	control PCB microwave GMW1030 L 335mm W 50mm with display	GMW1030-C17
2	403172	display PCB for microwave GMW1025 L 160mm W 85mm	—

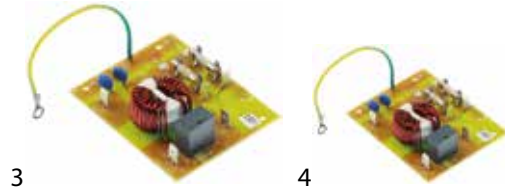 


fig.	Part No.	description	Ref. No.
3	403166	line filter for microwave type GMW1030 250V 50/60Hz conductor 2 PCB	GMW1030-C04(5STK)
4	403184	line filter for microwave type GMW1030 250V 50/60Hz conductor 2 PCB	GMW1030-C04



fig.	Part No.	description	Ref. No.
5	403188	line filter microwave for GMW1025 250V 50/60Hz conductor 2 PCB connection male faston 4,8mm	GMW1025-C04
6	403171	line filter microwave for GMW1025 250V 50-60Hz conductor 2 with fuse T12A	GMW1025-C04(5STK)

Gicar

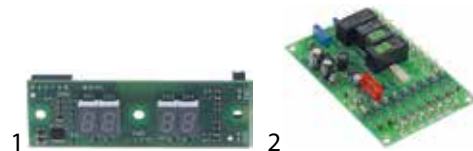 


fig.	Part No.	description	Ref. No.
1	402929	display PCB dishwasher DP45/50 L 85mm W 28mm green 4 digits	8.5.25.45
2	403329	electronic timer dishwasher L 80mm W 122mm Qty 1 pcs	8.5.65.98

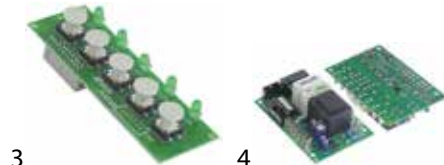 


fig.	Part No.	description	Ref. No.
3	400933	keypad PCB dishwasher BHC 30	9.9.09.94
4	403559	PCB dishwasher	9.2.20.79G13



fig.	Part No.	description	Ref. No.
5	403308	PCB dishwasher AD-72/48/64 L 128mm W 118mm suitable for FAGOR H 55mm with housing	—
6	401902	PCB dishwasher BAC30E	—









fig.	Part No.	description	Ref. No.
7	402695	PCB dishwasher C1000/C1300 L 145mm W 105mm	—
8	403163	PCB dishwasher C34/C44/C66 230V 50/60A	9.2.21.15G00






fig.	Part No.	description	Ref. No.
9	402864	PCB dishwasher C35E L 85 mm W 70 mm model since February 2013 type 8.5.65.99	8.5.65.74/A
10	402881	PCB dishwasher CE-GE L 126mm W 63mm suitable for COMENDA	8.5.68.76




fig.	Part No.	description	Ref. No.
11	401846	PCB dishwasher COMENDA, HOONVED	9.2.20.79G 00
12	402990	PCB dishwasher D35/40	9.2.21.09G






fig.	Part No.	description	Ref. No.
13	402926	PCB dishwasher DP40/DP45 L 100mm W 100mm for dishwasher	8.5.65.76/A
14	403049	PCB L 145mm W 95mm without EPROM 230V	8.8.32.50G

### Gico




fig.	Part No.	description	Ref. No.
1	401451	PCB pyroceram range series 110/920	292200620

### GIGA






fig.	Part No.	description	Ref. No.
1	361366	PCB dishwasher 11F suitable for DB2 type DB2/EV1/EKP-M	—
2	403326	PCB dishwasher Tronic L 145mm W 116mm	—

### Giorik






fig.	Part No.	description	Ref. No.
1	400736	control PCB salamander grill SH50SR	6010083
2	403251	keypad PCB salamander grill SRH1060 L 163mm W 70mm with display buttons 5	6010110






fig.	Part No.	description	Ref. No.
3	401171	PCB combi-steamer	6010084
4	401167	PCB combi-steamer VE 06/10 50/60Hz 230V	6010096

### Graef




fig.	Part No.	description	Ref. No.
1	403560	PCB slicer suitable for GRAEF	19062

### Grandimpianti





fig.	Part No.	description	Ref. No.
1	403137	keypad PCB for washing machine L 150mm W 100mm buttons 4	GR50-851000085





### Hatco



1



fig.	Part No.	description	Ref. No.
1	401799	PCB ice maker N201/N301//N501 230V	CM33580150

5 6



fig.	Part No.	description	Ref. No.
5	403033	PCB control L 147mm W 125mm 230V without EPROM	897545-1
6	401895	PCB dishwasher CR type 5E 5A	781142-1

### Henkelman


1 2

fig.	Part No.	description	Ref. No.
1	402093	PCB vacuum packing machine B35 / B-M 42/42XL H_HD4	0230040
2	402095	PCB vacuum packing machine B35 / B-M 42/42XL with sensor H_HD4	0230042

7 8

fig.	Part No.	description	Ref. No.
7	402903	PCB dishwasher GX/FX/HX suitable for HOBART without EPROM	897502-1
8	401946	PCB dishwasher HX	785422-1



3



fig.	Part No.	description	Ref. No.
3	402092	PCB vacuum packing machine JUMBO	0230036



9

fig.	Part No.	description	Ref. No.
9	400899	power PCB dishwasher LP10/20/30 without EPROM	139321-451



### Hobart

1 2



fig.	Part No.	description	Ref. No.
1	402904	control PCB dishwasher AM/AMX 700/900 suitable for HOBART buttons 4	897501-1
2	403204	control PCB dishwasher C502/C602 L 148mm W 126mm without EPROM	897545-5

### Hoonved




1 2

fig.	Part No.	description	Ref. No.
1	402929	display PCB dishwasher DP45/50 L 85mm W 28mm green 4 digits	121306
2	402805	keypad PCB dishwasher 60EBT/C43DE buttons 3	36490

3 4



fig.	Part No.	description	Ref. No.
3	400897	display PCB dishwasher GS 60	139321-456
4	403032	keypad PCB dishwasher C402(S)/-C502(S)/-C602(S)-xx L 185mm W 35mm suitable for COOKMAX with display	897560-2









3 4 5



fig.	Part No.	description	Ref. No.
3	402908	keypad PCB dishwasher C81/90 suitable for HOONVED with display buttons 4	36339
4	698575	PCB dishwasher L 184mm W 34mm	H121300
5	401902	PCB dishwasher BAC30E	H121291






			
6	7		
fig.	Part No.	description	Ref. No.
6	402695	PCB dishwasher C1000/C1300 L 145mm W 105mm	H121283
7	402864	PCB dishwasher C35E L 85 mm W 70 mm model since February 2013 type 8.5.65.99	37949



			
8	9		
fig.	Part No.	description	Ref. No.
8	400943	PCB dishwasher C75/C155	H121239
9	402881	PCB dishwasher CE-GE L 126mm W 63mm suitable for COMENDA	—



			
10	11		
fig.	Part No.	description	Ref. No.
10	401846	PCB dishwasher COMENDA, HOONVED	H121287
11	402926	PCB dishwasher DP40/DP45 L 100mm W 100mm for dishwasher	121307



			
12	13		
fig.	Part No.	description	Ref. No.
12	403272	PCB for dishwasher EDI13 L 145mm W 95mm Qty 1 pcs	34842
13	403049	PCB L 145mm W 95mm without EPROM 230V	35785



			
14			
fig.	Part No.	description	Ref. No.
14	403274	PCB warewashing CAP7E/S055E L 100mm W 100mm Qty 1 pcs	38062

Horeca-Select			
			
1	2		
fig.	Part No.	description	Ref. No.
1	403168	control PCB microwave GMW1030 L 335mm W 50mm with display	GMW1030-C17
2	361873	control PCB refrigerated show case GGC 1270/2270 cable length 225mm 2-piece type KB3150	GGC2270-31

			
3	4		
fig.	Part No.	description	Ref. No.
3	403172	display PCB for microwave GMW1025 L 160mm W 85mm	—
4	403154	keypad PCB induction device GIC3035 L 247mm W 53mm keypad connection 4 contact pins	GIC3035-B16

			
5	6		
fig.	Part No.	description	Ref. No.
5	403166	line filter for microwave type GMW1030 250V 50/60Hz conductor 2 PCB	GMW1030-C04
6	403184	line filter for microwave type GMW1030 250V 50/60Hz conductor 2 PCB	GMW1030-C04

			
7	8		
fig.	Part No.	description	Ref. No.
7	403188	line filter microwave for GMW1025 250V 50/60Hz conductor 2 PCB connection male faston 4,8mm	GMW1025-C04
8	403171	line filter microwave for GMW1025 250V 50-60Hz conductor 2 with fuse T12A	GMW1025-C04

			
9	10		
fig.	Part No.	description	Ref. No.
9	403157	main PCB for induction device GIC4035 L 265mm W 162mm keypad connection 7 contact pins Qty 1 pcs	—
10	403159	main PCB induction device GIC3535 L 265mm W 163mm keypad connection 7 contact pins	GIC3535-D05 old



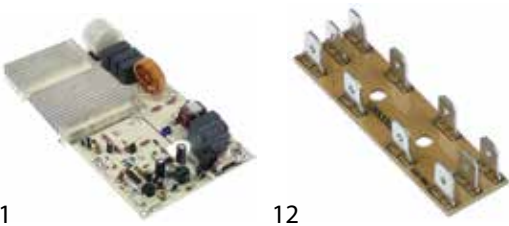 



fig.	Part No.	description	Ref. No.
11	403153	main PCB induction device GIC4035 L 267mm W 160mm keypad connection 4 contact pins	GIC3035-B05
12	403099	PCB fridge 40L L 60mm W 17,5mm Qty 20 pcs	—



fig.	Part No.	description	Ref. No.
13	403189	PCB fridge GHR1040 L 60mm W 17,5mm Qty 1 pcs	RW40.21

### Hounö

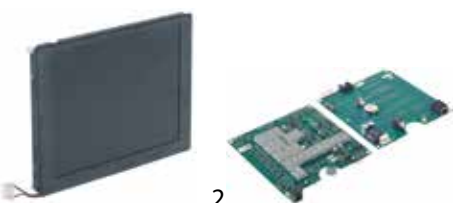 


fig.	Part No.	description	Ref. No.
1	404020	display combi-steamer L 10,4mm W 144mm TFT	30900059
2	404022	display PCB combi-steamer Visual Cooking L 133mm W 139mm	30900014




fig.	Part No.	description	Ref. No.
3	404024	main PCB combi-steamer L 348mm W 100mm type 20 90 0002 Rev:2.2	20900002
4	404023	PCB combi-steamer Visual Cooking for combi-steamer	30900006



fig.	Part No.	description	Ref. No.
5	404021	PCB combi-steamer Visual Cooking W 140mm H 140mm for combi-steamer type Ver 1.67	30900008

### Icematic

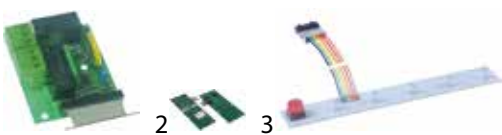 


fig.	Part No.	description	Ref. No.
1	403455	auxiliary PCB blast freezer T14 suitable for ICEMATIC	33580167/0
2	403454	control PCB blast freezer T5 suitable for ICEMATIC	33580168/0
3	401805	display PCB ice maker N201/N301//N501 L 170mm W 25mm	33580151/0




fig.	Part No.	description	Ref. No.
4	401801	keypad PCB ice maker N200/N300/N500	33580024/0
5	403564	PCB for blast chiller L 145mm W 120mm suitable for ICEMATIC 50/60Hz voltage input 230	33580166/4

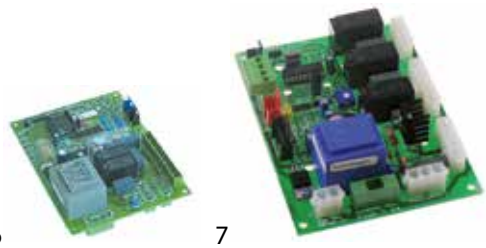 


fig.	Part No.	description	Ref. No.
6	402003	PCB ice maker AC045/055	XP62040316
7	401798	PCB ice maker N200/N300/N500	33580100/0

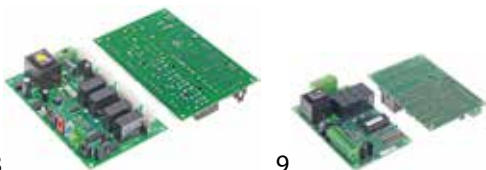 


fig.	Part No.	description	Ref. No.
8	401799	PCB ice maker N201/N301//N501 230V	33580250/0
9	403548	PCB L 140mm W 92mm	33580191/0



fig.	Part No.	description	Ref. No.
10	403021	PCB suitable for Scotsman type WSCM0252	33580064/0



## IGF

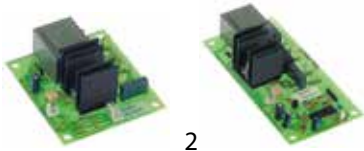 


fig.	Part No.	description	Ref. No.
1	346446	PCB dough rolling machine 2300-B30/B40 230V	2300/B30Z10
2	346445	PCB dough rolling machine 2300-L30/L40 230V	2300/L30Z10

## Irinox



fig.	Part No.	description	Ref. No.
1	401821	keypad PCB blast freezer A3	3600570

## Isa



fig.	Part No.	description	Ref. No.
1	360636	PCB ON-OFF L 120mm W 40mm suitable for ISA	418221547100

## Juno

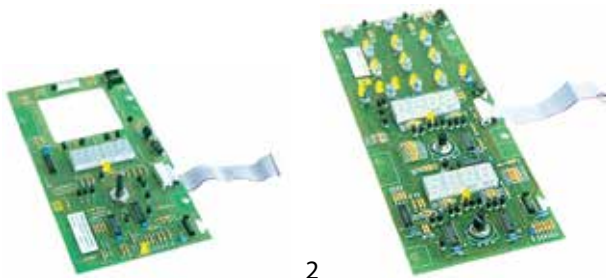 


fig.	Part No.	description	Ref. No.
1	400179	control PCB combi-steamer FCV/G 101/1 102/1	0C3758
2	400188	control PCB combi-steamer FCV/G 101/1 102/1	002725

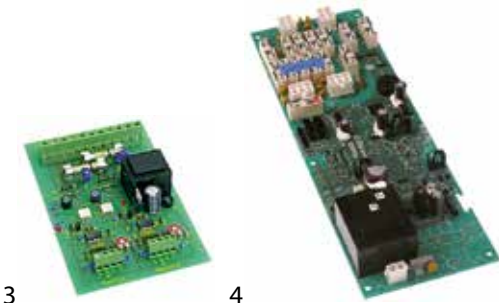 


fig.	Part No.	description	Ref. No.
3	400177	PCB range JUN90133	0H6144
4	401572	power PCB combi-steamer FCV/G 101/1 102/1	0C3762

## Kastel



fig.	Part No.	description	Ref. No.
1	403100	PCB ice maker KP 75 L 115mm W 95mm 230V	K04720

## Krefft

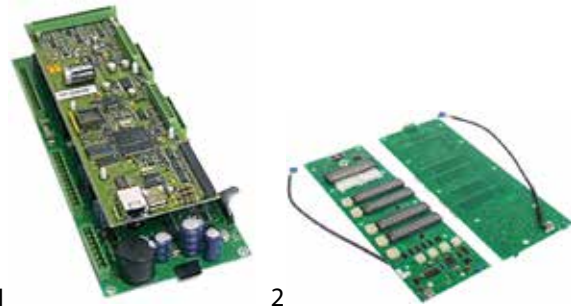 


fig.	Part No.	description	Ref. No.
1	400098	control PCB combi-steamer CD 101/CM 101 without EPROM	—
2	400103	control PCB combi-steamer CM 61-202 L 460 mm W 154 mm 61-202	76-30403020

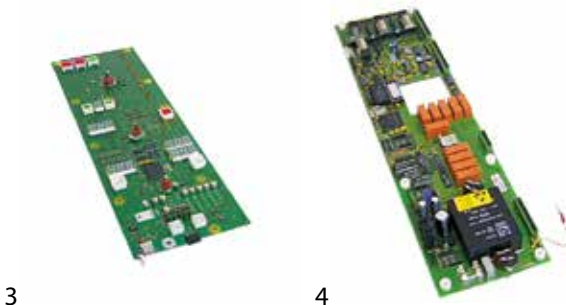 


fig.	Part No.	description	Ref. No.
3	400099	control PCB combi-steamer CM101	76-30403010
4	400107	control PCB combi-steamer CM101 edition CM v. 4.91-97	76-30402030


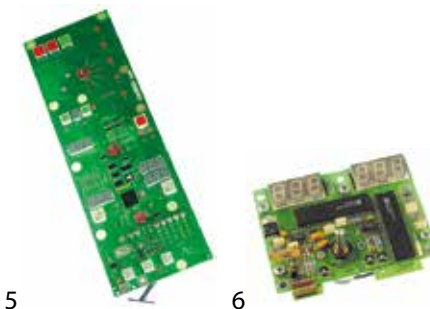 



fig.	Part No.	description	Ref. No.
5	403319	control PCB combi-steamer CPC-Linie CM 61-202/G model since 10/1997	76-30403210
6	400077	PCB combi-steamer CCD 101/201 core temperature	76-30350660

7 8


fig.	Part No.	description	Ref. No.
7	401487	PCB combi-steamer CD 101/CM 101 for fan motor	—
8	400110	PCB combi-steamer level control	—

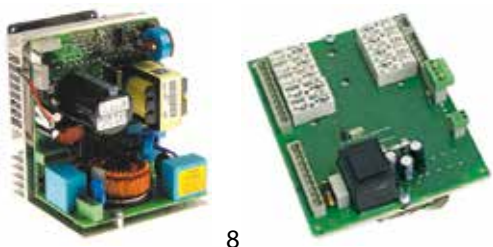 

9

fig.	Part No.	description	Ref. No.
9	361366	PCB dishwasher 11F suitable for DB2 type DB2/EV1/EKP-M	62-215001

**Kromo**

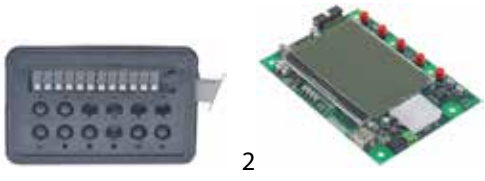 


1 2

fig.	Part No.	description	Ref. No.
1	403222	control PCB dishwasher AX 161/ AX 290 L 160mm W 115mm cable length 970mm with housing Qty 1 pcs	DW50570/H
2	403288	control PCB dishwasher TWIN STAR L 157mm W 112mm with display buttons 6	DW590107




3 4

fig.	Part No.	description	Ref. No.
3	403231	keypad PCB dishwasher 80E/81E L 155mm W 100mm H 25mm with display buttons 6	DW50570/D
4	403221	main PCB dishwasher AX 250/300/310/320/330 L 168 mm W 148 mm for display PCB Qty 1 pcs	DW3006164

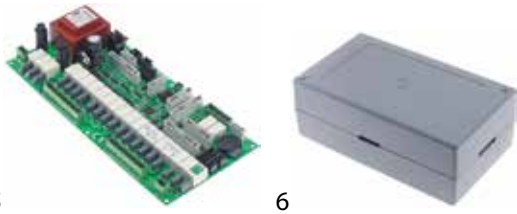 

5 6

fig.	Part No.	description	Ref. No.
5	403286	PCB dishwasher 116EK L 250mm W 118mm Qty 1 pcs	DW590105
6	403230	PCB dishwasher 125EU L 190mm W 110mm H 70mm with housing	DW50603
6	403284	PCB dishwasher Elektron500 L 190mm W 110mm H 70mm with housing Qty 1 pcs	DW50604
6	403283	PCB dishwasher Optima 400 L 190mm W 110mm H 70mm with housing Qty 1 pcs	DW540201
6	403282	PCB dishwasher Optima L 190mm W 110mm H 70mm with housing Qty 1 pcs	DW561060




7 8

fig.	Part No.	description	Ref. No.
7	402687	PCB dishwasher DS40/DS50 for flow meter	DW50584
8	402677	PCB dishwasher DS40/DS50 L 161mm W 90mm	DW50580




9 10

fig.	Part No.	description	Ref. No.
9	403285	PCB dishwasher DS50 L 117mm W 96mm H 43mm with housing Qty 1 pcs	DW50553/E
10	402676	PCB dishwasher HT11/12 L 102mm W 62mm timer	DW50559

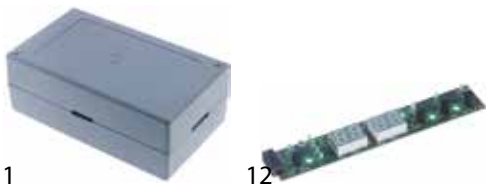 

11 12

fig.	Part No.	description	Ref. No.
11	402682	PCB dishwasher HT600/HT11/HT12 L 160mm W 102mm timer run-time 60/100/180s	DW50557
12	402675	PCB dishwasher KD60 L 185mm W 30mm buttons 4	DW50581

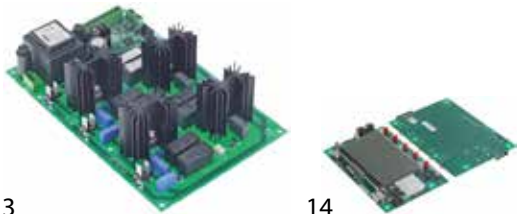 

13 14

fig.	Part No.	description	Ref. No.
13	403287	PCB dishwasher TWIN STAR L 215mm W 140mm Qty 1 pcs	DW590106
14	403558	PCB for dishwasher GR800/900/1000, LP2S, LP3S, LP4S8	DW50650





## Küppersbusch

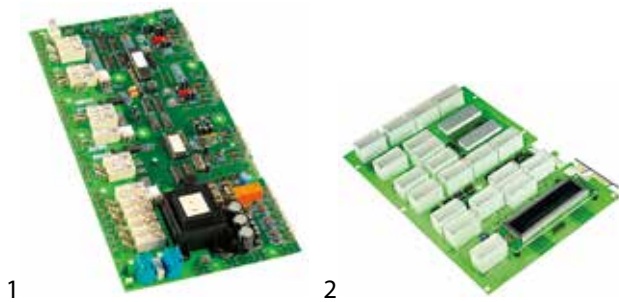 


fig.	Part No.	description	Ref. No.
1	401461	control PCB combi-steamer CBE 106	161630
2	401468	display PCB combi-steamer CBE 106	164885

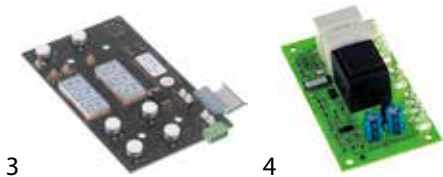 


fig.	Part No.	description	Ref. No.
3	400966	PCB deep fryer/boiling pen FEF/FEK	165287
4	400411	PCB pyroceram range CH 40/45/80 230V	164883



fig.	Part No.	description	Ref. No.
5	401932	relay PCB fryer FEF__e	164900

## La Minerva



fig.	Part No.	description	Ref. No.
1	403553	PCB bone saw VG100 L 130mm W 44mm suitable for GIERRE	20803406

## La San Marco



fig.	Part No.	description	Ref. No.
1	400494	display PCB coffee machine	108406
2	400490	keypad PCB coffee machine mounting pos. right	108274
3	401923	PCB coffee grinder L 62mm W 44mm 230V	108604

## Lainox

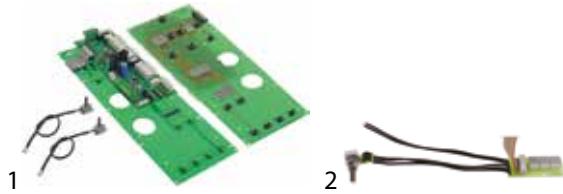 


fig.	Part No.	description	Ref. No.
1	403472	control PCB combi-steamer VE 061/1011 L 410mm W 150mm suitable for LAINOX	R65301400
2	401955	display PCB combi-steamer ME 110/120	LAR65300270

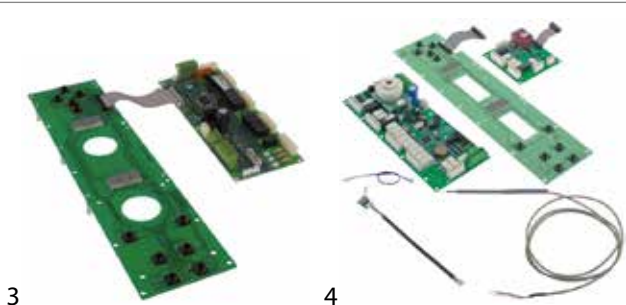 


fig.	Part No.	description	Ref. No.
3	401958	keypad PCB combi-steamer GEMT	LAR65302150
4	403498	keypad PCB combi-steamer GEMT complete	LAR65302160

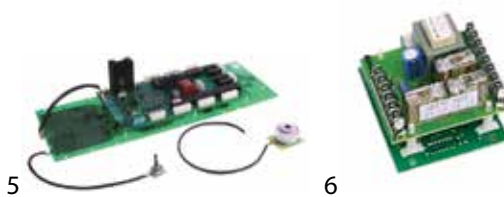 


fig.	Part No.	description	Ref. No.
5	401591	keypad PCB combi-steamer ME061T complete	LAR65301460
6	400140	keypad PCB combi-steamer ME106M with keypad	LAR65300500

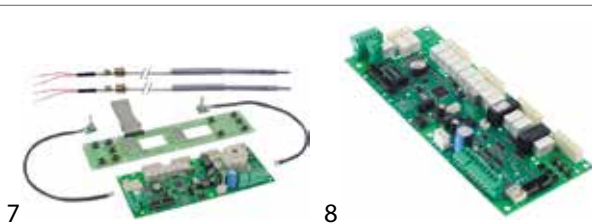 


fig.	Part No.	description	Ref. No.
7	401661	keypad PCB combi-steamer MVE04 kit	LAR65301800
8	403209	main PCB combi-steamer L 250mm W 105mm LAINOX	LAR65302280


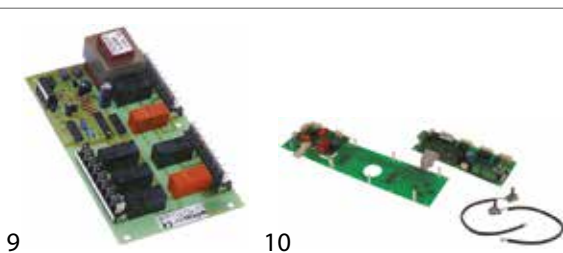 


fig.	Part No.	description	Ref. No.
9	400141	PCB blast chiller suitable for LAINOX	LAR65300520
10	400000	PCB combi-steamer EMT06D/GMT06D	LAR65301300 LAR65301310

11 12

fig.	Part No.	description	Ref. No.
11	402825	PCB combi-steamer GEMT L 130mm W 86mm level control new edition steam generator EVCO	LAR65301480 EVCO
12	401962	PCB combi-steamer HME 611/1011	LAR65301910

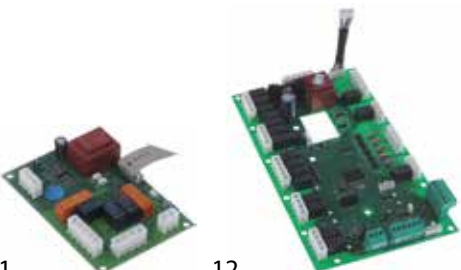 

13


fig.	Part No.	description	Ref. No.
13	402973	PCB oven BPG044-104 L 140mm W 80mm for cooler control	LAR63130050

### Lamber



1 2


fig.	Part No.	description	Ref. No.
1	403277	display PCB dishwasher 015-24L L 100mm W 40mm	0500403
2	403281	PCB dishwasher LC350/LC500 L 130mm W 120mm H 55mm with housing Qty 1 pcs	0306005



3

fig.	Part No.	description	Ref. No.
3	403266	thermometer dishwasher L 10mm W 9mm temperature 24V	0500406


### Liebherr



1

fig.	Part No.	description	Ref. No.
1	402069	keypad PCB fridge GKV5710	6114489-00


### Mach



1

fig.	Part No.	description	Ref. No.
1	402953	control PCB dishwasher MB630/930 L 133mm W 82mm	500086900

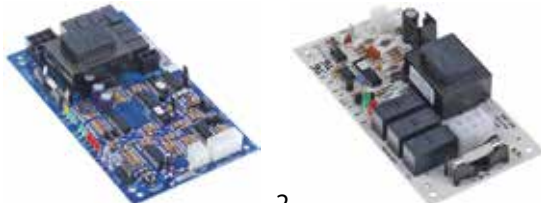 
### Manitowoc



1 2

fig.	Part No.	description	Ref. No.
1	403123	PCB ice cube maker L 175mm W 99mm	MA2006199
2	403124	PCB ice maker L 153mm W 77mm	MA-7629073


### Marco



1

fig.	Part No.	description	Ref. No.
1	402767	keypad PCB coffee machine Maxibrew 2, Quickbrew 2 suitable for MARCO edition 2002 buttons 4	1600324
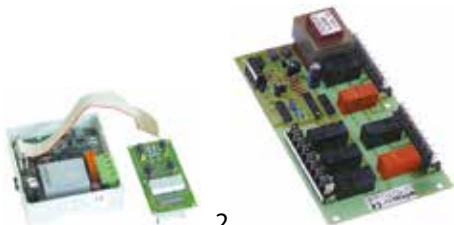 
### Mareno



1 2

fig.	Part No.	description	Ref. No.
1	400687	keypad PCB fryer EFE....K	MACM295800
2	400141	PCB blast chiller suitable for LAINOX	—



## MBM-Italia

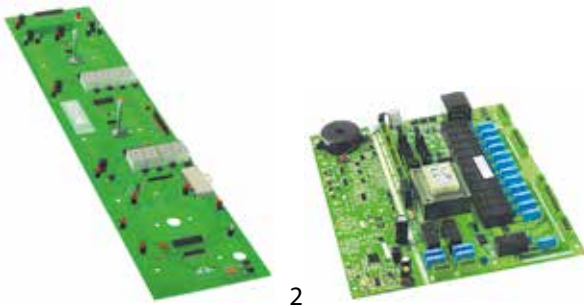 


fig.	Part No.	description	Ref. No.
1	401232	keypad PCB combi-steamer FEM 67/207	RTFOC00672
2	401668	main PCB combi-steamer	RTFOC00671

## Meiko

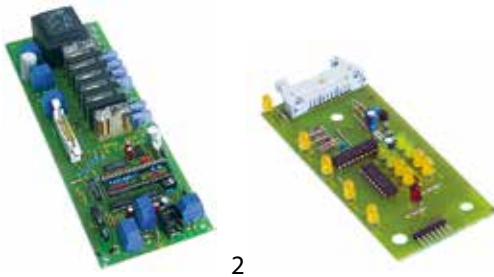 


fig.	Part No.	description	Ref. No.
1	400221	control PCB dishwasher DV40, DV80, DV120B	0124190
2	400211	display PCB dishwasher DV40, DV80, DV120B	0124196

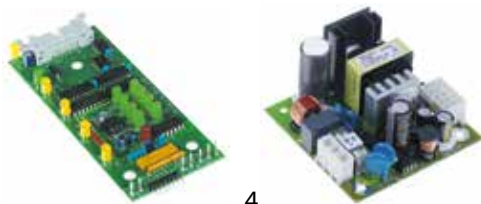 


fig.	Part No.	description	Ref. No.
3	400799	display PCB dishwasher ECO STAR	9532115
4	403014	net board dishwasher FV40.2/EcoStar530F L 81mm W 80mm 80W type MIKE-NET1	9643652

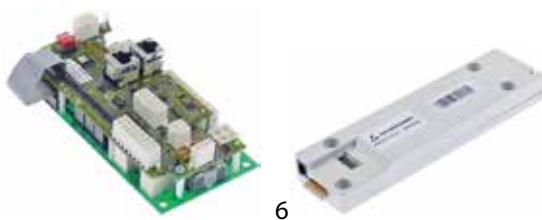 


fig.	Part No.	description	Ref. No.
5	403228	PCB dishwasher FV40.2/EcoStar530F L 150mm W 75mm type MIKE2-E/A1	9678638
6	403227	PCB dishwasher FV40.2/EcoStar530F L 210mm W 55mm with housing type MIKE2-CPU1	9541525



fig.	Part No.	description	Ref. No.
7	402944	PCB dishwasher M2-III-CE3 NIV2 A L 97mm W 89mm level control	0124323

## Melitta

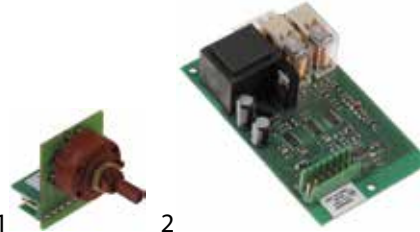 


fig.	Part No.	description	Ref. No.
1	402107	control PCB coffee machine 16889	11231
2	402108	control PCB coffee machine 16889	15710



fig.	Part No.	description	Ref. No.
3	402109	control PCB coffee machine 16889	1011319

## Metos



fig.	Part No.	description	Ref. No.
1	403230	PCB dishwasher 125EU L 190mm W 110mm H 70mm with housing	50603

## MIWE



fig.	Part No.	description	Ref. No.
1	403269	PCB oven L 205mm W 167mm complete incl. fastening plate	504078.90A





MKN

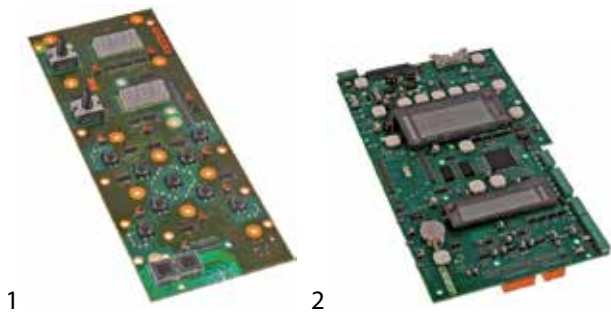 


fig.	Part No.	description	Ref. No.
1	401697	keypad PCB combi-steamer Hans Dampf	202690
2	401698	keypad PCB combi-steamer Hans Dampf	203745

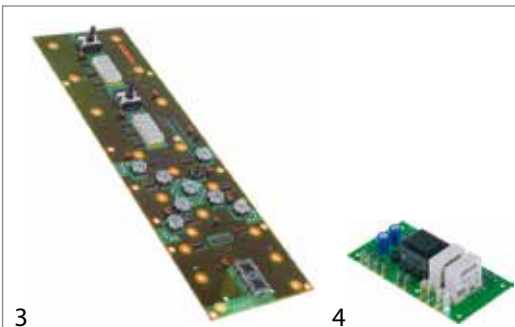 


fig.	Part No.	description	Ref. No.
3	403307	keypad PCB combi-steamer JUNIOR L 410mm W 115mm buttons 10	202128
4	400074	PCB pyroceram range 2023206-00 400V	203911

Moretti

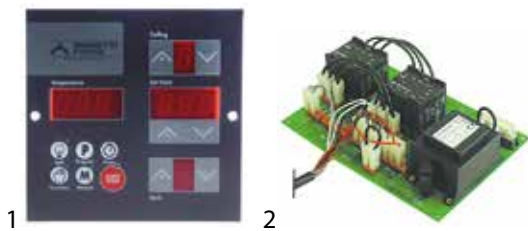 


fig.	Part No.	description	Ref. No.
1	403060	keypad PCB electric pizza oven MHC L 140mm W 140mm buttons 6	768000R0
2	400731	main PCB pizza press	74670820

Morice



fig.	Part No.	description	Ref. No.
1	403134	keypad PCB induction device L 85mm W 45mm with ribbon cable buttons 2	DE3052

N&W

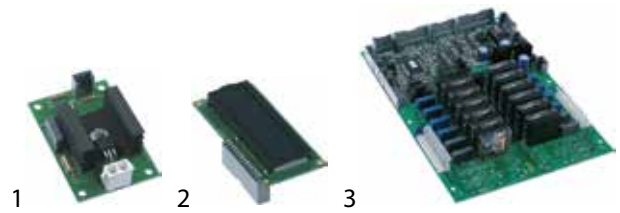 


fig.	Part No.	description	Ref. No.
1	402088	control PCB coffee machine	0V2143
2	402090	display coffee machine	251653
3	402091	PCB coffee machine KORO 16Bit	252604

Nayati



fig.	Part No.	description	Ref. No.
1	400074	PCB pyroceram range 2023206-00 400V	PD424F

NuovaSimonelli



fig.	Part No.	description	Ref. No.
1	403253	net board coffee grinder MYTHOS 110V with housing 115V	15030005
2	402409	PCB coffee machine Appia L 164mm W 75mm 12V type ECO2AAPP1A220V supply 230VAC	04900732
3	402411	PCB coffee machine Appia L 75mm W 164mm 12V type ECO2COMP220V supply 230VAC	04900740



fig.	Part No.	description	Ref. No.
4	402403	PCB coffee machine Aurelia L 160mm W 132mm 12V type AVR4VIP220V supply 230VAC	04900714

OEM



fig.	Part No.	description	Ref. No.
1	403457	main PCB pizza oven L 91mm W 84mm suitable for OEM 230V	OMHE23400



## Offcar

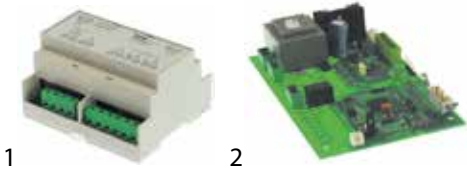 


fig.	Part No.	description	Ref. No.
1	401171	PCB combi-steamer	6010084
2	401167	PCB combi-steamer VE 06/10 50/60Hz 230V	—

## Olis



fig.	Part No.	description	Ref. No.
1	401195	PCB combi-steamer CV10E complete without potentiometer	BN3103245

## Omas



fig.	Part No.	description	Ref. No.
1	403570	PCB for slicer OG30E suitable for OMAS	S3322
2	401511	PCB slicer 230V	S3290



fig.	Part No.	description	Ref. No.
3	403011	PCB slicer A31E 230V	S3227

## Öztiryakiler



fig.	Part No.	description	Ref. No.
1	404025	control PCB freezer V13.06 L 156mm edition WC3LD-L0TC1701 H 44mm buttons 6 ELIWELL	6234.00009.50

## Palux

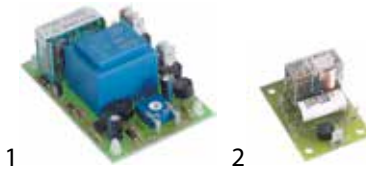 


fig.	Part No.	description	Ref. No.
1	361366	PCB dishwasher 11F suitable for DB2 type DB2/EV1/EKP-M	651079
2	400027	relay PCB vario cooker 516678 with relay output	317225

## Piron

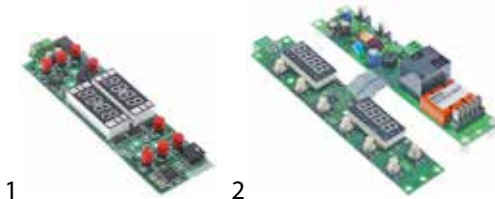 


fig.	Part No.	description	Ref. No.
1	403225	control PCB convection oven G544	SCH30011
2	403206	keypad PCB convection oven 500/800 L 200mm H 40mm with display mounting pos. horizontal buttons 7	SCH30008



fig.	Part No.	description	Ref. No.
3	403239	PCB convection oven 824/524 L 180mm W 70mm 12V voltage AC 230V	SCH30010

## Pitco



fig.	Part No.	description	Ref. No.
1	698535	PCB fryer L 130mm W 90mm 24V H 55mm PITCO Qty 1 pcs	60134001
2	698539	PCB fryer L 380mm W 150mm 24V H 60mm mounting pos. front PITCO Qty 1 pcs	PP11012
2	698540	PCB fryer L 380mm W 160mm 24V H 55mm 1,67A mounting pos. front PITCO Qty 1 pcs	PP11306



fig.	Part No.	description	Ref. No.
3	698534	PCB fryer L 380mm W 155mm 24V H 40mm 1,67A mounting pos. front PITCO Qty 1 pcs	60126601
4	698541	PCB fryer L 385mm W 160mm 24V H 60mm 1,67A mounting pos. front PITCO Qty 1 pcs	PP11372
4	698542	PCB fryer L 390mm W 155mm 24V H 55mm 1,67A mounting pos. front PITCO Qty 1 pcs	PP11370

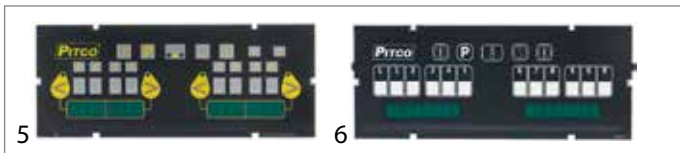 


fig.	Part No.	description	Ref. No.
5	698536	PCB fryer L 390mm W 160mm 24V H 60mm 1,67A mounting pos. front PITCO Qty 1 pcs	60137701-C
6	698532	PCB fryer L 400mm W 220mm 24V H 80mm 1,2A mounting pos. front PITCO Qty 1 pcs	60149501-CL



fig.	Part No.	description	Ref. No.
7	698537	PCB fryer L 99mm W 69mm 24V H 20mm PITCO Qty 1 pcs	60127301
8	698533	PCB L 115mm W 70mm 24V H 20mm PITCO Qty 1 pcs	60144002-C



fig.	Part No.	description	Ref. No.
9	698538	PCB L 240mm W 160mm 24V H 50mm 1,67A PITCO Qty 1 pcs	PP10939

Pizza-Group

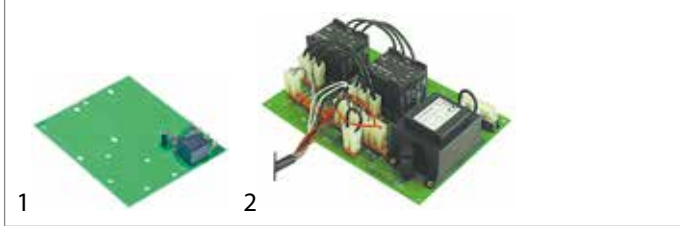 


fig.	Part No.	description	Ref. No.
1	403208	control PCB dough mixers TF17/22/30 TR17/22/30 L 124mm W 102mm 230/400V	A96ZN00055
2	400731	main PCB pizza press	A88SE66001



fig.	Part No.	description	Ref. No.
3	692027	PCB dough rolling machine STP30/40 230V new edition	A88CY78001
4	380430	relay PCB pizza oven FGM 1/90	A88SE81001

Project



fig.	Part No.	description	Ref. No.
1	401049	PCB dishwasher LP10/20/30	CT215022
2	400899	power PCB dishwasher LP10/20/30 without EPROM	—

Rancilio

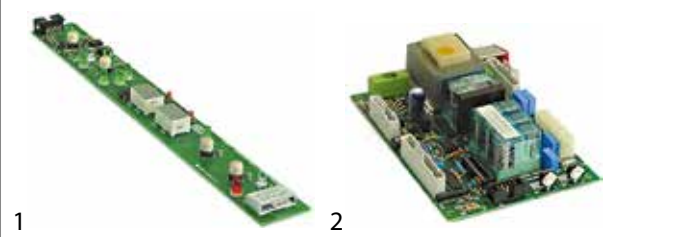 


fig.	Part No.	description	Ref. No.
1	400897	display PCB dishwasher GS 60	65227059
2	400899	power PCB dishwasher LP10/20/30 without EPROM	65215023

Rational

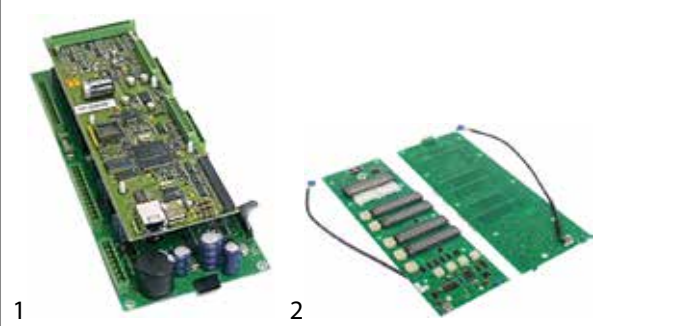 


fig.	Part No.	description	Ref. No.
1	400098	control PCB combi-steamer CD 101/CM 101 without EPROM	3040.3001ET
2	400103	control PCB combi-steamer CM 61-202 L 460 mm W 154 mm 61-202	3040.3020

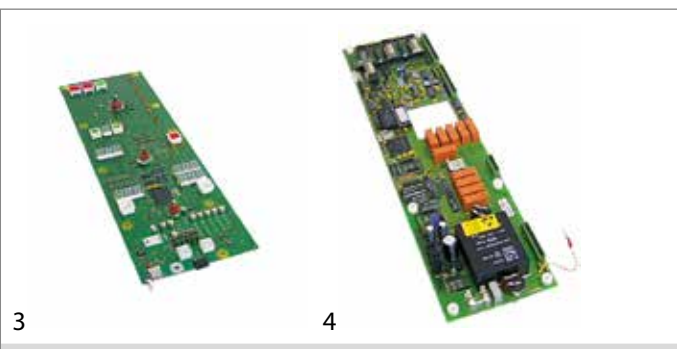 


fig.	Part No.	description	Ref. No.
3	400099	control PCB combi-steamer CM101	3040.3010
4	400107	control PCB combi-steamer CM101 edition CM v. 4.91-97	3040.2030





fig.	Part No.	description	Ref. No.
5	402827	control PCB combi-steamer CM101 L 372mm W 120mm type RAL115ET	42.00.047P
6	403319	control PCB combi-steamer CPC-Linie CM 61-202/G model since 10/1997	3040.3210

fig.	Part No.	description	Ref. No.
7	401475	control PCB combi-steamer SCC Line	42.00.002P
8	400077	PCB combi-steamer CCD 101/201 core temperature	3035.0660

fig.	Part No.	description	Ref. No.
9	401487	PCB combi-steamer CD 101/CM 101 for fan motor	3040.3040P
10	401662	PCB combi-steamer CM101 conversion kit	87.00.139

fig.	Part No.	description	Ref. No.
11	400110	PCB combi-steamer level control	3040.3100ET
12	401629	PCB combi-steamer SCC Line	42.00.064P

### Retigo

fig.	Part No.	description	Ref. No.
1	404013	display combi-steamer Blue FreeScale2011 L 17mm W 13mm model XC10-2000-10 H 50mm with control	XC10-2000
2	404012	display combi-steamer Orange FreeScale 2011 L 17 mm W 13 mm model XC10-2100 with control	XC10-2100

fig.	Part No.	description	Ref. No.
3	404014	relay PCB combi-steamer B1011/B2011 L 200mm W 115mm model RP20B.15 with ribbon cable H 30mm	EA14-0080

### RGV

fig.	Part No.	description	Ref. No.
1	400785	PCB slicer 300SCEP 230V	00000000359

### Rieber

fig.	Part No.	description	Ref. No.
1	402968	control PCB for ceramic stove top L 140mm W 39mm	91010317

### Robot-Coupe

fig.	Part No.	description	Ref. No.
1	402967	control PCB hand blenders Mini MP170V 230V with knob	89168
2	361922	control PCB vegetable slicers CL50E cable length 200mm model CL50E 50/60Hz	102481
3	403566	PCB vegetable slicers R3 / R4 / R301 / R401 suitable for ROBOT COUPE	103693S




Roller Grill



1

fig.	Part No.	description	Ref. No.
1	403563	PCB gril Panini L 32mm W 72mm timer	A02017

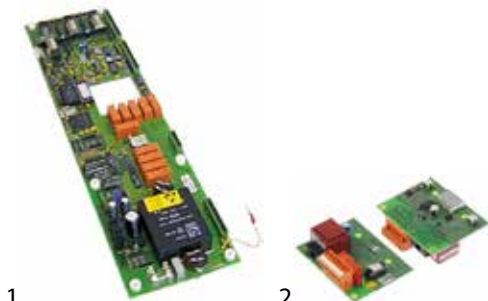 Rosinox



1

2


fig.	Part No.	description	Ref. No.
1	400107	control PCB combi-steamer CM101 edition CM v. 4.91-97	RX27450238
2	404019	control PCB fryer model for fryer 50Hz heating 230V	RX94035037



3

4


fig.	Part No.	description	Ref. No.
3	401661	keypad PCB combi-steamer MVE04 kit	RX94814232
4	403231	keypad PCB dishwasher 80E/81E L 155mm W 100mm H 25mm with display buttons 6	RX94814055

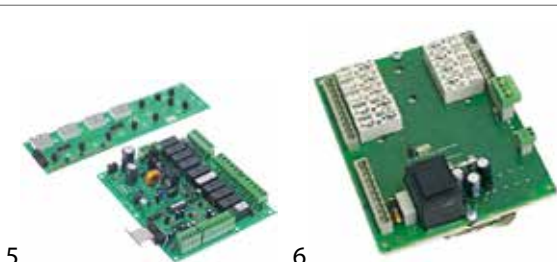 

5

6


fig.	Part No.	description	Ref. No.
5	403221	main PCB dishwasher AX 250/300/310/320/330 L 168 mm W 148 mm for display PCB Qty 1 pcs	RX94813997
6	400110	PCB combi-steamer level control	RX27450220

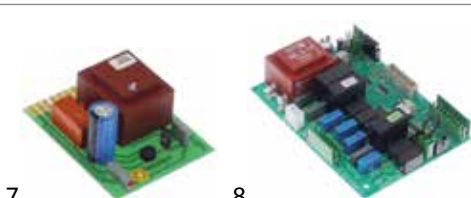 

7

8

fig.	Part No.	description	Ref. No.
7	403130	PCB combi-steamer TVTS L 90mm W 70mm level control	RX94023587
8	402695	PCB dishwasher C1000/C1300 L 145mm W 105mm	RX94813816

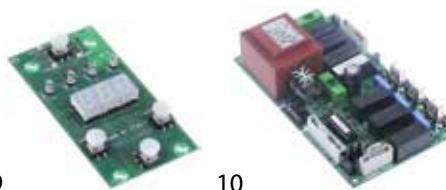 

9

10

fig.	Part No.	description	Ref. No.
9	402881	PCB dishwasher CE-GE L 126mm W 63mm suitable for COMENDA	RX94813861
10	402677	PCB dishwasher DS40/DS50 L 161 mm W 90mm	RX94814079



11

12

fig.	Part No.	description	Ref. No.
11	402676	PCB dishwasher HT11/12 L 102mm W 62mm timer	RX94814039
12	698492	PCB level regulator combi-steamer suitable for ROSINOX level control	RX94019130

Salvis



1

fig.	Part No.	description	Ref. No.
1	400411	PCB pyroceram range CH 40/45/80 230V	179303

Sammic



1

2

fig.	Part No.	description	Ref. No.
1	401850	PCB cutter SK3 230V	2052738
2	403309	PCB dishwasher S-100/S-120/SC1100 L 140mm W 100mm Qty 1 pcs	2319053

Sanremo



1

fig.	Part No.	description	Ref. No.
1	402486	keypad PCB coffee machine MILANO L 123mm W 35mm buttons 6	101120878




## Saro



1

fig.	Part No.	description	Ref. No.
1	402954	control PCB ice cube maker ZB26/50 L 121mm W 73mm	325-5006
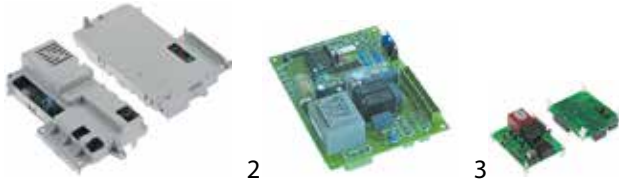 
## Scotsman




1

2

3

fig.	Part No.	description	Ref. No.
1	401801	keypad PCB ice maker N200/N300/N500	CM33580024
2	402003	PCB ice maker AC045/055	62040316
3	403478	PCB ice maker L 90mm W 72mm suitable for Simag H 30mm	620507.01

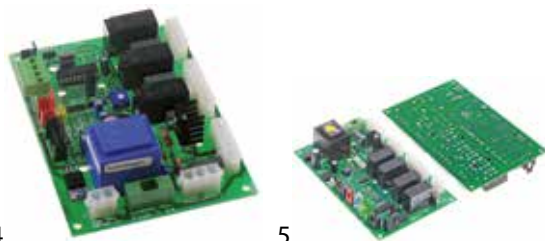 

4

5


fig.	Part No.	description	Ref. No.
4	401798	PCB ice maker N200/N300/N500	—
5	401799	PCB ice maker N201/N301//N501 230V	CM33580150



6

fig.	Part No.	description	Ref. No.
6	403021	PCB suitable for Scotsman type WSCM0252	1114285

## SF-Maschinen

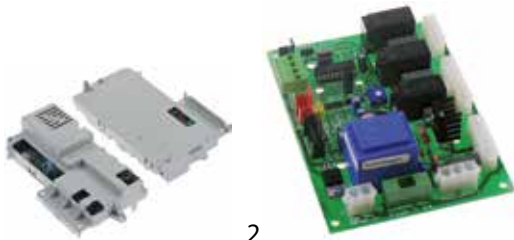 


1

2

fig.	Part No.	description	Ref. No.
1	401801	keypad PCB ice maker N200/N300/N500	I-384
2	401798	PCB ice maker N200/N300/N500	I-395


## Sharp

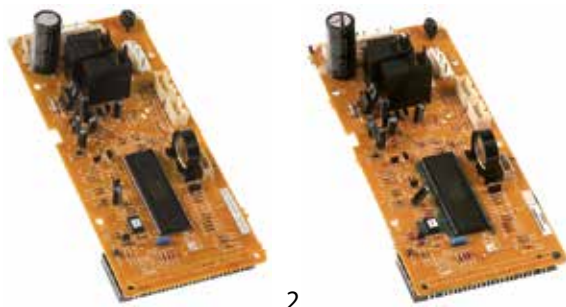 

1

2

fig.	Part No.	description	Ref. No.
1	401014	display PCB microwave R23	DPWBFC482WRKZ
2	401043	display PCB microwave R23	DPWBFC484WRKZ

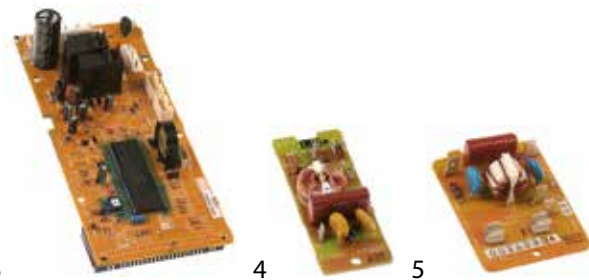 

3

4

5


fig.	Part No.	description	Ref. No.
3	401045	display PCB microwave R25	DPWBFC366WRKZ1
4	401048	PCB microwave R15 type FPWBFA367	FPWBFA367WRKZ
5	401046	PCB microwave R23 type 06XA335A	FPWBFA335WRE0



6

fig.	Part No.	description	Ref. No.
6	401047	PCB microwave R25 type AA18J6FC372	DPWBFC372WRKZ


## Silanos

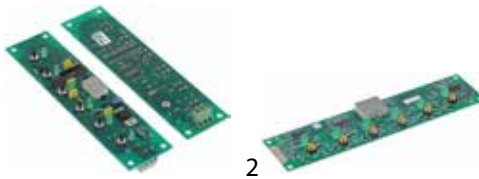 

1

2

fig.	Part No.	description	Ref. No.
1	403047	keypad PCB buttons 6	909029
2	403212	keypad PCB dishwasher GDW1001/A670	909350

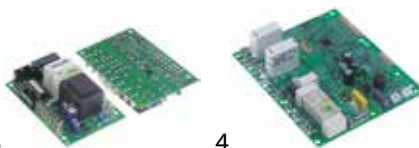 

3

4

fig.	Part No.	description	Ref. No.
3	403559	PCB dishwasher	907258
4	402915	PCB dishwasher GDW1001 L 143mm W 122mm	909348



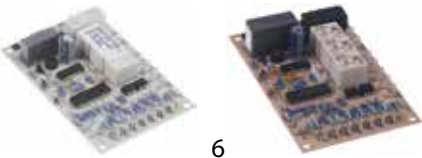 



fig.	Part No.	description	Ref. No.
5	402965	PCB dishwasher GGW2001 L 122mm W 80mm 50/60Hz 230/240V voltage AC	907178
6	401029	PCB dishwasher LF 50 L 122mm W 80mm Qty 1 pcs	907174

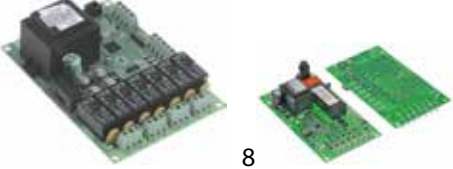 


fig.	Part No.	description	Ref. No.
7	403020	PCB dishwasher LP57 TRONIC	909027
8	403255	PCB dishwasher N700/NE1300/S026/S030 L 150mm W 110mm	907169

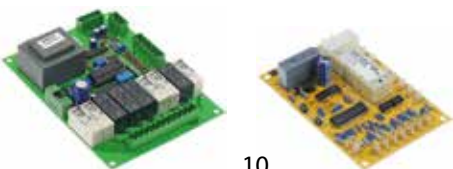 


fig.	Part No.	description	Ref. No.
9	403326	PCB dishwasher Tronic L 145mm W 116mm	909012
10	403276	PCB warewashing Tronic L 122mm W 80mm for timer Qty 1 pcs	907181

### Silko




fig.	Part No.	description	Ref. No.
1	400687	keypad PCB fryer EFE.....K	MACM295800

### Simag




fig.	Part No.	description	Ref. No.
1	401805	display PCB ice maker N201/N301//N501 L 170mm W 25mm	—
2	401801	keypad PCB ice maker N200/N300/N500	—

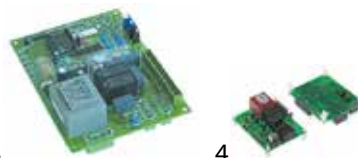 


fig.	Part No.	description	Ref. No.
3	402003	PCB ice maker AC045/055	—
4	403478	PCB ice maker L 90mm W 72mm suitable for Simag H 30mm	620507-01

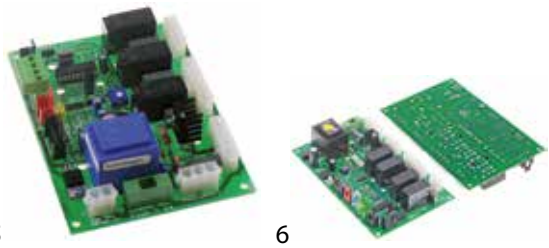 


fig.	Part No.	description	Ref. No.
5	401798	PCB ice maker N200/N300/N500	—
6	401799	PCB ice maker N201/N301//N501 230V	—

### Sirman




fig.	Part No.	description	Ref. No.
1	401731	control PCB drink mixer Orione 230V	IB5940915
2	401727	PCB cutter C4-C6 230V	19413007
3	401730	PCB drink mixer Dragone 50/60Hz 230V	IB5940800




fig.	Part No.	description	Ref. No.
4	401732	PCB drink mixer Orione 50Hz 230V	IB5940910
5	401729	PCB drink mixer Sirio 50/60Hz 110-250V 1,5A	IB5940005
6	401728	PCB drink mixer Sirio 50/60Hz 120/240V 1,6A	IB5940000




fig.	Part No.	description	Ref. No.
7	403515	PCB fruit squeezer APOLLO L 111mm W 56mm 230V	IB5940702
8	300367	PCB hand blenders CICLONE 230V with potentiometer	IB5944014
9	401953	PCB hand blenders VORTEX 230V with potentiometer	IB5944010

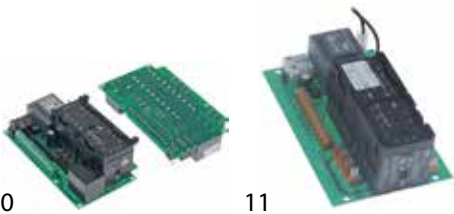 



fig.	Part No.	description	Ref. No.
10	403439	PCB meat mincer 12 230/400V	LF1033031
11	401738	PCB meat mincer Mod.12 230/400V type TGM7-L	IV5940505T

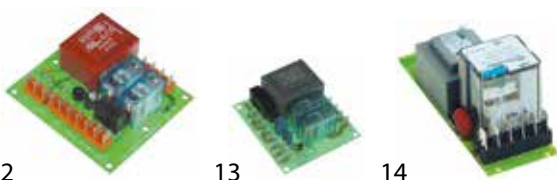 


fig.	Part No.	description	Ref. No.
12	401561	PCB meat mincer/cheese grater Mod.12-22 230V	MF2140
13	401359	PCB meat mincer/cheese grater T12 230V	MF0160
14	400955	PCB slicer BAYONNE 230/400V	19411008

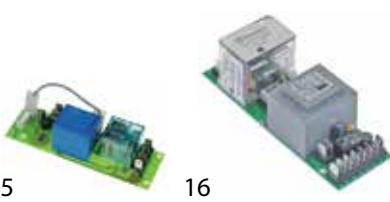 


fig.	Part No.	description	Ref. No.
15	400954	PCB slicer BAYONNE 50/60Hz 230V	19411007
16	403315	PCB slicer CANOVA L 128mm W 42mm H 42mm	19411000.06

### Staff Ice System




fig.	Part No.	description	Ref. No.
1	403468	control PCB ice maker MG14 L 49mm W 25mm suitable for STAFF ICE cable length 1400mm	30/50048000

### Star10

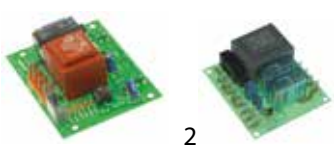 


fig.	Part No.	description	Ref. No.
1	692027	PCB dough rolling machine STP30/40 230V new edition	009451.42
2	401359	PCB meat mincer/cheese grater T12 230V	AM.F2140

### Teikos

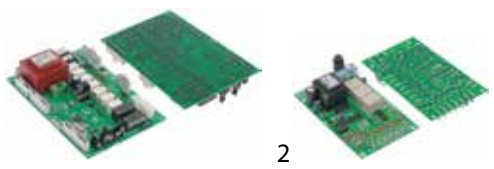 


fig.	Part No.	description	Ref. No.
1	403572	PCB dishwasher L 178mm W 125mm	215032-1
2	403537	PCB warewashing L 133mm W 82mm for timer	842134




fig.	Part No.	description	Ref. No.
3	403219	PCB warewashing TS420/TS820 L 73mm W 66mm for timer type ELH.0	842130

### Thermoplan

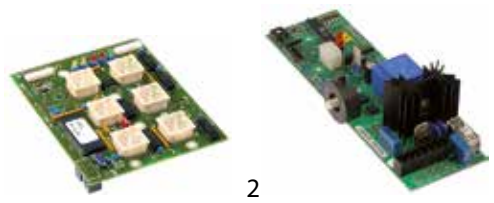 


fig.	Part No.	description	Ref. No.
1	401687	keypad PCB milk foamer F5/F10	106,840
2	401686	keypad PCB milk foamer Foamino	106,838



fig.	Part No.	description	Ref. No.
3	401685	PCB milk foamer	103,987
4	401688	PCB milk foamer F5/F10	103,993




fig.	Part No.	description	Ref. No.
5	401689	PCB milk foamer F5/F10	104,669

### Thirote



1

fig.	Part No.	description	Ref. No.
1	403093	PCB dishwasher L 135mm W 82mm	2002140H

### TurboChef



1

fig.	Part No.	description	Ref. No.
1	403051	PCB microwave Turbochef NGC, SAGE 2, SUBWAY countries (Europe,Asia,Pacific)	CON-3007-8-7

### Univer-Bar



1

fig.	Part No.	description	Ref. No.
1	692214	PCB warewashing MID15/COSMO/ERGON L 121mm W 79mm 50/60Hz voltage input 230/240 Vac 230V 17A	4850


### WEGA



1

fig.	Part No.	description	Ref. No.
1	400787	display espresso machine Pegaso	WY26020

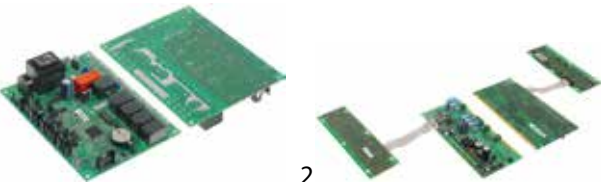 
### Whirlpool



1

2

fig.	Part No.	description	Ref. No.
1	403442	PCB blast freezer BC100 L 165mm W 120mm suitable for ZANUSSI 50/60Hz 230V H 40mm 2,8A	—
2	403443	PCB blast freezer BCF 72/144 suitable for ZANUSSI	—

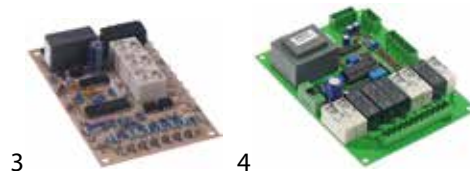 

3

4

fig.	Part No.	description	Ref. No.
3	401029	PCB dishwasher LF 50 L 122mm W 80mm Qty 1 pcs	—
4	403326	PCB dishwasher Tronic L 145mm W 116mm	483286008844


### Williams



1

fig.	Part No.	description	Ref. No.
1	361940	display PCB L 225mm W 50mm suitable for WILLIAMS	THERM560

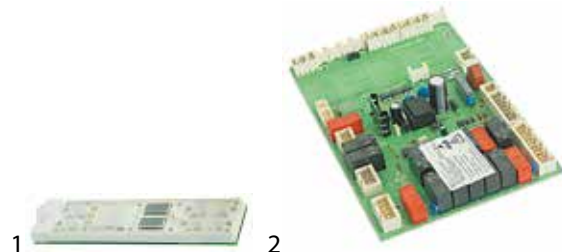 
### Winterhalter



1

2

fig.	Part No.	description	Ref. No.
1	400663	control PCB dishwasher GS 202/215/302	3124222
2	400664	control PCB dishwasher GS 202/215/302 WPS004	3105139

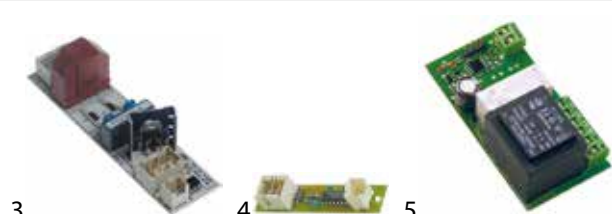 

3

4

5

fig.	Part No.	description	Ref. No.
3	402814	PCB dishwasher GS 202/215/302 for softstart type WSA4	3113180
4	400667	PCB dishwasher GS 202/215/302 level control	3113164
5	402931	PCB dishwasher GS501/502/515 L 80mm W 40mm level control	3113165





## Zanussi

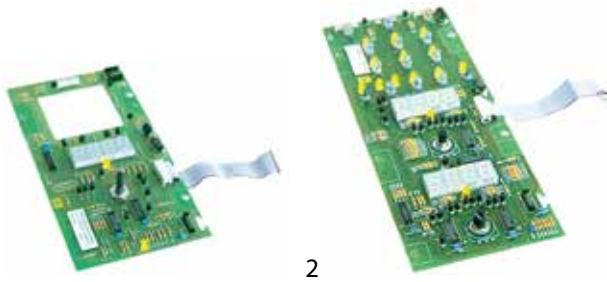 


fig.	Part No.	description	Ref. No.
1	400179	control PCB combi-steamer FCV/G 101/1 102/1	0C3758
2	400188	control PCB combi-steamer FCV/G 101/1 102/1	002725

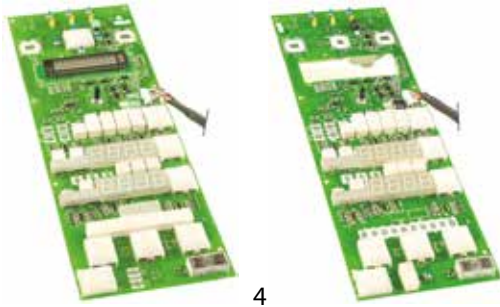 


fig.	Part No.	description	Ref. No.
3	400747	keypad PCB combi-steamer FCZ06/10/20	0C0043
4	400749	keypad PCB combi-steamer FCZ06/10/20	0C0041

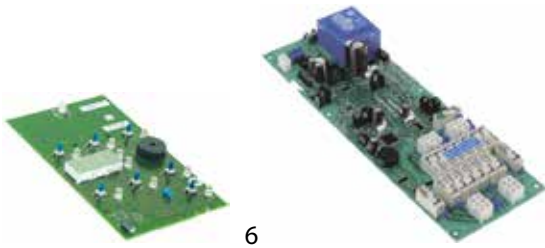 


fig.	Part No.	description	Ref. No.
5	400923	keypad PCB dishwasher LS14/ET12	0L1627
6	403025	main PCB combi-steamer COP35 LIV. ACTIVE L 334mm W 110mm 230V	0C4347

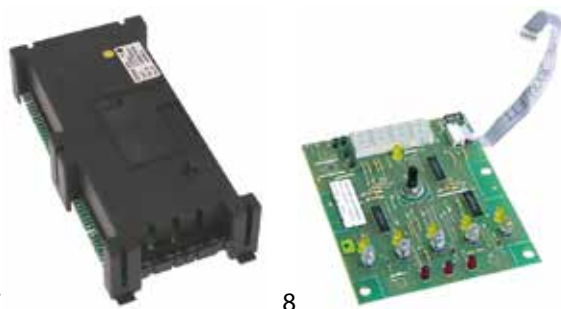 


fig.	Part No.	description	Ref. No.
7	401637	main PCB dishwasher	0L1811
8	400187	PCB combi-steamer FCV/G 101/1 102/1	002666

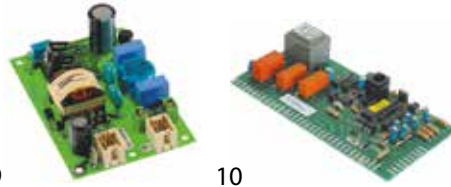 


fig.	Part No.	description	Ref. No.
9	400751	PCB combi-steamer FCZ06/10/20 level A	007047
10	400928	PCB dishwasher LS61-LS62	048833


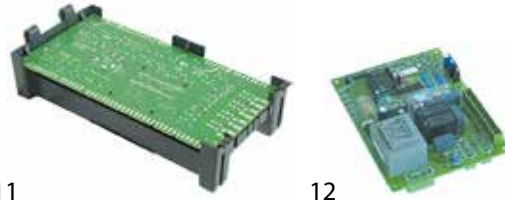 


fig.	Part No.	description	Ref. No.
11	400917	PCB dishwasher WT 4	0L1810
12	402003	PCB ice maker AC045/055	086368

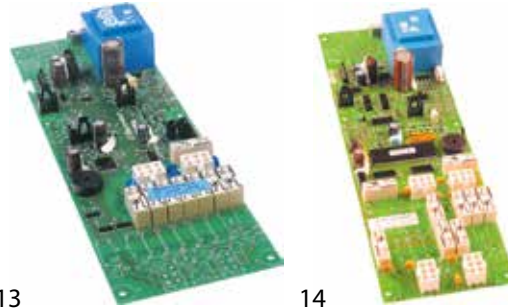 

13	401617	power PCB combi-steamer FCV 6GL	0C3757
14	400748	power PCB combi-steamer FCV/G 101/1 102/1	0C3761

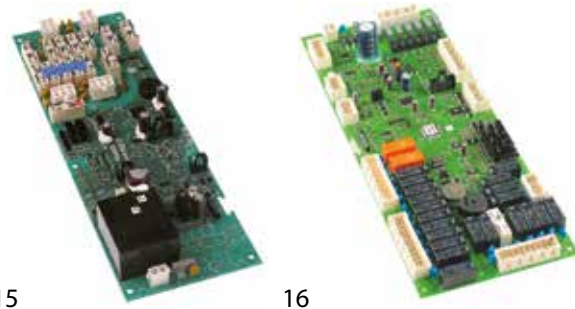 


fig.	Part No.	description	Ref. No.
15	401572	power PCB combi-steamer FCV/G 101/1 102/1	0C3762
16	400750	power PCB combi-steamer FCZ06/10/20	0C0042



## Triacs

### ACP



1

fig.	Part No.	description	Ref. No.
1	403420	Triac 25A 600W type TG25E60	D7681501
1	403421	Triac 25A 600W type TG25E60	R0157373
1	403422	Triac 40A 600W type TG40E60	59002026

## central units

### Alimacchine



1

fig.	Part No.	description	Ref. No.
1	401371	control box complete 400V	93NT20 400V

### Anitec



1

fig.	Part No.	description	Ref. No.
1	402004	control box	FR.62046202

### Astoria



1

2

fig.	Part No.	description	Ref. No.
1	400539	control box for coffee machine 1-3-group 230V	18090016
2	402217	control box for coffee machine 230V	18090048



3

fig.	Part No.	description	Ref. No.
3	400796	control box for coffee machine 3-group 230V	18090031

### Aurora



1

fig.	Part No.	description	Ref. No.
1	402250	central unit for coffee machine 3 groups 230V AC	550.9.5.25.32

### Bezzera



1

2

fig.	Part No.	description	Ref. No.
1	400399	central unit for coffee machine 3-group 230V	7662541
2	400388	control box	7662616

### BFC



1

fig.	Part No.	description	Ref. No.
1	402245	central unit 230V 50/60Hz type 30µZ R/E	5030011



## Brugnetti



fig.	Part No.	description	Ref. No.
1	402250	central unit for coffee machine 3 groups 230V AC	550.9.5.25.32

## Conti



fig.	Part No.	description	Ref. No.
1	402314	central unit 230V AC	415085

## Dihr



fig.	Part No.	description	Ref. No.
1	402683	control box timer operation time 3/6/9min	DW50556
1	402684	control box without EPROM	DW50569
2	402681	control box timer run-time 50/120/180s	DW50553/A
2	379026	electronic timer for dishwasher	DW50553

## Electrolux

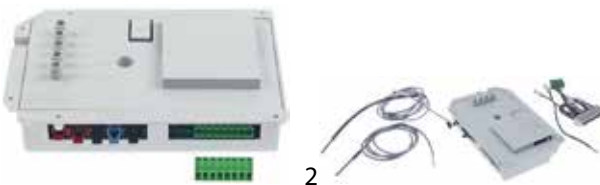 


fig.	Part No.	description	Ref. No.
1	402004	control box	086576
2	402042	control box suitable for SFT 012	086294

## Expobar



fig.	Part No.	description	Ref. No.
1	529951	central unit 3-group 230V AC	60100034
1	529950	central unit doser 3 groups 240 AC	60100410

## Fagor



fig.	Part No.	description	Ref. No.
1	401790	control box burner regulation	12023465
2	402991	control box for dishwasher 230V	12024809

## Fiamma



fig.	Part No.	description	Ref. No.
1	402723	central unit 230V AC type 3d5 3GRCTZ XLC 50/60Hz	4.0.000.0953

## Fimar

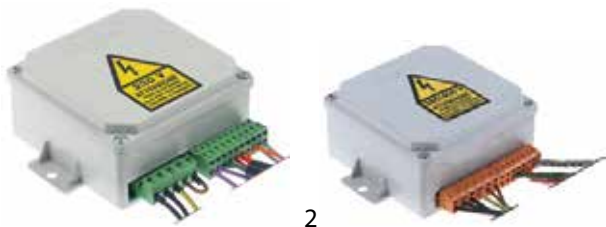 


fig.	Part No.	description	Ref. No.
1	347913	control box 230/240V	SA1220
2	347158	control box 400V	SA1210






3

fig.	Part No.	description	Ref. No.
3	699001	control box complete for vegetable slicer 230V	SA1250

### Foster



1

fig.	Part No.	description	Ref. No.
1	403568	control box L 195mm W 140mm type	16251036

### GAM



1

fig.	Part No.	description	Ref. No.
1	699005	control box 230V A2-A2L	RGA00003

### Gicar





1 2

fig.	Part No.	description	Ref. No.
1	402245	central unit 230V 50/60Hz type 30μZ R/E	9.5.17.84G 01
2	402314	central unit 230V AC	9.5.25.72 G 03
2	402723	central unit 230V AC type 3d5 3GRCTZ XLC 50/60Hz	9.5.22.50G 00
2	402250	central unit for coffee machine 3 groups 230V AC	9.5.25.32G00
2	403198	control box for coffee machine 3-group 240V	9.5.22.02G 09
2	402991	control box for dishwasher 230V	9.2.21.31G






3 4

fig.	Part No.	description	Ref. No.
3	402803	central unit 250V AC type E.T.30 F 2GRCT 50/60Hz	9.5.24.10G01
4	529951	central unit 3-group 230V AC	9.5.25.50G 01
4	529950	central unit doser 3 groups 240 AC	9.5.32.01G01
4	401651	control box for coffee machine 2-group 230V	9.5.22.05G
4	400796	control box for coffee machine 3-group 230V	9.5.21.20G

5 6

fig.	Part No.	description	Ref. No.
5	400399	central unit for coffee machine 3-group 230V	9.5.22.65G 00
6	400388	control box	9.5.17.73G

7 8

fig.	Part No.	description	Ref. No.
7	402469	control box	9.5.22.69G 00
8	400539	control box for coffee machine 1-3-group 230V	—




9 10

fig.	Part No.	description	Ref. No.
9	400224	control box for coffee machine 230V	9.5.24.00G 00
10	400520	control box for coffee machine 2-group 230V	9.5.23.24G 00



## Giemme

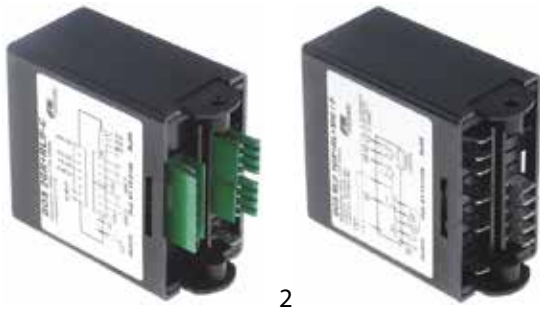 


fig.	Part No.	description	Ref. No.
1	402461	central unit 240V AC type DOS 2GR+RL/F-C 50/60Hz	01.13.0128
2	402470	central unit 240V AC type DOS RL0 1GR+RL+SIC/F	01.13.0126

## Grimac

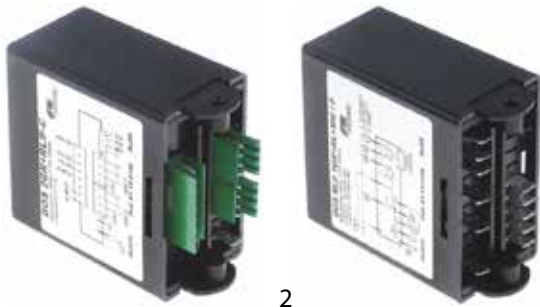 


fig.	Part No.	description	Ref. No.
1	402461	central unit 240V AC type DOS 2GR+RL/F-C 50/60Hz	GRC103
2	402470	central unit 240V AC type DOS RL0 1GR+RL+SIC/F	GRW1130



fig.	Part No.	description	Ref. No.
3	402171	control box for coffee machine 230V type MFC25G	MG307/1

## Icematic



fig.	Part No.	description	Ref. No.
1	402004	control box	81469134/0
2	403028	control box	—

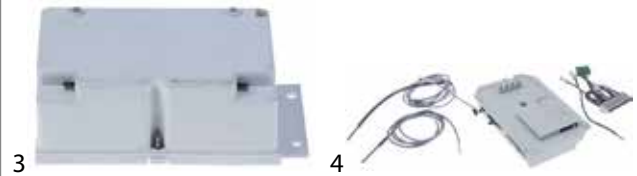 


fig.	Part No.	description	Ref. No.
3	401832	control box for ice-cube maker with housing 230V	—
4	402042	control box suitable for SFT 012	XG06071100

## Kromo



fig.	Part No.	description	Ref. No.
1	402683	control box timer operation time 3/6/9min	DW50556
1	402684	control box without EPROM	DW50569
2	402681	control box timer run-time 50/120/180s	DW50553/A
2	379026	electronic timer for dishwasher	DW50553

## La-Rocca



fig.	Part No.	description	Ref. No.
1	400520	control box for coffee machine 2-group 230V	12185

## Meiko



fig.	Part No.	description	Ref. No.
1	400721	PCB	0124217



NuovaSimonelli



1

fig.	Part No.	description	Ref. No.
1	400556	control box for coffee machine 1-group 230V	04900117

Olis



1

fig.	Part No.	description	Ref. No.
1	402681	control box timer run-time 50/120/180s	DW50553/A

Pizza-Group



1

fig.	Part No.	description	Ref. No.
1	401684	control box 400V	A96ZO00003

QualityEspresso



1

fig.	Part No.	description	Ref. No.
1	400445	control box for coffee machine 4-group	08280307

Reneka



1

fig.	Part No.	description	Ref. No.
1	401651	control box for coffee machine 2-group 230V	9003678

RGV



1



2

fig.	Part No.	description	Ref. No.
1	400788	control box for slicer 230V	0000000297
2	401701	control box for slicer 400V	00000009683

Rosinox



1



2

fig.	Part No.	description	Ref. No.
1	402683	control box timer operation time 3/6/9min	RX94807104
1	402684	control box without EPROM	RX94814040
2	402681	control box timer run-time 50/120/180s	RX94814285
2	379026	electronic timer for dishwasher	RX94814050

Royal



1

fig.	Part No.	description	Ref. No.
1	402245	central unit 230V 50/60Hz type 30µZ R/E	5030011

Sanremo



1



2

fig.	Part No.	description	Ref. No.
1	402803	central unit 250V AC type E.T.30 F 2GRCT 50/60Hz	10112091D
2	402469	control box	10112072C





## Scotsman



fig.	Part No.	description	Ref. No.
1	402004	control box	62046202
2	403028	control box	—

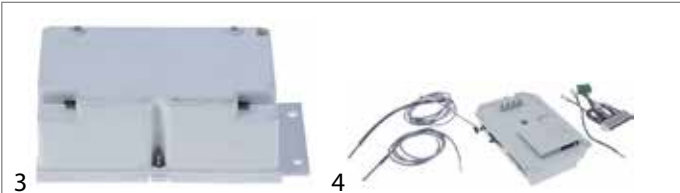 


fig.	Part No.	description	Ref. No.
3	401832	control box for ice-cube maker with housing 230V	78510402R
4	402042	control box suitable for SFT 012	06071100

## Simag



fig.	Part No.	description	Ref. No.
1	402004	control box	62040303
2	401832	control box for ice-cube maker with housing 230V	—



fig.	Part No.	description	Ref. No.
3	402042	control box suitable for SFT 012	—

## Star10



fig.	Part No.	description	Ref. No.
1	402004	control box	FR.62046202

## WEGA



fig.	Part No.	description	Ref. No.
1	400539	control box for coffee machine 1-3-group 230V	WY18090016
2	402217	control box for coffee machine 230V	WY18090048



fig.	Part No.	description	Ref. No.
3	400796	control box for coffee machine 3-group 230V	WY18090031

## Zanussi



fig.	Part No.	description	Ref. No.
1	402042	control box suitable for SFT 012	086294

## dosing electronics

## Aurora

## GICAR



pos.	Part No.	volt. (V)	type	suitable for	Ref. No.
1	402247	250	ET30 Plus EM 2GRC	Aurora	88.1.13.01



Brasilia



pos.	Part No.	volt. (V)	type	suitable for	Ref. No.
1	402266	230	3d5 2GRCT XLC	Brasilia	16035.2.00.08

group 5



fig.	Part No.	description	volt. (V)	type
1	403207	dosing electronics 230V AC 50/60Hz 10A	230	DOS 30/2GR+LIV

Brugnetti



pos.	Part No.	volt. (V)	type	suitable for	Ref. No.
1	402247	250	ET30 Plus EM 2GRC	Brugnetti	88.1.13.01

La-Scala



pos.	Part No.	volt. (V)	type	suitable for	Ref. No.
1	401066	230	Dosatura Manuale DELUXE F	La-Scala	C-0015/24N

Gicar



pos.	Part No.	volt. (V)	type	suitable for	Ref. No.
1	401066	230	Dosatura Manuale DELUXE F	Gicar	9.9.04.11G
2	402247	250	ET30 Plus EM 2GRC	Gicar	9.5.24.28G

La-Spaziale

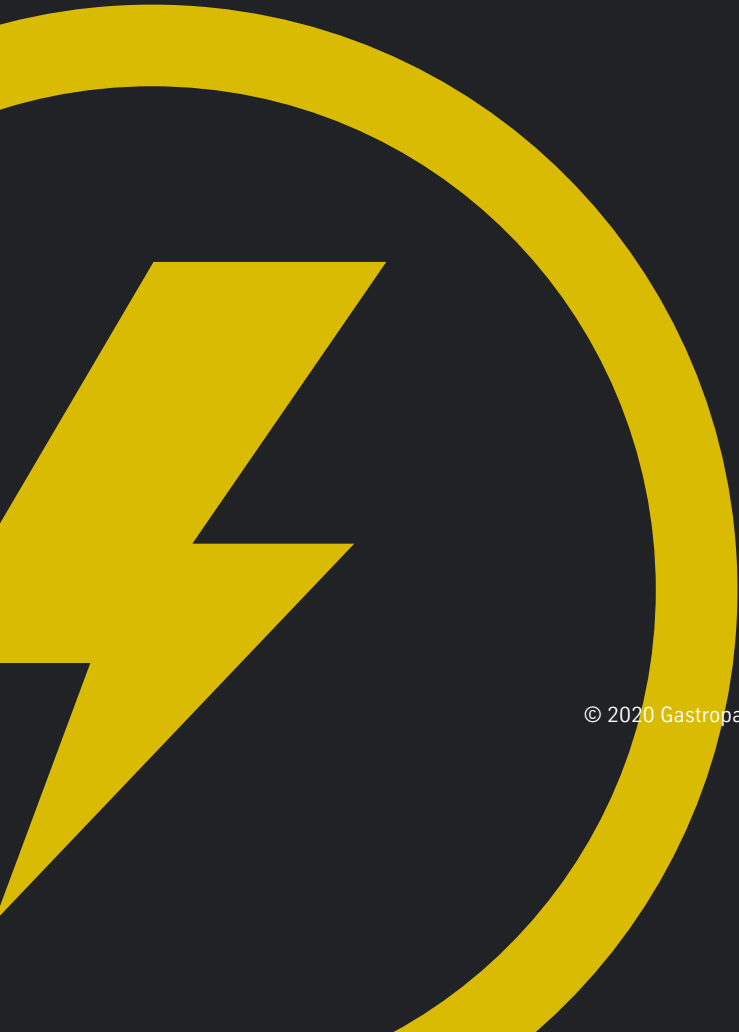 


fig.	Part No.	description	volt. (V)	type
1	403207	dosing electronics 230V AC 50/60Hz 10A	230	DOS 30/2GR+LIV



pos.	Part No.	volt. (V)	type	suitable for	Ref. No.
1	402266	230	3d5 2GRCT XLC	Gicar	9.5.22.58G 00

**GASTROPARTS.COM**



© 2020 Gastroparts Sp. J. All rights reserved.