



GASTROPARTS

Universal Catalogue › Electric Components ›

[EN] Keypads

[DE] Tastaturen

[ES] Teclados

[FR] Claviers

[IT] Tastiere

[PL] Panele

[RU] Клавиатуры

 
✉ gastroparts@gastroparts.com

☎ tel. +48 56 657 00 66

📘 fb.com/gastroparts.global

GASTROPARTS.COM



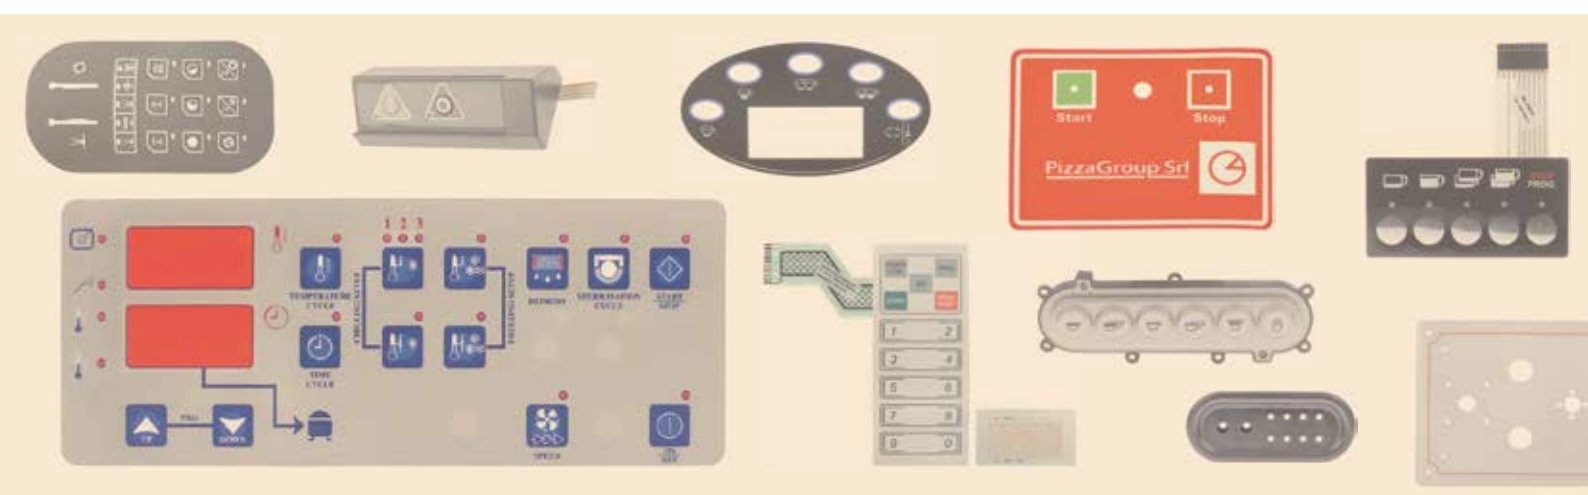

keypads

19

front foils.	626
membrane keypads.	635
keypad units.	638
control panel.	645



keypads

front foils

Angelo-Po

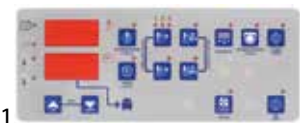 


fig.	Part No.	description	Ref. No.
1	378403	front foil blast freezer SAGI	37N0480

Aristarco



fig.	Part No.	description	Ref. No.
1	402947	keypad foil dishwasher AL120/AL40/AL45 suitable for Aristarco L 253mm W 45mm	00006424



fig.	Part No.	description	Ref. No.
2	508000	front foil dishwasher AP1000 L 370mm W 60mm	00010467



fig.	Part No.	description	Ref. No.
3	403234	keypad foil dishwasher AE50.35 buttons 5 L 396mm W 55mm	00004305

ATA



fig.	Part No.	description	Ref. No.
1	404011	keypad foil dishwasher AL40/41/45 L 450mm W 40mm	7713

Blanco



fig.	Part No.	description	Ref. No.
1	401395	keypad foil 4-fold	146209
2	401396	keypad foil 6-fold	146211



fig.	Part No.	description	Ref. No.
3	401392	keypad foil double	146207
4	401404	keypad foil single	146213



fig.	Part No.	description	Ref. No.
5	401394	keypad foil triple	146208

Capic



fig.	Part No.	description	Ref. No.
1	505280	keypad foil tilting bratt pan blue/yellow buttons 2 suitable for CAPIC L 105mm W 57mm	A504232

Colged



fig.	Part No.	description	Ref. No.
1	400904	front foil dishwasher	025303



fig.	Part No.	description	Ref. No.
2	400907	front foil dishwasher	025306



fig.	Part No.	description	Ref. No.
3	400908	front foil dishwasher	025307



fig.	Part No.	description	Ref. No.
4	400909	front foil dishwasher	025308

 


fig.	Part No.	description	Ref. No.
5	400905	front foil dishwasher BETA240	025304



fig.	Part No.	description	Ref. No.
6	400906	front foil dishwasher BETA245	025305
7	400894	keypad foil dishwasher Gold71	80300



fig.	Part No.	description	Ref. No.
8	400895	keypad foil dishwasher Gold72	80301
9	400896	keypad foil dishwasher Gold74	80302

fig.	Part No.	description	Ref. No.
10	400892	keypad foil dishwasher GS 55	025358

fig.	Part No.	description	Ref. No.
11	400893	keypad foil dishwasher GS 57	025359

fig.	Part No.	description	Ref. No.
12	400890	keypad foil dishwasher Silver 40	025445

fig.	Part No.	description	Ref. No.
13	400891	keypad foil dishwasher Silver 50	025446

fig.	Part No.	description	Ref. No.
14	518642	keypad foil dishwasher Neotech 800 L 220mm W 57mm	69900
15	518644	keypad foil dishwasher Neotech 600 L 225mm W 54mm	025925

fig.	Part No.	description	Ref. No.
16	518643	keypad foil dishwasher Protech 611 L 225mm W 65mm	026113

Cookmax

fig.	Part No.	description	Ref. No.
1	401739	keypad foil Orione grey buttons 3 L 160mm W 34mm for mixer	—
2	401959	front foil combi-steamer	R67450510
3	696452	front foil cutter C9VV CE blue L 60mm W 60mm	MSC04V238

fig.	Part No.	description	Ref. No.
4	401947	front foil dishwasher	025983

fig.	Part No.	description	Ref. No.
5	401948	front foil dishwasher	025982

fig.	Part No.	description	Ref. No.
6	401949	front foil dishwasher	025981

fig.	Part No.	description	Ref. No.
7	401963	front foil dishwasher HM	80856
8	401587	keypad foil dough rolling machine STP 30/40 P30/40/45/35 L 100mm W 80mm Start/Stop	5800370





fig.	Part No.	description	Ref. No.
9	401691	keypad foil milk foamer MilkFoamer buttons 6 for milk foamer	95.12.00
10	401690	keypad foil milk foamer Foamino buttons 2 L 93mm W 26mm for milk foamer	—
11	401741	front foil potato peeler PP4-PP8-PP15 Expo black L 139mm W 99mm	—

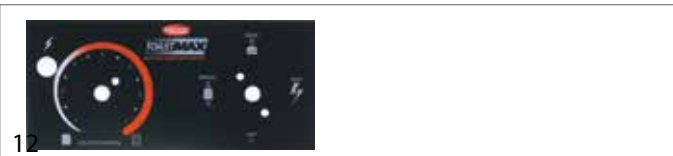 


fig.	Part No.	description	Ref. No.
12	402059	front foil toaster L 185mm W 85mm	X07.03.465.00



fig.	Part No.	description	Ref. No.
13	402060	front foil toaster L 265mm W 85mm	X07.03.466.00

Dihr

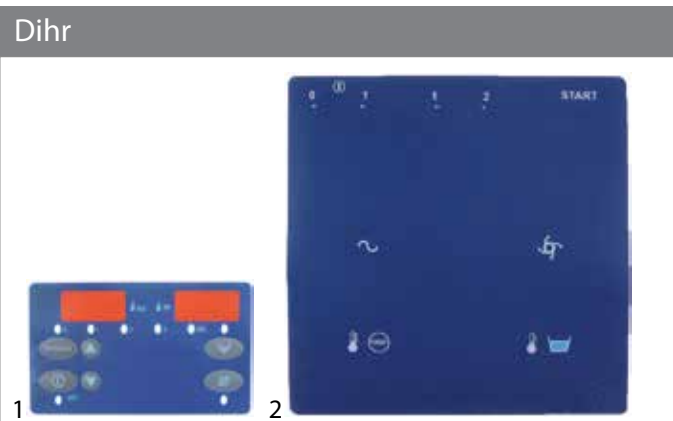 


fig.	Part No.	description	Ref. No.
1	402685	keypad foil dishwasher H63/373E/144E buttons 6 L 134mm W 79mm	DW50575
2	402914	keypad foil dishwasher G100/K90 blue L 190mm W 190mm	DW550262



fig.	Part No.	description	Ref. No.
3	403289	keypad foil dishwasher LP25/LP35/LP48/GR800/TwinStar blue buttons 6	DW96704




fig.	Part No.	description	Ref. No.
4	403256	keypad foil dishwasher 20/29/83ELK 20S5 blue buttons 4 L 557mm W 36mm	DW560039

Electrolux




fig.	Part No.	description	Ref. No.
1	512428	front foil combi-steamer suitable for ELECTROLUX for L 890mm W 160mm	0C6553

Elettrobar



fig.	Part No.	description	Ref. No.
1	518565	keypad foil dishwasher 050F	025470



fig.	Part No.	description	Ref. No.
2	518566	keypad foil dishwasher 050FP	025471



fig.	Part No.	description	Ref. No.
3	401596	keypad foil dishwasher L20	36782



fig.	Part No.	description	Ref. No.
4	402166	front foil dishwasher L 420mm W 35mm	025635



fig.	Part No.	description	Ref. No.
5	403215	keypad foil dishwasher ELETTROBAR buttons 3 L 420mm W 35mm	25720



6

fig.	Part No.	description	Ref. No.
6	403243	front foil dishwasher Niagara 261 blue L 448mm W 53mm	025898

7

fig.	Part No.	description	Ref. No.
7	505276	keypad foil dishwasher L25 buttons 4 L 494mm W 84mm	36784

Eureka

1

fig.	Part No.	description	Ref. No.
1	402674	keypad foil coffee grinder MYTHOS buttons 5	4111.0008

Fagor

1 2

fig.	Part No.	description	Ref. No.
1	403056	keypad foil blast freezer ATM101 buttons 8 L 200mm W 60mm	12031295
2	400871	front foil combi-steamer HCG611	12020786

3 4 5

fig.	Part No.	description	Ref. No.
3	400872	front foil combi-steamer HEI 6/11 HMI 6/11	12018460
4	400866	front foil combi-steamer HMI1011	12019113
5	400867	keypad foil combi-steamer HCG611/1011	12019107

6 7 8

fig.	Part No.	description	Ref. No.
6	400868	keypad foil combi-steamer HCG611/1011	12019010
7	400865	keypad foil combi-steamer HEM1011/2011 HME1011/1021/2011	12019205
8	400869	keypad foil combi-steamer HMI1011	12020664

9 10 11

fig.	Part No.	description	Ref. No.
9	400864	keypad foil combi-steamer HMM2011/2021/22011	12020040
10	400870	keypad foil combi-steamer HMP 611/1011/2011	12018349
11	401723	front foil combi-steamer L 365mm W 98mm	12019869

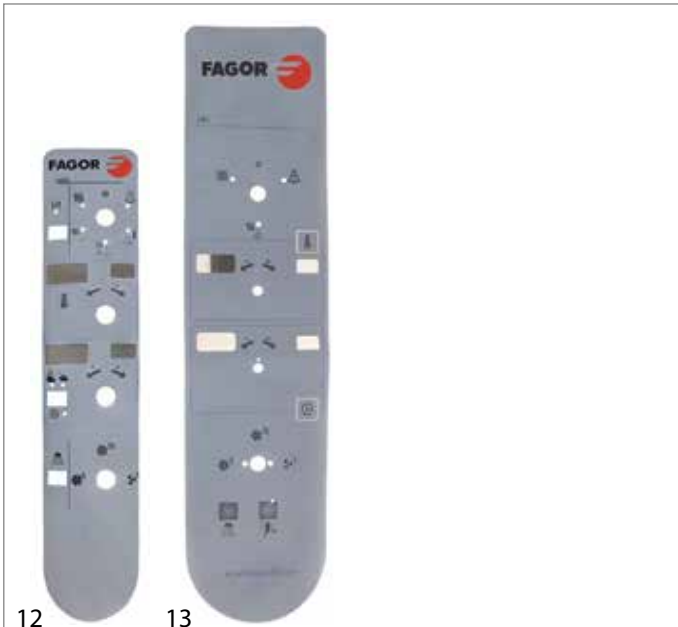 


fig.	Part No.	description	Ref. No.
12	401783	front foil combi-steamer HEM 10/11-20/11 L 480mm W 100mm	12018494
13	401718	keypad foil combi-steamer HEI 1021/HGV 1021 L 670mm W 160mm	12018060



fig.	Part No.	description	Ref. No.
14	505124	front foil dishwasher	12018622
15	505125	front foil dishwasher	12020028



fig.	Part No.	description	Ref. No.
16	505205	front foil dishwasher	12020129
17	505117	front foil dishwasher FI30	12020315

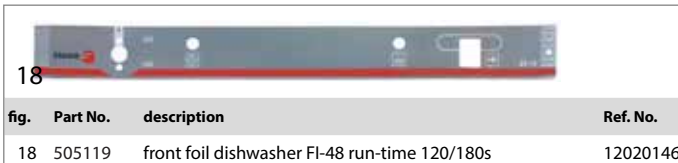 


fig.	Part No.	description	Ref. No.
18	505119	front foil dishwasher FI-48 run-time 120/180s	12020146

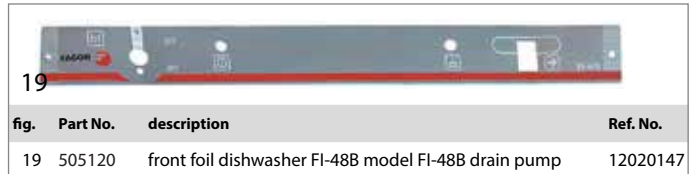 


fig.	Part No.	description	Ref. No.
19	505120	front foil dishwasher FI-48B model FI-48B drain pump	12020147
20	505118	front foil dishwasher FI-50 model FI-50	12019162

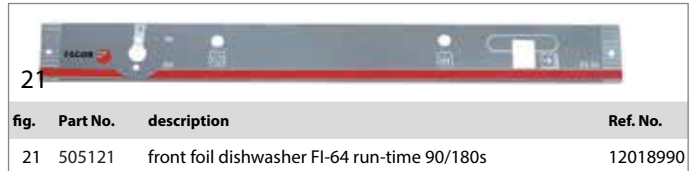 


fig.	Part No.	description	Ref. No.
21	505121	front foil dishwasher FI-64 run-time 90/180s	12018990
22	505115	keypad foil dishwasher	12019307
23	505116	keypad foil dishwasher	12018125

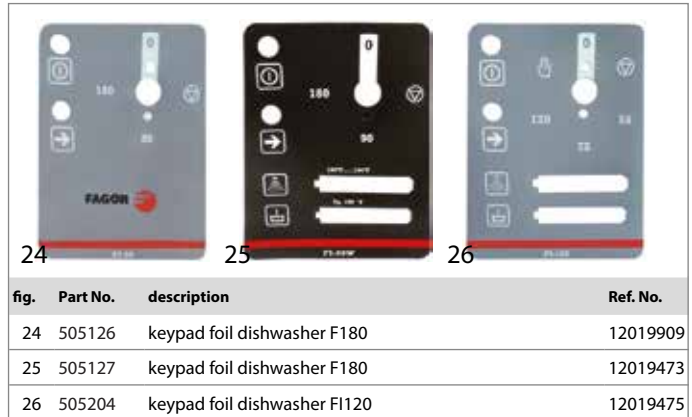 


fig.	Part No.	description	Ref. No.
24	505126	keypad foil dishwasher F180	12019909
25	505127	keypad foil dishwasher F180	12019473
26	505204	keypad foil dishwasher FI120	12019475
27	505108	keypad foil dishwasher LVC12	12020486



fig.	Part No.	description	Ref. No.
28	505109	keypad foil dishwasher LVC15	12018909
29	505113	keypad foil dishwasher LVC15D/21D/14D/20D	12018973



fig.	Part No.	description	Ref. No.
30	505114	keypad foil dishwasher LVC15D/21D/14D/20D	Z492902000



31




fig.	Part No.	description	Ref. No.
31	505110	keypad foil dishwasher LVC21	12020451

32



fig.	Part No.	description	Ref. No.
32	505112	keypad foil dishwasher LVC21B	12019096

33



fig.	Part No.	description	Ref. No.
33	505105	keypad foil dishwasher LVR10	12019135

34



fig.	Part No.	description	Ref. No.
34	505106	keypad foil dishwasher LVR14	Z402909000

35



fig.	Part No.	description	Ref. No.
35	505111	keypad foil dishwasher LVR20B	12039842

36




fig.	Part No.	description	Ref. No.
36	403238	front foil dishwasher grey model FI-48B suitable for FAGOR L 585mm W 62,5mm	12023961

3



fig.	Part No.	description	Ref. No.
37	403240	front foil dishwasher FI30 grey model FI30 suitable for FAGOR L 585mm W 62,5mm	12025130

38



39





fig.	Part No.	description	Ref. No.
38	401843	front foil dishwasher L 645mm W 173mm	12017916
39	505123	front foil warewashing FI-64B/FI64W	12018989

40



fig.	Part No.	description	Ref. No.
40	505122	front foil warewashing FI-64B/FI64W model FI-64B/FI64W drain pump	12019191

41



42




fig.	Part No.	description	Ref. No.
41	505202	keypad foil warewashing FI100	12020127
42	505203	keypad foil warewashing FI120	12020324

43



fig.	Part No.	description	Ref. No.
43	505201	keypad foil warewashing FI80	Z742901000

Fiorenzato-C.S.



fig.	Part No.	description	Ref. No.
1	402452	keypad foil coffee machine MIA buttons 6 L 79mm W 54mm	A1500093

Fiorenzato-C.S.



fig.	Part No.	description	Ref. No.
1	402452	keypad foil coffee machine MIA buttons 6 L 79mm W 54mm	A1500093

Futurmat



fig.	Part No.	description	Ref. No.
1	401434	keypad foil coffee machine Arianne/Arieta 1-2-3-4 gr. buttons 5 L 92mm W 26mm	08109600

Giorik



fig.	Part No.	description	Ref. No.
1	400739	keypad foil salamander grill SH520	2012425



Grimac



fig.	Part No.	description	Ref. No.
1	402452	keypad foil coffee machine MIA buttons 6 L 79mm W 54mm	A1500093

Hatco



fig.	Part No.	description	Ref. No.
1	402059	front foil toaster L 185mm W 85mm	X07.03.465.00



fig.	Part No.	description	Ref. No.
2	402060	front foil toaster L 265mm W 85mm	X07.03.466.00

Hobart



fig.	Part No.	description	Ref. No.
1	698701	keypad foil dishwasher AMX 900 L 500mm W 41mm	897500-1



fig.	Part No.	description	Ref. No.
2	694717	keypad foil warewashing buttons 3 suitable for HOBART L 185mm W 144mm	—

Hoonved



fig.	Part No.	description	Ref. No.
1	402925	keypad foil dishwasher 60EBT/C43DE blue buttons 3 suitable for HOONVED L 256mm W 37mm	36134



fig.	Part No.	description	Ref. No.
2	403328	front foil dishwasher C43 suitable for HOONVED L 420mm W 45mm	33713

Horeca-Select



fig.	Part No.	description	Ref. No.
1	403156	control panel induction device GIC3535 W 300 mm H 58 mm	GIC3035-B17

Kromo



fig.	Part No.	description	Ref. No.
1	402685	keypad foil dishwasher H63/373E/144E buttons 6 L 134mm W 79mm	DW50575
2	402914	keypad foil dishwasher G100/K90 blue L 190mm W 190mm	DW550262



fig.	Part No.	description	Ref. No.
3	403289	keypad foil dishwasher LP25/LP35/LP48/GR800/TwinStar blue buttons 6	DW96704



fig.	Part No.	description	Ref. No.
4	403256	keypad foil dishwasher 20/29/83ELK 20S5 blue buttons 4 L 557mm W 36mm	DW560039



Lainox



fig.	Part No.	description	Ref. No.
1	401959	front foil combi-steamer	LAR67450510
2	403132	front foil combi-steamer ME106M suitable for LAINOX L 430mm W 95mm	LAR67010021

Metos



fig.	Part No.	description	Ref. No.
1	403289	keypad foil dishwasher LP25/LP35/LP48/GR800/TwinStar blue buttons 6	96704

Moretti



fig.	Part No.	description	Ref. No.
1	402352	front foil pizza oven model DUO L 550mm W 111mm	73500510

Mareno



fig.	Part No.	description	Ref. No.
1	400688	keypad foil fryer F94/F98	MACM247301

MBM-Italia



fig.	Part No.	description	Ref. No.
1	505276	keypad foil dishwasher L25 buttons 4 L 494mm W 84mm	36784

Öztiryakiler



fig.	Part No.	description	Ref. No.
1	531271	keypad foil fridge 791912MV/791927 buttons 6 L 170mm W 65mm	6800.00001.24

Mecnosud



fig.	Part No.	description	Ref. No.
1	401641	keypad foil dough rolling machine DL 30-40 L 100mm W 80mm	DLX30006

Meiko



fig.	Part No.	description	Ref. No.
1	403229	membrane keypad dishwasher FV46 buttons 5 suitable for MEIKO Qty 1 pcs L 560mm W 54mm	9542137

Pizza-Group

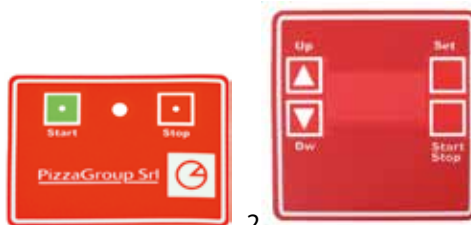 


fig.	Part No.	description	Ref. No.
1	401587	keypad foil dough rolling machine STP 30/40 P30/40/45/35 L 100mm W 80mm Start/Stop	A93OL78007
2	400735	keypad foil pizza oven FVD 2/33 2/50 3/33 3/50 5/33 5/50 L 88mm W 85mm	A93OL65022



QualityEspresso

 


fig.	Part No.	description	Ref. No.
1	401433	keypad foil coffee machine Ottima/Genova/Compac buttons 5 L 80mm W 44mm	08274607
2	401434	keypad foil coffee machine Arianne/Arieta 1-2-3-4 gr. buttons 5 L 92mm W 26mm	08109600

Rosinox

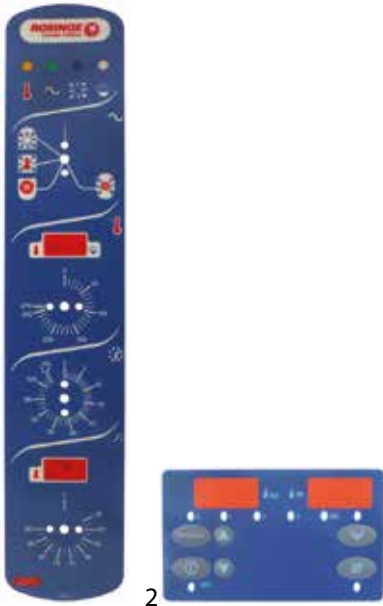 


fig.	Part No.	description	Ref. No.
1	694697	front foil combi-steamer TVTS suitable for ROSINOX L 600mm W 118mm	RX94044752
2	402685	keypad foil dishwasher H63/373E/144E buttons 6 L 134mm W 79mm	RX94814049



fig.	Part No.	description	Ref. No.
3	505300	keypad foil fryer blue buttons 4 L 148mm W 91mm	RX94034345

Sagi

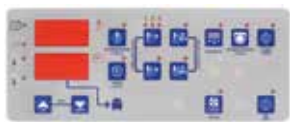 


fig.	Part No.	description	Ref. No.
1	378403	front foil blast freezer SAGI	37N0480

Silanos



fig.	Part No.	description	Ref. No.
1	519564	front foil dishwasher L 180mm W 110mm	906735

Sirman

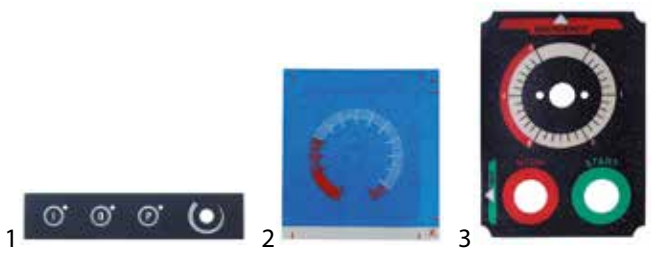 


fig.	Part No.	description	Ref. No.
1	401739	keypad foil Orione grey buttons 3 L 160mm W 34mm for mixer	IB4100930
2	696452	front foil cutter C9VV CE blue L 60mm W 60mm	MSC04V238
3	401741	front foil potato peeler PP4-PP8-PP15 Expo black L 139mm W 99mm	RG04348

Star10



fig.	Part No.	description	Ref. No.
1	401587	keypad foil dough rolling machine STP 30/40 P30/40/45/35 L 100mm W 80mm Start/Stop	009451.41

Tecnoinox



fig.	Part No.	description	Ref. No.
1	693150	keypad foil salamander grill QSE40	RC01016000
2	693151	keypad foil salamander grill QSE60	RC01017000



Thermoplan

fig.	Part No.	description	Ref. No.
1	401691	keypad foil milk foamer MilkFoamer buttons 6 for milk foamer	107,139
2	401690	keypad foil milk foamer Foamino buttons 2 L 93mm W 26mm for milk foamer	107,134

Winterhalter

fig.	Part No.	description	Ref. No.
1	694712	keypad foil dishwasher GS202/215/302/310/315 L 180mm W 50mm	3124223

fig.	Part No.	description	Ref. No.
2	504417	front foil dishwasher GS 41/4 silver/blue suitable for WINTERHALTER L 521mm W 25mm	60001695

membrane keypads

Astoria

fig.	Part No.	description	Ref. No.
1	400536	membrane keypad coffee machine ARGENTA	20100
2	527754	membrane keypad coffee machine ATLAS L 100mm W 50mm	WY20126014

Bianchi Vending

fig.	Part No.	description	Ref. No.
1	403152	membrane keypad espresso machine buttons 5 L 125 mm W 45 mm	30265811-01

Cookmax

fig.	Part No.	description	Ref. No.
1	402098	membrane keypad vacuum packing machine B35-16 with frame	0900102

fig.	Part No.	description	Ref. No.
2	402094	membrane keypad vacuum packing machine H100	0810050

fig.	Part No.	description	Ref. No.
3	402097	membrane keypad vacuum packing machine JUMBO complete	0900101

fig.	Part No.	description	Ref. No.
4	402099	membrane keypad vacuum packing machine with frame	0900104

fig.	Part No.	description	Ref. No.
5	402100	membrane keypad vacuum packing machine with frame	0900105



Expobar



fig.	Part No.	description	Ref. No.
1	400334	membrane keypad coffee machine	60102000

Faema

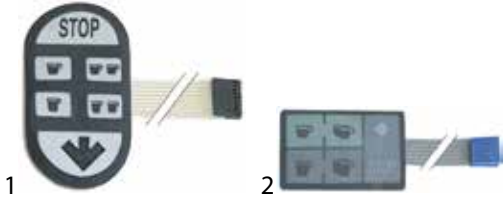 


fig.	Part No.	description	Ref. No.
1	400081	membrane keypad coffee machine COMPACT	3761131514
2	400309	membrane keypad coffee machine DUE suitable for FAEMA old edition	3301-132 827



fig.	Part No.	description	Ref. No.
3	400674	membrane keypad coffee machine buttons 6 L 58mm W 68mm	3301-134 529
4	401408	membrane keypad coffee machine parts buttons 6 suitable for FAEMA L 176mm W 49mm	3301-134 927

Fagor



fig.	Part No.	description	Ref. No.
1	403467	membrane keypad dishwasher AD90 buttons 4 suitable for FAGOR L 200mm W 120mm Qty 1 pcs	12023437



fig.	Part No.	description	Ref. No.
2	403466	membrane keypad dishwasher AD48/AD64 buttons 4 suitable for FAGOR L 585mm W 50mm Qty 1 pcs	12024723



fig.	Part No.	description	Ref. No.
3	402579	membrane keypad warewashing LA13 buttons 6 L 640mm W 160mm	12023215

Galanz



fig.	Part No.	description	Ref. No.
1	403187	membrane keypad microwave GMW1025 2-piece buttons 15 Qty 1 pcs L 164mm W 70mm	GMW1025-C18



fig.	Part No.	description	Ref. No.
2	403186	membrane keypad microwave buttons 18 Qty 1 pcs L 386mm W 42mm	GMW1030-C18

Gicar



fig.	Part No.	description	Ref. No.
1	400334	membrane keypad coffee machine	9.9.10.01

Henkelman



fig.	Part No.	description	Ref. No.
1	402098	membrane keypad vacuum packing machine B35-16 with frame	0900102



fig.	Part No.	description	Ref. No.
2	402094	membrane keypad vacuum packing machine H100	0810050



3

fig.	Part No.	description	Ref. No.
3	402097	membrane keypad vacuum packing machine JUMBO complete	0900101

4

fig.	Part No.	description	Ref. No.
4	402099	membrane keypad vacuum packing machine with frame	0900104

5

fig.	Part No.	description	Ref. No.
5	402100	membrane keypad vacuum packing machine with frame	0900105

Hobart

1

fig.	Part No.	description	Ref. No.
1	402918	membrane keypad warewashing GX/FX/HX buttons 7 suitable for HOBART L 152mm W 52mm	324202

Horeca-Select

1

fig.	Part No.	description	Ref. No.
1	403187	membrane keypad microwave GMW1025 2-piece buttons 15 Qty 1 pcs L 164mm W 70mm	GMW1025-C18

2

fig.	Part No.	description	Ref. No.
2	403186	membrane keypad microwave buttons 18 Qty 1 pcs L 386mm W 42mm	GMW1030-C18

IGF

1

fig.	Part No.	description	Ref. No.
1	346443	membrane keypad dough rolling machine L30-B30-L40-B40 L 70mm W 60mm	2300/L30Z06

Küppersbusch

1

fig.	Part No.	description	Ref. No.
1	400119	keypad foil tilting bratt pan NEP203/303/603 NER080/150/250/300	064300

La Cimbali

1

fig.	Part No.	description	Ref. No.
1	403252	membrane keypad espresso machine buttons 5 black suitable for M22 L 132 mm W 32 mm	422292000

La San Marco

1

fig.	Part No.	description	Ref. No.
1	400343	keypad foil espresso machine Serie 85	108296

Lamber

1

fig.	Part No.	description	Ref. No.
1	403279	membrane keypad warewashing 045F buttons 3 Qty 1 pcs L 317mm W 40mm	0502008

Mach

1


fig.	Part No.	description	Ref. No.
1	400712	membrane keypad warewashing MS1100	500032400

Meiko

1 2

fig.	Part No.	description	Ref. No.
1	400195	membrane keypad dishwasher DV40, DV80	0467221
2	400725	membrane keypad warewashing	0467222



3		4	
fig.	Part No.	description	Ref. No.
3	400196	membrane keypad warewashing DV120	0467210
4	400197	membrane keypad warewashing DV120	0467249

5			
fig.	Part No.	description	Ref. No.
5	400842	membrane keypad warewashing ECO STAR 430 L 430mm W 46mm	9503064

Sammic



1			
fig.	Part No.	description	Ref. No.
1	401851	membrane keypad dough mixers BC 10 buttons 5 L 130mm W 123mm	2504482

WEGA



1			
fig.	Part No.	description	Ref. No.
1	527754	membrane keypad coffee machine ATLAS L 100mm W 50mm	WY20126014

keypad units

ACP

1		2	
fig.	Part No.	description	Ref. No.
1	403366	keypad PCB microwave RCS10MPA-P133020M AM	54116009
2	403367	keypad PCB microwave RFS511SW-P200100M SW	54116007

3			
fig.	Part No.	description	Ref. No.
3	403416	keypad unit microwave ACE14/ACE5140/ACE5302/ UCA1400/UCA2000	59104132

4		5		6	
fig.	Part No.	description	Ref. No.		
4	403398	keypad unit microwave ACE14/ACES140/UCA1400	59104131		
5	403403	keypad unit microwave ACE5302/RC17S2/RC22S	R0130109		
6	403394	keypad unit microwave ALD10T/ALD510/UALD510/ UMD510	56001455		

7			
fig.	Part No.	description	Ref. No.
7	403418	keypad unit microwave DEC11E/DEC14E	59104138



fig.	Part No.	description	Ref. No.
8	403388	keypad unit microwave DFS11EA/DFS18E/MFS18TS/RFS518 MENUMASTER	54116011



fig.	Part No.	description	Ref. No.
14	403396	keypad unit microwave MMS10TS/RMS10TS	58101006
15	403397	keypad unit microwave RMS510T	58101070



fig.	Part No.	description	Ref. No.
9	403417	keypad unit microwave DS1400/MCE14/UCA1400	59104134



fig.	Part No.	description	Ref. No.
10	403415	keypad unit microwave HDC12/HDC182	59104136



fig.	Part No.	description	Ref. No.
16	403334	keypad unit microwave OC524BK-P2000304M L 340mm W 58mm	59004114
17	403338	keypad unit microwave DS1400E/MCE14/UCA1400 L 342mm W 74mm	59104133



fig.	Part No.	description	Ref. No.
11	403384	keypad unit microwave MCS10DSE-P2002403M	54127004
12	403395	keypad unit microwave MCS10TS/RCS511TS	56002046
13	403385	keypad unit microwave MCS10TS-P2001004M	54127005



fig.	Part No.	description	Ref. No.
18	403332	keypad unit microwave MXP5221-P2001606M L 350mm W 94mm	59114152



fig.	Part No.	description	Ref. No.
19	403330	keypad unit microwave buttons 6 L 480mm W 50mm MENUMASTER Jetwave III	59002100



Amana



fig.	GEV No.	description	Ref. No.
1	403366	keypad PCB microwave RCS10MPA-P133020M AM	53002063



fig.	GEV No.	description	Ref. No.
2	403416	keypad unit microwave ACE14/ACES140/ACE5302/UCA1400/UCA2000	—



fig.	Part No.	description	Ref. No.
3	403398	keypad unit microwave ACE14/ACES140/UCA1400	—

Angelo-Po



fig.	Part No.	description	Ref. No.
1	403002	keypad unit slicer buttons 2 MIRRA/SAN-DANIELE/YORK L 120mm W 48mm	3018180

Astoria



fig.	GEV No.	description	Ref. No.
1	400795	keypad unit coffee machine Atlas/OrionEco/EPU1PG buttons 5 L 89mm W 42mm	18371049
2	527776	keypad unit coffee machine Gloria buttons 7 L 136mm W 45mm	83180011R



fig.	GEV No.	description	Ref. No.
3	400789	keypad unit coffee machine/espresso maker MININOVA/EPUMINIV buttons 5 L 66mm W 43mm	WY18371027
4	400547	keypad unit espresso machine DIVINA single	18371017

BFC

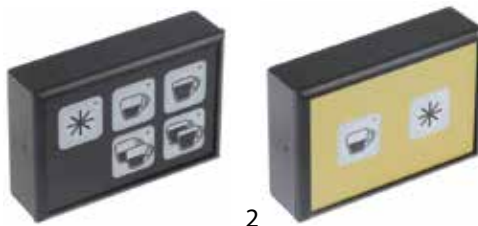 


fig.	GEV No.	description	Ref. No.
1	402236	keypad unit coffee machine Antea/Classica/Diadema/grandoge/Tedide buttons 5	5031015
2	402237	keypad unit coffee machine Classica/Diadema 2-3-4 gr. buttons 2 L 88mm W 60mm	5031210



fig.	Part No.	description	Ref. No.
3	402258	keypad unit espresso machine DeLux/Imola/Marenello/Monza 2-3-4 gr. buttons 6	5031305
4	402257	keypad unit espresso machine Lira 1-2-3-4 gr. buttons 6 L 135 mm W 44 mm	5031280

Bourgeois



fig.	Part No.	description	Ref. No.
1	403122	keypad unit combi-steamer UC0611/1011/2011 buttons 9 L 350mm W 153mm	20467



Brasilia



fig.	Part No.	description	Ref. No.
1	402286	keypad unit coffee machine ROMA buttons 5 L 87mm W 59mm	17578.2.00.08
2	400227	keypad unit coffee machine ROMA buttons 6 L 88mm W 60mm	12583.2.00.08



fig.	Part No.	description	Ref. No.
3	402288	keypad unit coffee machine Executive buttons 5 chrome-plated L 117mm W 45mm	21494.2.00.08

Cookmax



fig.	Part No.	description	Ref. No.
1	400795	keypad unit coffee machine Atlas/OrionEco/EPU1PG buttons 5 L 89mm W 42mm	—
2	400789	keypad unit coffee machine/espresso maker MININOVA/EPUMINIV buttons 5 L 66mm W 43mm	—



fig.	Part No.	description	Ref. No.
3	401735	keypad unit meat mincer TC12 buttons 3 cable length 90mm L 130mm W 41mm	—
4	401378	keypad unit meat mincer TC12 edition since year of construction L 130mm W 41mm	IV5940515T



fig.	Part No.	description	Ref. No.
5	403002	keypad unit slicer buttons 2 MIRRA/SAN-DANIELE/YORK L 120mm W 48mm	19702000
6	401694	keypad unit slicer BAYONNE/CICLONE/SAN-DANIELE buttons 2 L 130mm W 41mm	19702004

Dihr



fig.	Part No.	description	Ref. No.
1	402913	keypad unit dishwasher 37E/80E/81E/18ER/19E buttons 6 suitable for Dihr L 145mm W 90mm	DW50570/A
2	402679	keypad unit dishwasher 17U/70U buttons 6 L 158mm W 103mm	DW50570/C



fig.	Part No.	description	Ref. No.
3	402678	keypad unit dishwasher H63/373E/144E buttons 6 L 158mm W 103mm	DW50570

Emmepi



fig.	Part No.	description	Ref. No.
1	401735	keypad unit meat mincer TC12 buttons 3 cable length 90mm L 130mm W 41mm	8C0477
2	403002	keypad unit slicer buttons 2 MIRRA/SAN-DANIELE/YORK L 120mm W 48mm	808612

Expobar



fig.	Part No.	description	Ref. No.
1	529938	keypad unit coffee machine MEGACREM buttons 5 230V L 70mm W 117mm with probe connection H 45,5mm	60100026
2	529934	keypad unit coffee machine Markus/Office-Control buttons 5 230V doser L 71mm W 117mm SS	60100402

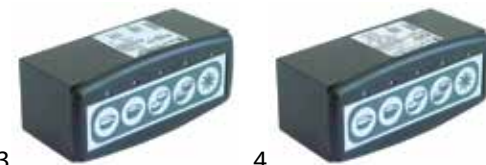 


fig.	Part No.	description	Ref. No.
3	400652	keypad unit espresso machine MARKUS buttons 5 black edition 1d5e GR NKP S10 type 1d5e GR NKP S10	60100021
4	400655	keypad unit espresso machine MARKUS buttons 5 black type 1d5e GRCZ NKP S10 L 117 mm W 45 mm	60100020



Fiamma



1

fig.	Part No.	description	Ref. No.
1	402722	keypad unit coffee machine BUTTERFLY/MARINA buttons 5 black/white/silver	4.0.000.0980

Fiorenzato-C.S.



1

fig.	Part No.	description	Ref. No.
1	402449	keypad unit coffee machine FIORENZATO buttons 6 L 88mm W 60mm	A1500091

Fiorenzato-C.S.



1

fig.	Part No.	description	Ref. No.
1	402449	keypad unit coffee machine FIORENZATO buttons 6 L 88mm W 60mm	A1500091

Foster



1

fig.	Part No.	description	Ref. No.
1	403520	keypad unit blast freezer blast freezer buttons 6 suitable for FOSTER L 445mm W 112mm	15247078



2

fig.	Part No.	description	Ref. No.
2	403517	keypad unit freezer FST-FCC-DE2 buttons 1 W ø80mm	00-556020



3

fig.	Part No.	description	Ref. No.
3	403519	keypad freezer FST-FCC-DE2 buttons 4 cable length 2X1000mm suitable for FOSTER L 118mm	00-554477

FriFri



1

fig.	Part No.	description	Ref. No.
1	403120	keypad unit fryer EASY PLUS L 93mm W 155mm suitable for FRIFRI mounting pos. buttons 4	216191

Gicar



1

2

fig.	Part No.	description	Ref. No.
1	400508	keypad unit coffee machine 1d5 GRC NKP S10 230Vac(VI-VALDI n)	—
2	400354	keypad unit coffee machine AIRY/ATLAS/COMBI NOVA/JUNIOR buttons 5	9.5.17.39

3

4

fig.	Part No.	description	Ref. No.
3	402722	keypad unit coffee machine BUTTERFLY/MARINA buttons 5 black/white/silver	9.5.28.65G 00
4	402585	keypad unit coffee machine EDISSE/TEN/TWENTY/ZOLA 1+2 buttons 5 yellow/grey	9.5.27.22G

5

6

fig.	Part No.	description	Ref. No.
5	400248	keypad unit coffee machine TH SMT 1GR+RL	9.5.26.02
6	529938	keypad unit coffee machine MEGACREM buttons 5 230V L 70mm W 117mm with probe connection H 45,5mm	9.5.28.61G00

7


8

fig.	Part No.	description	Ref. No.
7	529934	keypad unit coffee machine Markus/Office-Control buttons 5 230V doser L 71mm W 117mm SS	9.5.28.68G00
8	402286	keypad unit coffee machine ROMA buttons 5 L 87mm W 59mm	9.9.07.26G




9 10

fig.	Part No.	description	Ref. No.
9	528764	keypad unit coffee machine MS/ES/40/45 buttons 3 L 88mm W 37mm	9.9.09.95G
10	402236	keypad unit coffee machine Antea/Classica/Diadema/grandoge/Tedide buttons 5	9.9.14.27G

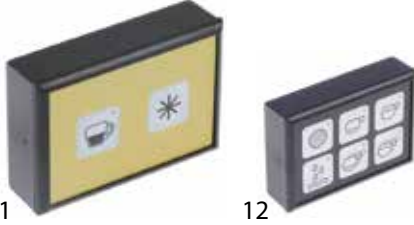 


11 12

fig.	Part No.	description	Ref. No.
11	402237	keypad unit coffee machine Classica/Diadema 2-3-4 gr. buttons 2 L 88mm W 60mm	9.9.09.62G
12	528725	keypad unit coffee machine F2006/Kappa/Leva/Stilo buttons 6 L 88mm W 60mm	9.9.09.35G



13 14

fig.	Part No.	description	Ref. No.
13	400227	keypad unit coffee machine ROMA buttons 6 L 88mm W 60mm	9.9.09.28G
14	402288	keypad unit coffee machine Executive buttons 5 chrome-plated L 117mm W 45mm	9.9.13.70G

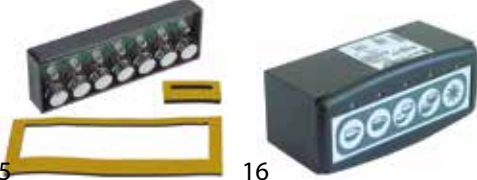 


15 16

fig.	Part No.	description	Ref. No.
15	527776	keypad unit coffee machine Gloria buttons 7 L 136mm W 45mm	8.5.67.10/D
16	400652	keypad unit espresso machine MARKUS buttons 5 black edition 1d5e GR NKP S10 type 1d5e GR NKP S10	9.5.28.28G 00



17 18


fig.	Part No.	description	Ref. No.
17	400655	keypad unit espresso machine MARKUS buttons 5 black type 1d5e GRCZ NKP S10 L 117 mm W 45 mm	9.5.28.30G 00
18	402258	keypad unit espresso machine DeLux/Imola/Marenello/Monza 2-3-4 gr. buttons 6	9.9.08.49G



19

fig.	Part No.	description	Ref. No.
19	402257	keypad unit espresso machine Lira 1-2-3-4 gr. buttons 6 L 135 mm W 44 mm	9.9.07.75G

Grimac



1 2

fig.	Part No.	description	Ref. No.
1	402585	keypad unit coffee machine EDISSE/TEN/TWENTY/ZOLA 1+2 buttons 5 yellow/grey	GR159
2	402449	keypad unit coffee machine FIORENZATO buttons 6 L 88mm W 60mm	A1500091



3

fig.	Part No.	description	Ref. No.
3	402561	keypad unit coffee machine EDISSE/TEN/TWENTY/ZOLA 1+2 buttons 5 black/white	GRC104

Kromo



1 2

fig.	Part No.	description	Ref. No.
1	402913	keypad unit dishwasher 37E/80E/81E/18ER/19E buttons 6 suitable for Dihr L 145mm W 90mm	DW50570/A
2	402679	keypad unit dishwasher 17U/70U buttons 6 L 158mm W 103mm	DW50570/C



3

fig.	Part No.	description	Ref. No.
3	402678	keypad unit dishwasher H63/373E/144E buttons 6 L 158mm W 103mm	DW50570




La San Marco



1


fig.	Part No.	description	Ref. No.
1	400488	keypad unit espresso machine Serie 85 edition 1-group	608066

La-Scala



1 2


fig.	Part No.	description	Ref. No.
1	402722	keypad unit coffee machine BUTTERFLY/MARINA buttons 5 black/white/silver	C-0603
2	402502	keypad unit coffee machine CARMEN buttons 2 black/silver L 88mm W 83mm	—



3

fig.	Part No.	description	Ref. No.
3	402503	keypad unit coffee machine CARMEN buttons 8 black/silver L 88mm W 83mm	—


Magister



1 2

fig.	Part No.	description	Ref. No.
1	528764	keypad unit coffee machine M5/ES/40/45 buttons 3 L 88mm W 37mm	180170
2	528725	keypad unit coffee machine F2006/Kappa/Leva/Stilo buttons 6 L 88mm W 60mm	180095

Pizza-Group



1

fig.	Part No.	description	Ref. No.
1	403516	keypad unit dough rolling machine cable length 330mm L 76mm W 20mm	A88CY78002

QualityEspresso



1

fig.	Part No.	description	Ref. No.
1	402380	keypad unit coffee machine Arienne/Arieta 1-2-3-4 gr. buttons 5 L 110mm	08109400

Rancilio



1

fig.	Part No.	description	Ref. No.
1	402428	push switch coffee machine EPOCA CD type L42A8 250V 2NO L 110mm W 55mm	10111036

Reneka



1

fig.	Part No.	description	Ref. No.
1	402444	keypad unit buttons 5 chrome-plated set	9213707


Rosinox



1

fig.	Part No.	description	Ref. No.
1	402913	keypad unit dishwasher 37E/80E/81E/18ER/19E buttons 6 suitable for Dühr L 145mm W 90mm	RX94814041

Royal




1 2

fig.	Part No.	description	Ref. No.
1	402236	keypad unit coffee machine Antea/Classica/Diadema/grandog/Tedide buttons 5	5031015
2	402237	keypad unit coffee machine Classica/Diadema 2-3-4 gr. buttons 2 L 88mm W 60mm	5031210



			
3	4		
fig.	Part No.	description	Ref. No.
3	402258	keypad unit espresso machine DeLux/Imola/Marenello/Monza 2-3-4 gr. buttons 6	5031305
4	402257	keypad unit espresso machine Lira 1-2-3-4 gr. buttons 6 L 135 mm W 44 mm	5031280

Sirman



			
1	2		
fig.	Part No.	description	Ref. No.
1	403001	keypad unit bone saw SO1650/SO2020 L 120mm W 49mm with cable	LF1010027
2	401735	keypad unit meat mincer TC12 buttons 3 cable length 90mm L 130mm W 41mm	LF1033021



			
3	4		
fig.	Part No.	description	Ref. No.
3	401378	keypad unit meat mincer TC12 edition since year of construction L 130mm W 41mm	IV5940515T
4	403002	keypad unit slicer buttons 2 MIRRA/SAN-DANIELE/YORK L 120mm W 48mm	19702000

			
5	6		
fig.	Part No.	description	Ref. No.
5	403006	keypad unit slicer BAYONNE/CANOVA buttons 2 L 130mm W 41mm	19702034
6	401694	keypad unit slicer BAYONNE/CICLONE/SAN-DANIELE buttons 2 L 130mm W 41mm	19702004

			
7			
fig.	Part No.	description	Ref. No.
7	403003	keypad unit slicer GEMMA 300/350 buttons 2 L 150mm W 55mm	19702002

WEGA

			
1	2		
fig.	Part No.	description	Ref. No.
1	400354	keypad unit coffee machine AIRY/ATLAS/COMBI NOVA/JUNIOR buttons 5	WY18362
2	400795	keypad unit coffee machine Atlas/OrionEco/EPU1PG buttons 5 L 89mm W 42mm	WY18371049



			
3	4		
fig.	Part No.	description	Ref. No.
3	527776	keypad unit coffee machine Gloria buttons 7 L 136mm W 45mm	WY83180011R
4	400789	keypad unit coffee machine/espresso maker MININOVA/EPUMINIV buttons 5 L 66mm W 43mm	WY18371027


control panel

Comenda

			
1			
fig.	Part No.	description	Ref. No.
1	510253	switch panel dishwasher L 592mm W 75mm white	460850

 Cookmax

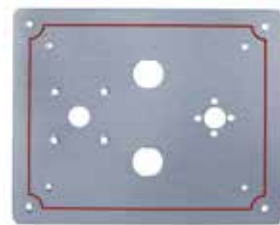			
1	2		
fig.	Part No.	description	Ref. No.
1	697351	switch panel dough mixers TF17/22/30 TR17/22/30 L 200mm W 160mm	—
2	692068	switch panel vacuum packing machine JUMBO Combivac L 258mm W 55mm thickness 2,3mm	0600020

			
3			
fig.	Part No.	description	Ref. No.
3	692069	switch panel vacuum packing machine JUMBO L 288mm W 88mm thickness 20mm digital	0600011



Electrolux



fig.	Part No.	description	Ref. No.
1	694677	front panel dishwasher L 201mm W 3,3mm H 85mm W2 13mm	047479
2	347550	switch panel fridge L 168mm W 37mm black with switch ON-OFF	099278



fig.	Part No.	description	Ref. No.
3	504717	switch panel warewashing	048827

Elframo



fig.	Part No.	description	Ref. No.
1	109182	control panel fryer GW ELT/GWD ELT W 223 mm H 70 mm D 20 mm	00038675
2	403262	control panel warewashing BE35 W 178 mm H 48 mm D 58 mm suitable for ELFRAMO	00222433

Expobar



fig.	Part No.	description	Ref. No.
1	529944	bezel coffee machine MARKUS L 102mm W 40mm black plastic suitable for 1d5	60102006

Henkelman



fig.	Part No.	description	Ref. No.
1	692142	housing vacuum packing machine	0330120
2	692068	switch panel vacuum packing machine JUMBO Combivac L 258mm W 55mm thickness 2,3mm	0600020



fig.	Part No.	description	Ref. No.
3	692069	switch panel vacuum packing machine JUMBO L 288mm W 88mm thickness 20mm digital	0600011



fig.	Part No.	description	Ref. No.
4	692168	switch panel vacuum packing machine JUMBO L 289mm W 91mm thickness 20mm suitable for JUMBO	0900100



fig.	Part No.	description	Ref. No.
5	692175	front panel vacuum packing machine JUMBO L 293mm W 91mm thickness 34mm analogue	0330124

Horeca-Select



fig.	Part No.	description	Ref. No.
1	403160	control panel induction device GIC3535 W 300 mm mounting pos. right H 58 mm	GIC3535-D20

Komel



fig.	Part No.	description	Ref. No.
1	109182	control panel fryer GW ELT/GWD ELT W 223 mm H 70 mm D 20 mm	00038675
2	403262	control panel warewashing BE35 W 178 mm H 48 mm D 58 mm suitable for ELFRAMO	—

La San Marco



fig.	Part No.	description	Ref. No.
1	526933	control panel coffee machine	106128
2	526936	control panel coffee machine coffee/STOP	106119
3	526937	control panel coffee machine for steam/water pipes	106117



fig.	Part No.	description	Ref. No.
4	526938	control panel coffee machine for steam/water pipes	106118
5	526934	control panel coffee machine for switch	106129
6	526935	control panel coffee machine L 110 mm H 100 mm coffee buttons 7	106120

Mach

fig.	Part No.	description	Ref. No.
1	504338	switch panel MS/450 and MS/700 L 595 mm W 65 mm edition until year of construction 05/1995	600064500

Omniwash

fig.	Part No.	description	Ref. No.
1	502253	control panel warewashing L 310 mm W 133 mm H 7 mm black	CEPC6214P1 CEPC6214P105


Pizza-Group

fig.	Part No.	description	Ref. No.
1	697351	switch panel dough mixers TF17/22/30 TR17/22/30 L 200mm W 160mm	A96ZC00009

Zanussi

fig.	Part No.	description	Ref. No.
1	504717	switch panel warewashing	048827

 GASTROPARTS.COM

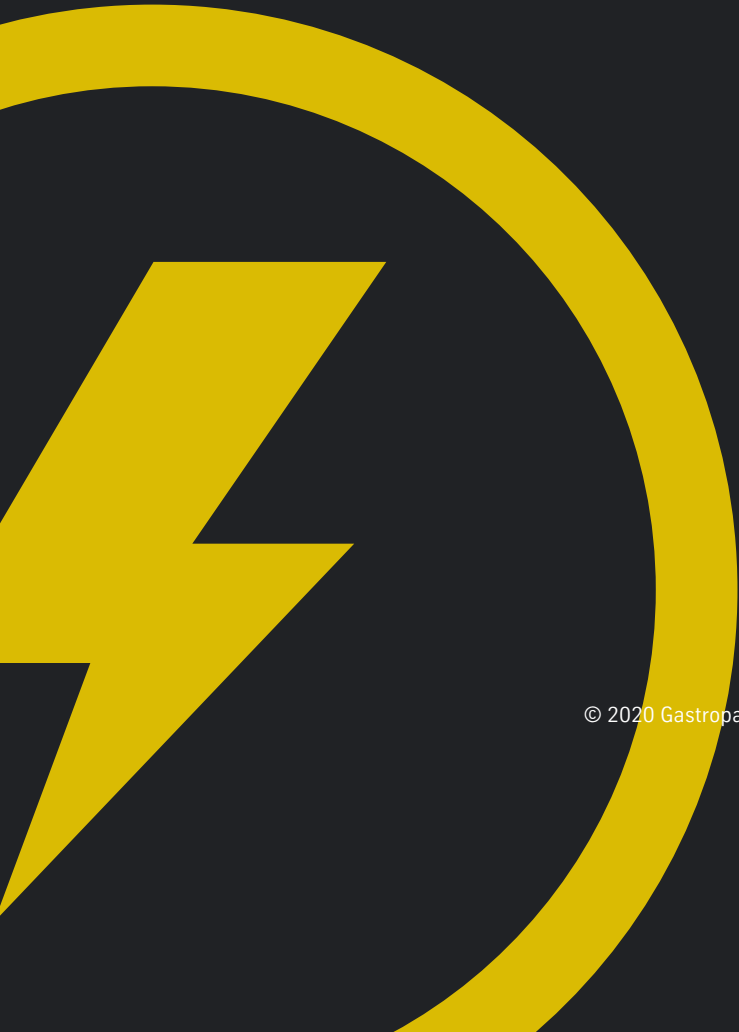

© 2020 Gastroparts Sp. J. All rights reserved.